

[Manuals.plus](#) /

› [Intel](#) /

› Intel Core i5-14400 Processor User Manual

Intel i5-14400

Intel Core i5-14400 Processor User Manual

Model: i5-14400

PRODUCT OVERVIEW

The Intel Core i5-14400 processor is a 14th Generation CPU designed for desktop systems. It features 10 cores and 16 threads, with a base clock speed of 2.5 GHz and a maximum turbo frequency of up to 4.7 GHz. This processor is built on the LGA1700 socket and includes 20MB of Intel Smart Cache, making it suitable for a range of computing tasks from everyday use to gaming and content creation.



Image: The retail packaging for the Intel Core i5-14400 processor, featuring the Intel Core branding and indicating '14th Gen'.

SETUP AND INSTALLATION

Before You Begin

Ensure you have the following components and have taken necessary precautions:

- Compatible LGA1700 motherboard (Intel 600 or 700 series chipset).

- Adequate CPU cooling solution (heatsink and fan or liquid cooler).
- Thermal paste.
- Anti-static wrist strap or take anti-static precautions.
- Clean, well-lit workspace.

Installation Steps


1. **Prepare the Motherboard:** Ensure the motherboard is installed in the PC case and the CPU socket lever is open.
2. **Unpack the Processor:** Carefully remove the Intel Core i5-14400 processor from its packaging, holding it by the edges to avoid touching the gold contacts or the integrated heat spreader (IHS).
3. **Align the Processor:** Locate the two alignment notches on the processor and match them with the corresponding keys on the LGA1700 socket. The triangular marker on the processor should align with the marker on the socket.
4. **Place the Processor:** Gently lower the processor straight down into the socket. Do not force it. If it does not seat easily, re-check alignment.
5. **Secure the Processor:** Close the load plate and push down the socket lever until it clicks into place. This will secure the processor.
6. **Apply Thermal Paste:** Apply a small amount of thermal paste (pea-sized dot) to the center of the processor's IHS.
7. **Install CPU Cooler:** Mount your chosen CPU cooling solution according to its manufacturer's instructions, ensuring even pressure and good contact with the IHS. Connect the cooler's fan cable to the CPU_FAN header on the motherboard.



Processeurs Intel® Core™ pour PC de bureau

Des performances exceptionnelles pour donner vie à toutes vos passions

- Multitâche amélioré
- Streaming HD fluide
- Création puissante

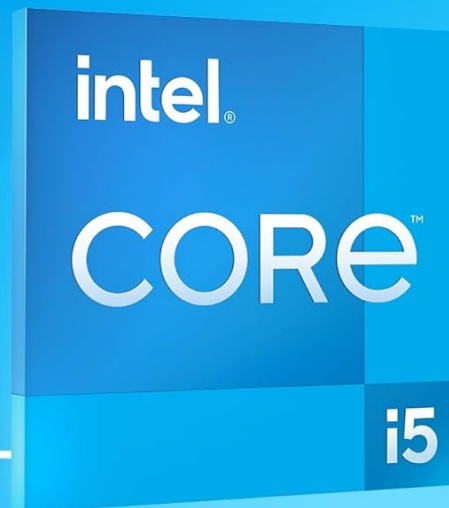

Processeurs Intel® Core™ pour PC de bureau (14^e génération). Les résultats effectifs peuvent varier. © Intel Corporation.

Image: The Intel Core i5-14400 processor box opened, showing the processor and included stock cooler.

OPERATING GUIDELINES

Once installed, the Intel Core i5-14400 processor operates automatically within your system. Its performance scales based on workload, utilizing Intel Turbo Boost Technology to increase clock speeds up to 4.7 GHz when thermal and power conditions allow. The processor also supports various power-saving states to optimize energy consumption when idle or under light loads.

System Requirements

- Motherboard with LGA1700 socket (Intel 600 Series or 700 Series Chipset recommended).
- DDR4 or DDR5 RAM (as supported by your motherboard).
- Compatible power supply unit (PSU).
- Operating system (Windows 10/11 64-bit recommended).

MAINTENANCE

Proper maintenance ensures optimal performance and longevity of your Intel Core i5-14400 processor. The primary focus of maintenance is on the cooling system.

- **Thermal Paste Application:** Thermal paste should be applied correctly during installation. Reapplication may be necessary if the cooler is removed or if temperatures become consistently high.
- **Cooling System Maintenance:** Regularly inspect and clean your CPU cooler's fan and heatsink fins to prevent dust buildup, which can impede airflow and lead to higher temperatures. Use compressed air to gently clear dust. Ensure fan cables are securely connected.

TROUBLESHOOTING

This section provides solutions to common issues you might encounter with your Intel Core i5-14400 processor.

Problem	Possible Cause	Solution
System does not boot / No display	Processor not seated correctly	Re-seat the processor, ensuring alignment and lever are locked.
High CPU temperatures	Insufficient cooling, poor thermal paste application, dust buildup	Verify cooler installation, reapply thermal paste, clean heatsink/fan.
System instability / Crashes	Overheating, incompatible components, BIOS settings	Check temperatures, update motherboard BIOS, ensure RAM compatibility.
Processor not recognized	Outdated motherboard BIOS	Update motherboard BIOS to the latest version that supports 14th Gen Intel CPUs.

SPECIFICATIONS

Key technical specifications for the Intel Core i5-14400 Processor.

Feature	Detail
Processor Model	Intel Core i5-14400
Cores / Threads	10 Cores / 16 Threads
Base Clock Speed	2.5 GHz

Feature	Detail
Max Turbo Frequency	Up to 4.7 GHz
Intel Smart Cache	20 MB
Socket Type	LGA1700
Integrated Graphics	Intel UHD Graphics 730
Memory Support	DDR4 and DDR5 (Motherboard dependent)
PCIe Support	PCIe 5.0 and 4.0

WARRANTY AND SUPPORT

Intel processors typically come with a limited warranty. For specific warranty terms, duration, and conditions, please refer to the official Intel website or the documentation included with your processor packaging.

For technical assistance, driver downloads, software updates, and additional support resources, visit the official Intel Support website: www.intel.com/support.