


GE-632

Pro'sKit®

# 液壓機器手臂

## *Hydraulic Robot Arm*

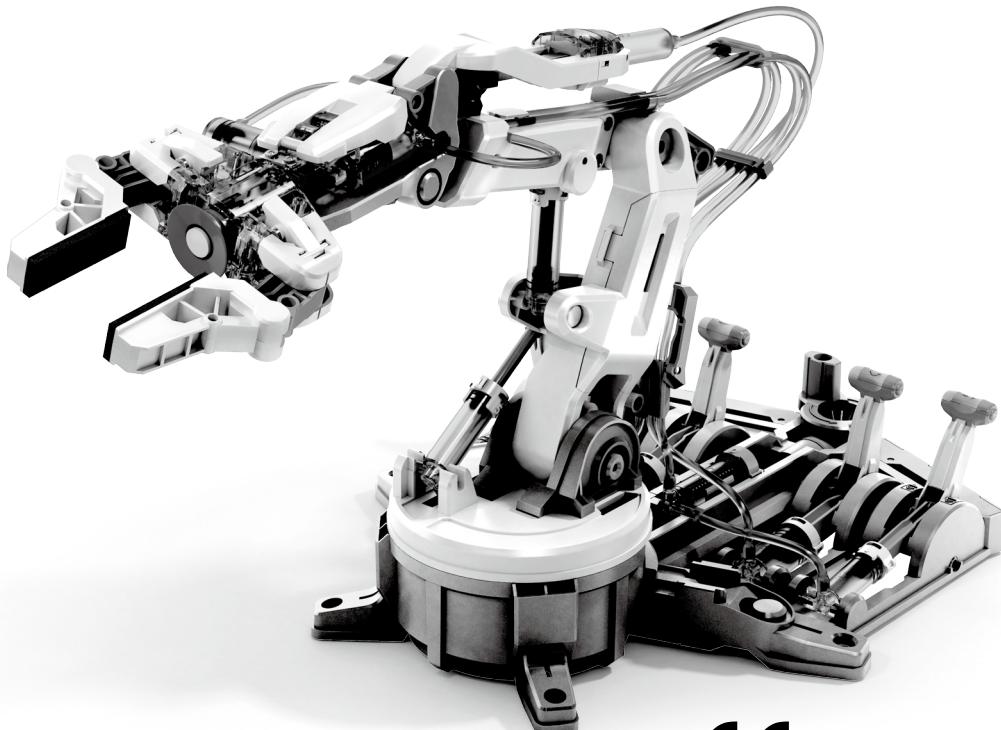

CE

Assembly & Instruction  
**Manual**  
組裝說明手冊

## 產品介紹 Product Introduction

歡迎購買寶工GE-632液壓機器手臂。這是一款使用液壓方式操作的玩具，六軸設計液壓手臂可做出多種動作：前端夾具可進行開闔動作，最大開口約4.6cm，可旋轉180°，手腕可上下移動98°，肘部上下移動44°，肩部上下移動45°，底座可左右旋轉270°，手臂可上舉的最大高度約42cm，水平伸展約32cm，可夾舉重量為50g。卸下夾具後，還可使用吸盤裝置，吸盤設計不受物體大小限制，可吸取面積更大的物體。本產品由229個零件組成，組裝說明沒有多餘的文字敘述，詳細的圖示就可輕鬆組裝，同時可了解液壓原理，組裝後可實際操作應用，透過操縱桿使六軸動作配合無間，訓練手眼協調。不須電池、不須馬達、水就可驅動一切，歡迎工程系列愛好者挑戰本進階模型。推薦10歲以上兒童可嘗試獨立組裝，父母在旁陪伴，兒童可從中得到自我滿足的成就感，同時快樂的享受親子共遊的樂趣。

With Hydraulic Arm Edge, command six axes of varied movements: the gripper to open and close up to 1.89 inches, wrist rotation of 180 degrees, wrist mobility of 98 degrees, elbow range of 44 degrees, base rotation of 270 degrees, and shoulder motion of 45 degrees. With a vertical reach of 16.35 inches, horizontal reach of 12.42 inches, and lifting capacity of 50g, your robotic friend is ready for your genius to erupt. With the removal of the gripper, you can activate the suction apparatus. This feature enables the user to elevate objects with a larger surface area (like a small mobile phone). Another prodigious attribution is a braking system that is integrated in the lever controllers to execute all commands accurately. WOW!

How does this equate to fun? Your children will have total command and visual manipulation using the science principles of a Hydraulic system and its application. Easy to follow instructions with detailed graphic illustrations pave the way for successful and satisfying kit building. Compliment your engineering, math, science, and technology learning strategy. No battery or motor required. It is powered by water; thus, the "Hydraulic" significance and how it manipulates axes movement via lever controllers. Hydraulic Arm Edge is recommended for ages 10 and up, but with its 229 assembly parts, it will challenge the beginner engineering enthusiasts.



1.本玩具內含小物件，請勿讓三歲以下孩童取得，以免放入口中造成窒息。  
Choking hazard - Small parts. Not for children under 3 years.




2.兒童使用剪切工具時，請家長指導使用方式，並請在家長監督下使用，以免發生意外。  
Adult supervision is recommended when children use scissors.



3.為避免嬰兒或兒童產生窒息的危險，請於拆卸後立即將塑膠袋銷毀或遠離嬰兒及兒童。  
Warning To avoid danger of suffocation, keep the plastic bag away from babies and children.

## 自備工具如下 Tools You May Need

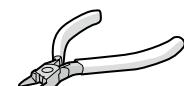

斜口鉗 Diagonal Cutter



十字起子 Screwdriver



剪刀 Scissors




面紙 Tissue Paper



杯子和水 Cup &amp; Water



油性麥克筆(細字) Marker Pen (Fine)

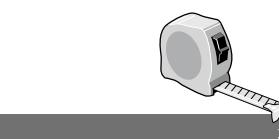

or



捲尺或尺 Tape Measurer or Ruler

## 目次頁

產品介紹 Product Introduction .....	P.1
自備工具 Tools You May Need .....	P.1
零件清單 Mechanical .....	P.2
塑膠模型零件 Plastic Parts .....	P.3
<b>組裝說明 Mechanical Assembly</b>	
夾頭組裝 Gripper Unit Assembly .....	P.6
控制盤組裝 Stand & Control Base Assembly .....	P.7
手臂組裝 Main Body Assembly .....	P.13
液壓油使用說明 How To Oil The Parts .....	P.20
H0~H5液壓筒組裝 H0~H5 Cylinder Assembly .....	P.20
I1~I5液壓筒組裝 I1 ~ I 5 Cylinder Assembly .....	P.26
軟管裁切 How To Cut The Tube .....	P.35
液壓筒填充說明 How To Fill Up The Cylinder With Water .....	P.36
軟管與液壓筒組裝 How To Fit Tube .....	P.37
液壓筒模組組裝 Hydraulic Cylinder Module Assembly .....	P.37
操縱桿組裝 Lever Controller Assembly .....	P.49
控制盤與液壓筒模組組裝 Controller Module Assembly .....	P.51
液壓筒與手臂組裝 Robot Arm Module Assembly .....	P.66
操作方式 How To Play .....	P.76
簡易故障排除 Trouble Shooting .....	P.86

## 零件清單 Mechanical Parts List


! 部分零件含有銳利的邊緣及尖角 Product contains functional edges and sharp points.

P1 華司螺絲(短) Tapping Screw(Short)



9 pcs

P3 鐵塊(短) Iron Bar (Short)

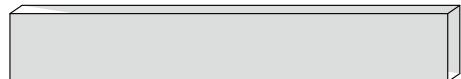

1 pc

P2 自攻螺絲(長) Tapping Screw(Long)



28 pcs

P4 鐵塊(長) Iron Bar (Long)



1 pc

P5 墊片 Brake Pad



10 pcs

P6 活塞帽(小) Cap (Small)




5 pcs

P7 活塞帽(大) Cap (Big)




6 pcs

P8 吸盤 Suction Cup

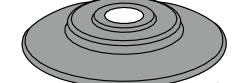

1 pc

P9 泡棉 Sponge

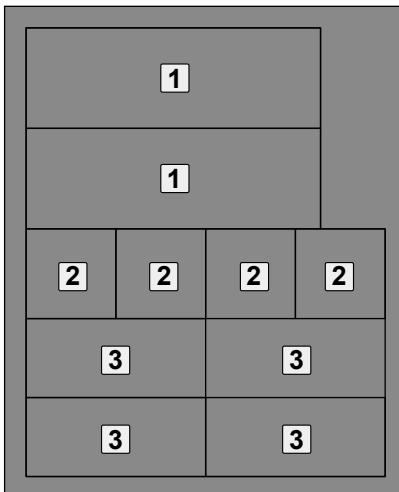

P10 彈簧(小) Spring(Smallest)



5 pcs

P11 彈簧(短) Spring(Short)



1 pc

P12 彈簧(中) Spring(Medium)



1 pc


P13 彈簧(長) Spring(Long)



1 pc

P14

軟管 Soft Tube

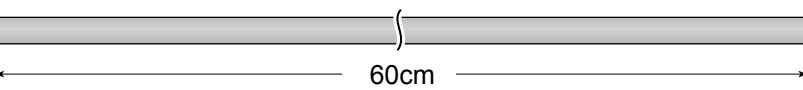

60cm

5 pcs

P15

油包 Oil Bag




安裝軟管時請勿碰觸到油  
Do not touch the oil while fitting the soft tube.


1 pc

## 塑膠模型零件 Plastic Parts


! 請依照組裝步驟將所需的零件剪下，事先全數剪下會在組裝時造成混淆  
Cut the plastic parts when they are required. Do not cut them in advance.

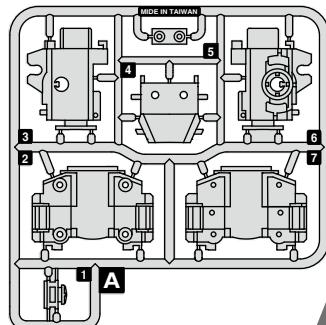


A

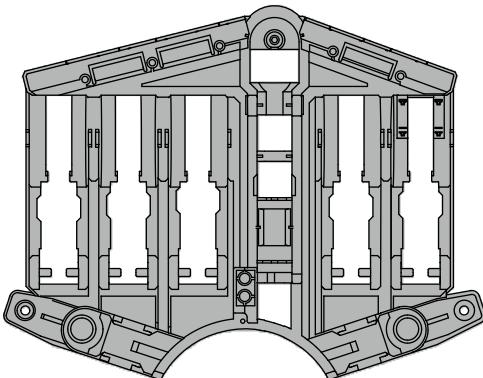


B

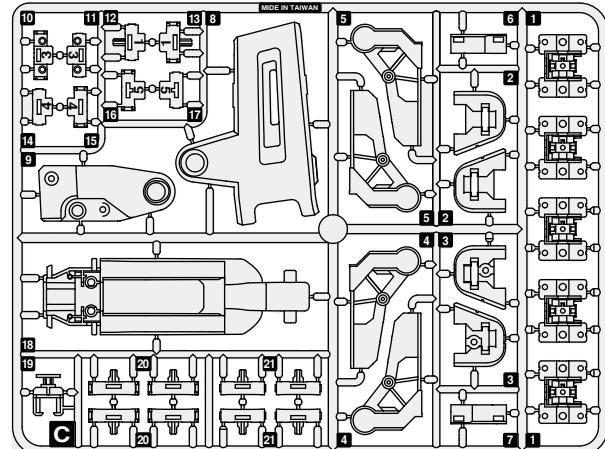


C

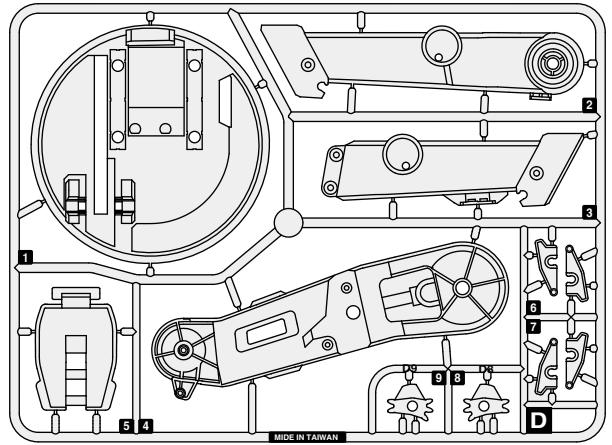


D

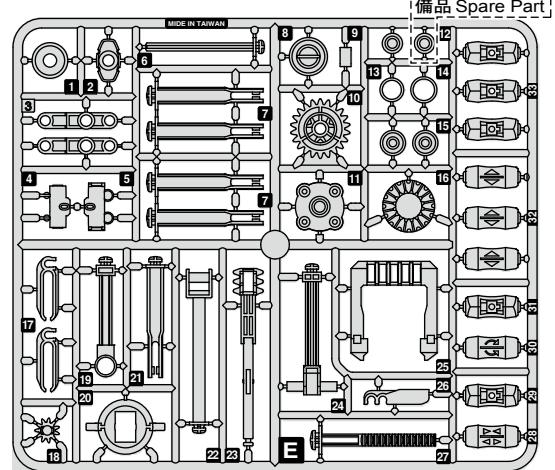


E

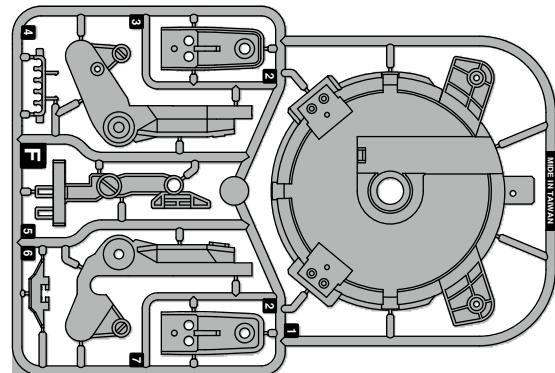


F

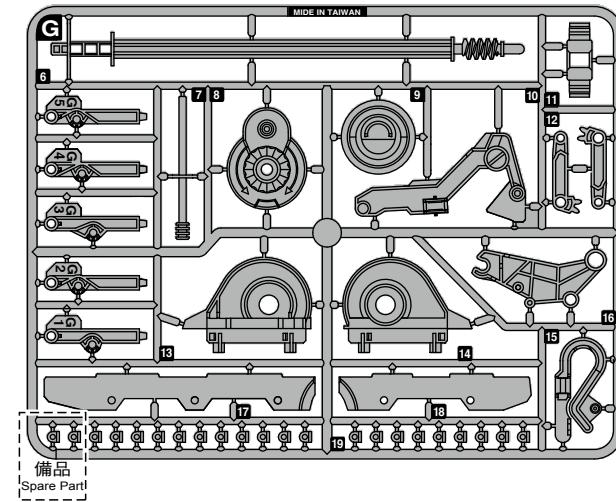

G

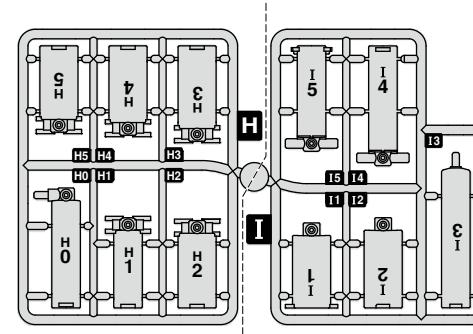


H

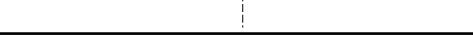


I


**小技巧提醒：零件剪下時請將毛邊剪切乾淨，以免組裝時產生間隙**  
**Tip: Cut off the burrs before assembly**


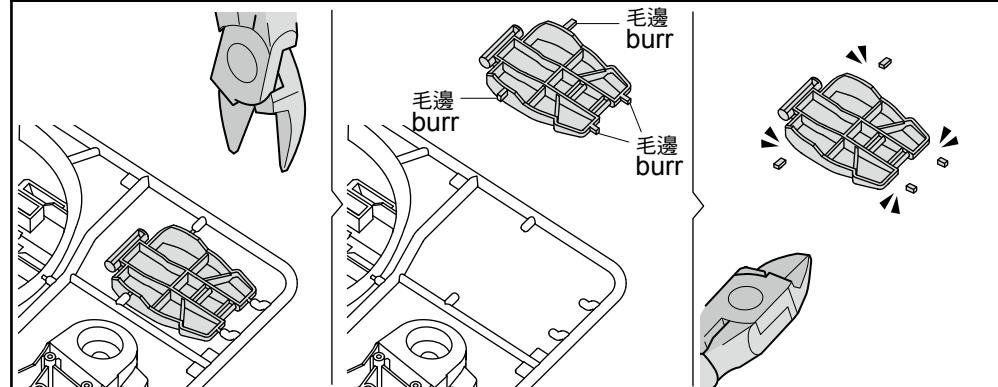


## 夾頭組裝 Gripper Unit Assembly

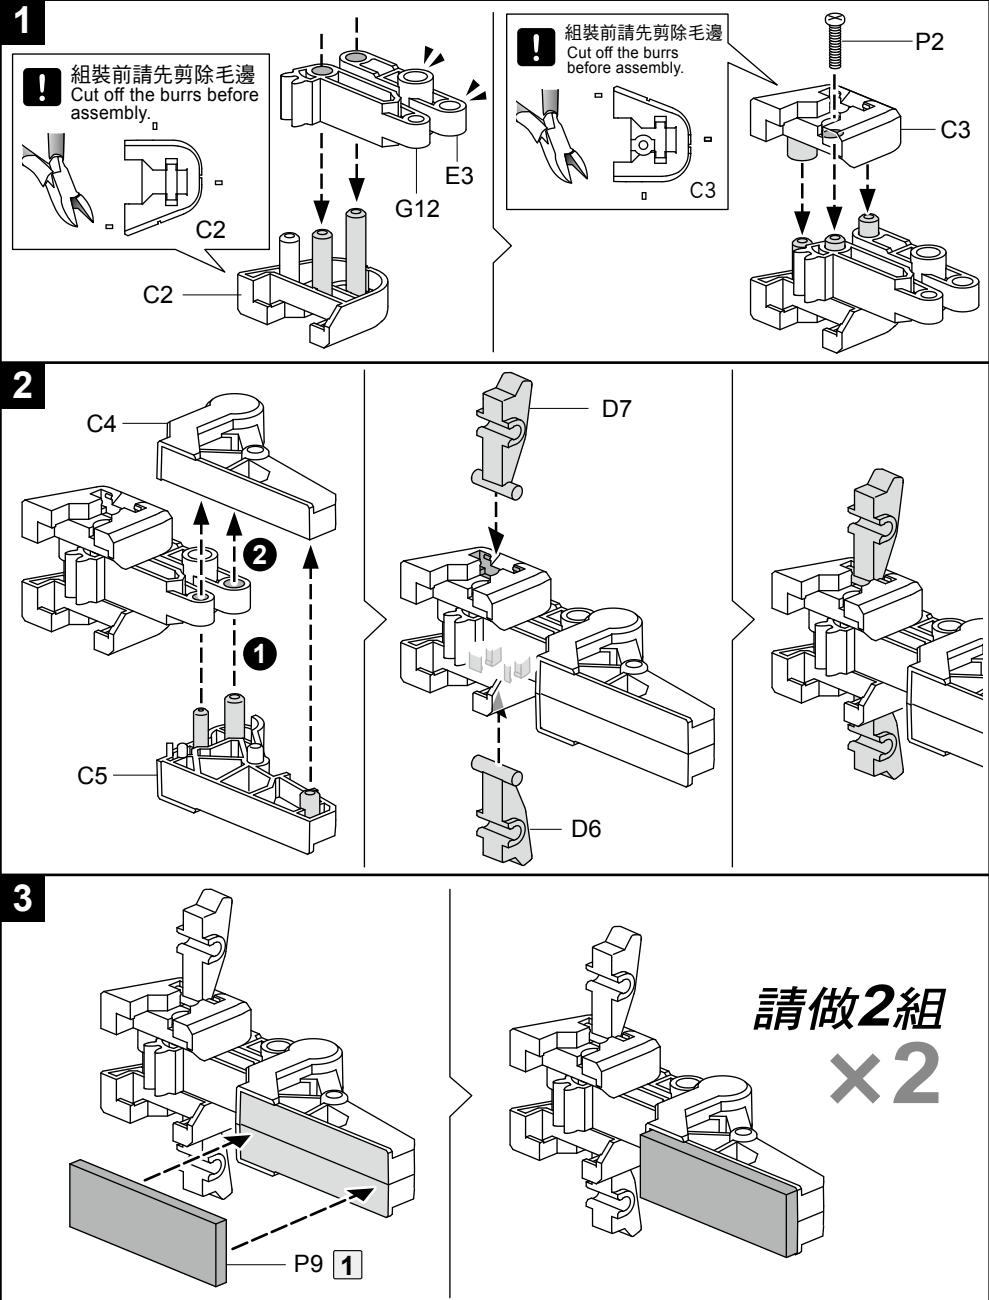


## 控制盤組裝 Stand & Control Base Assembly

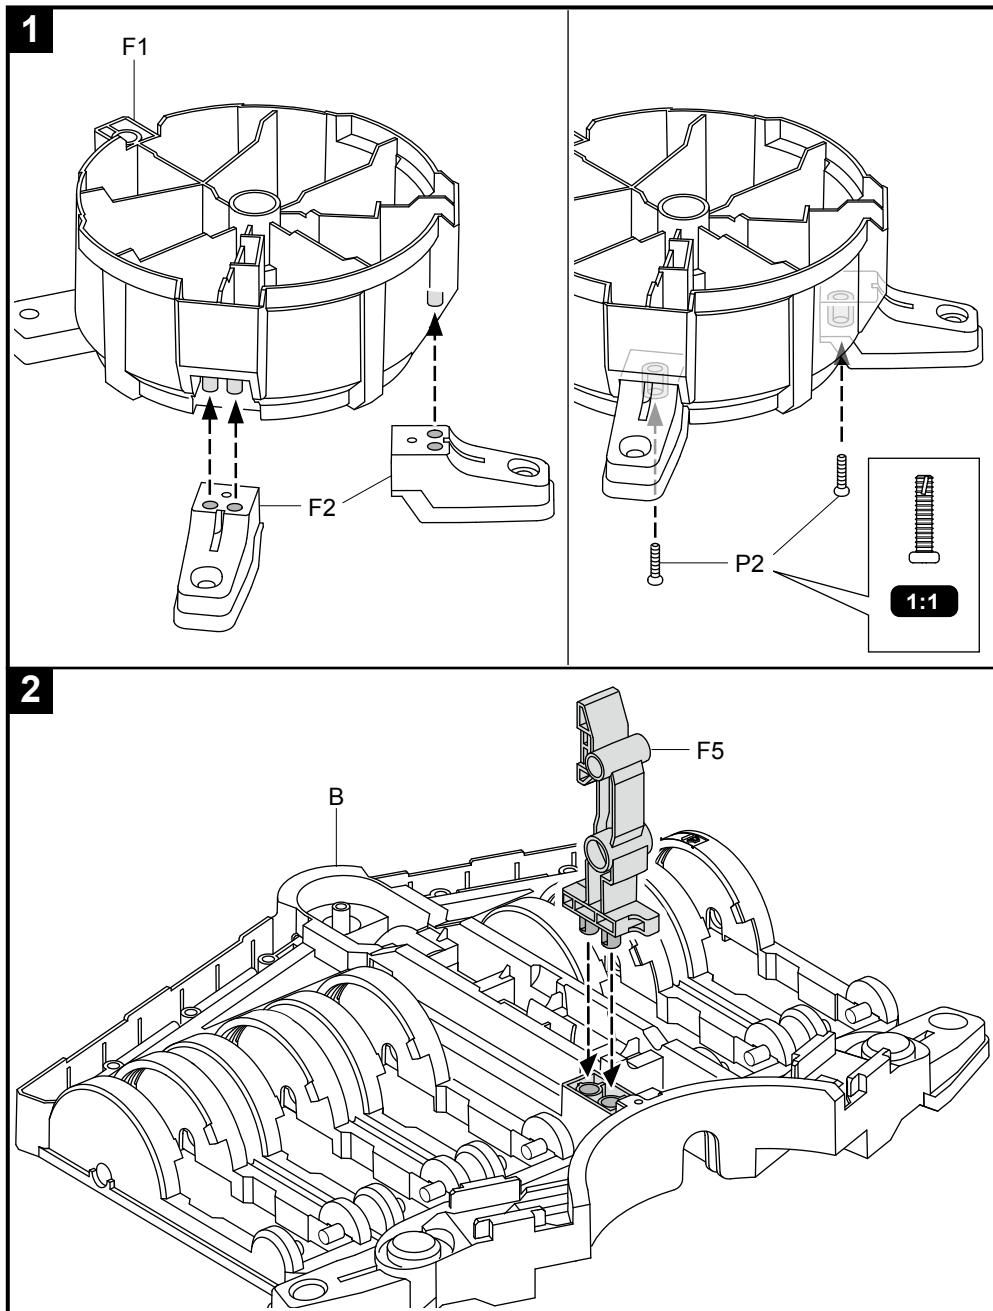


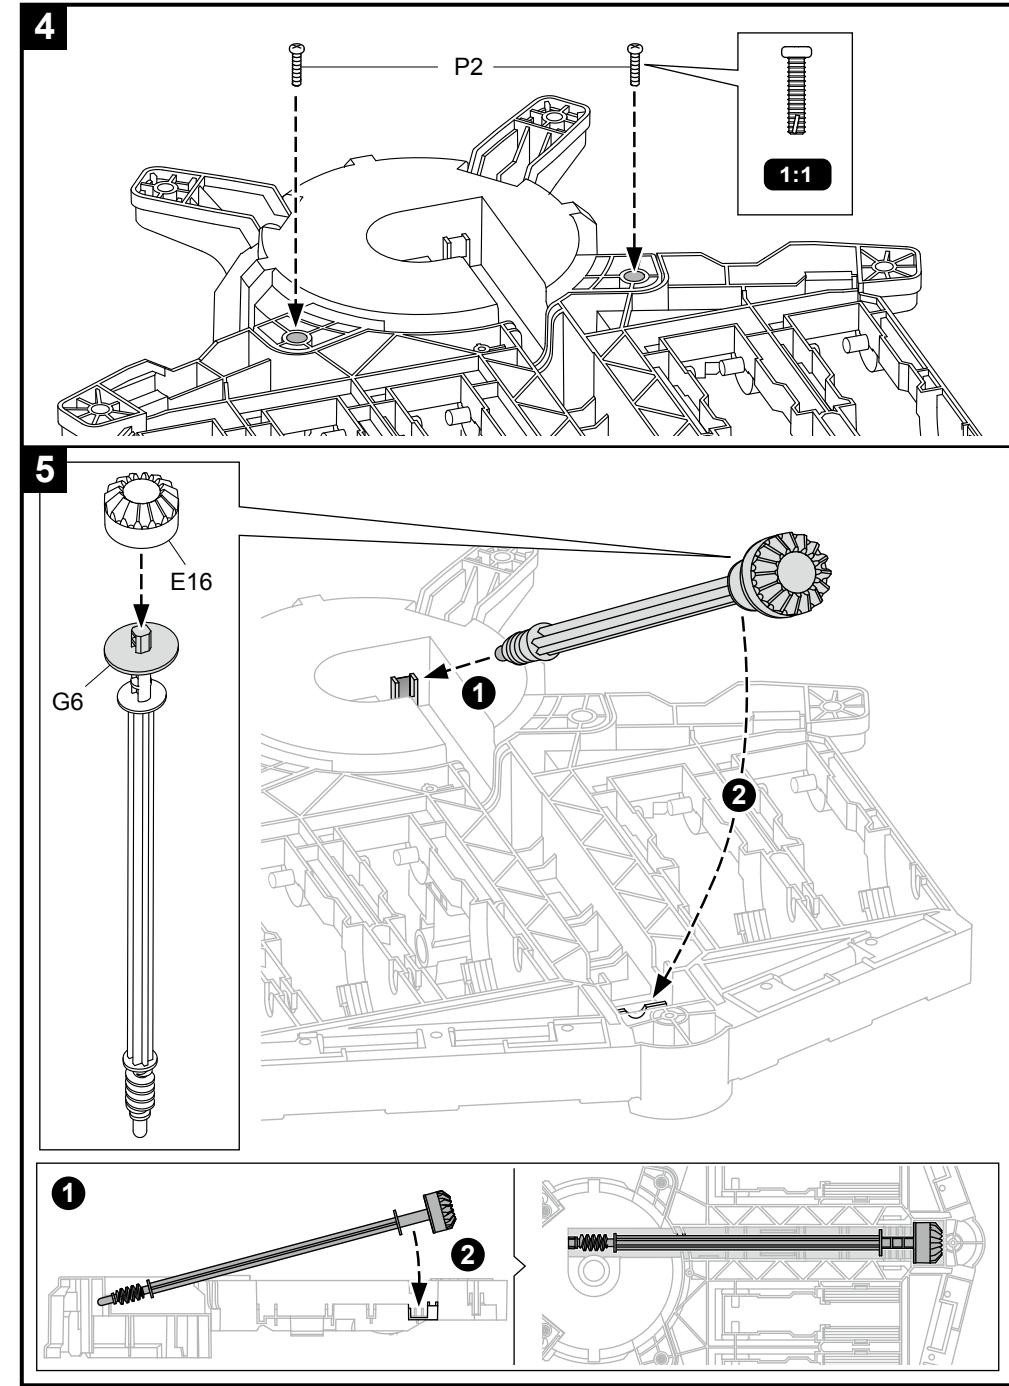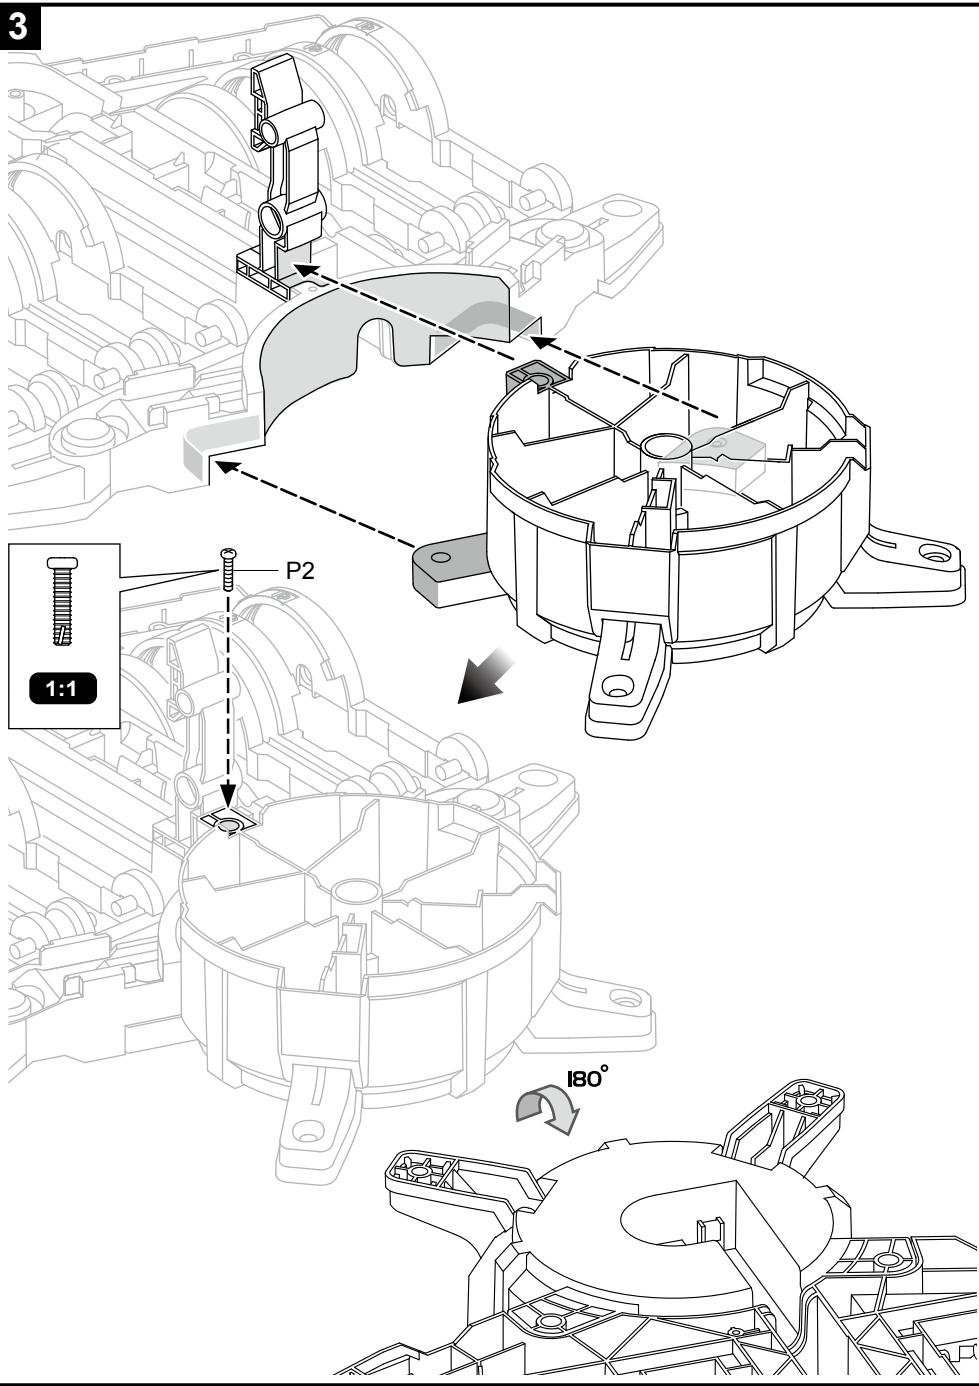


6

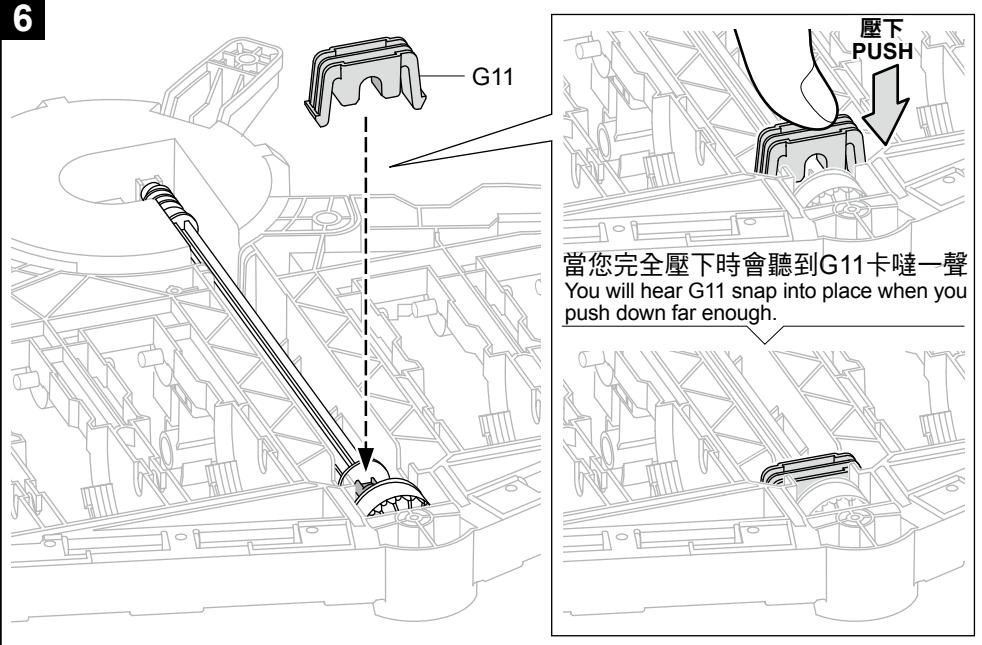


7

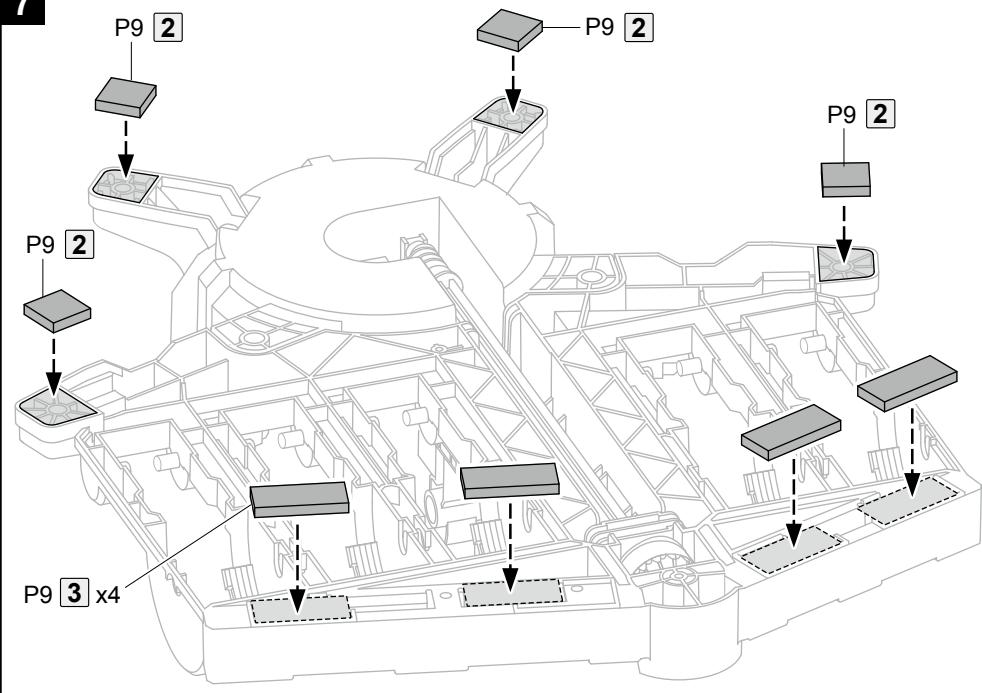



8

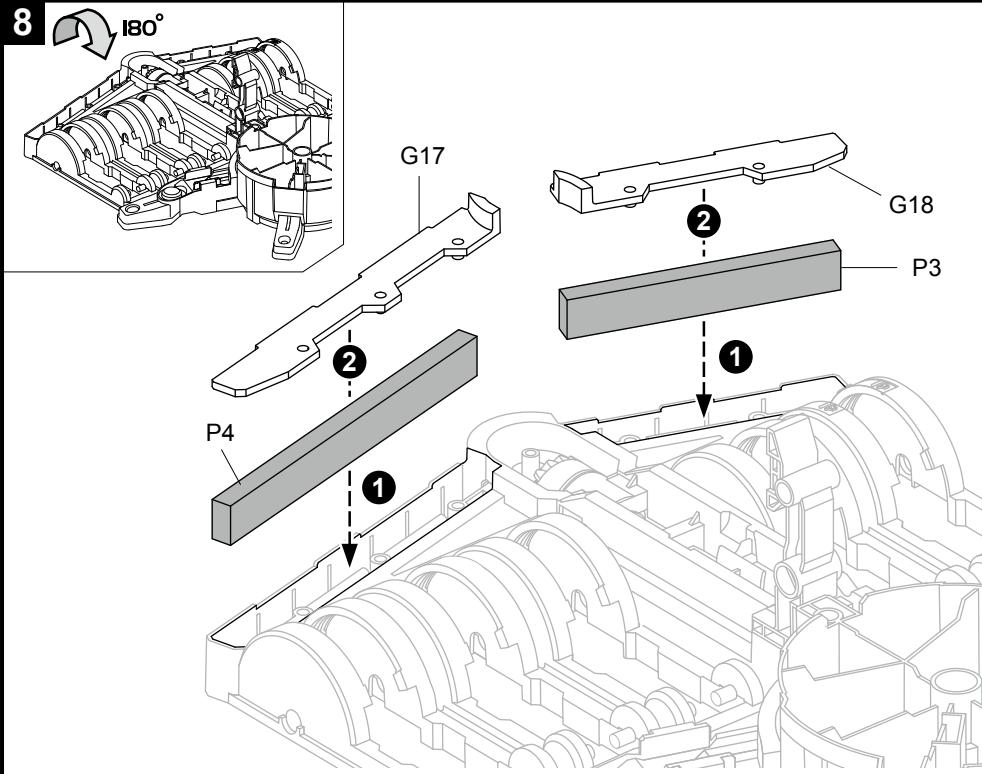

9

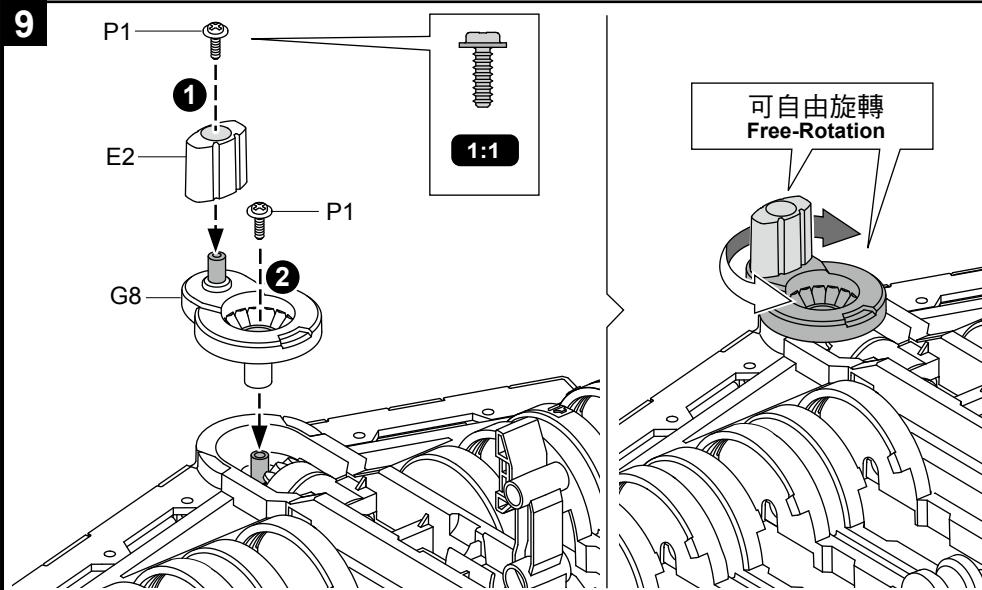


10

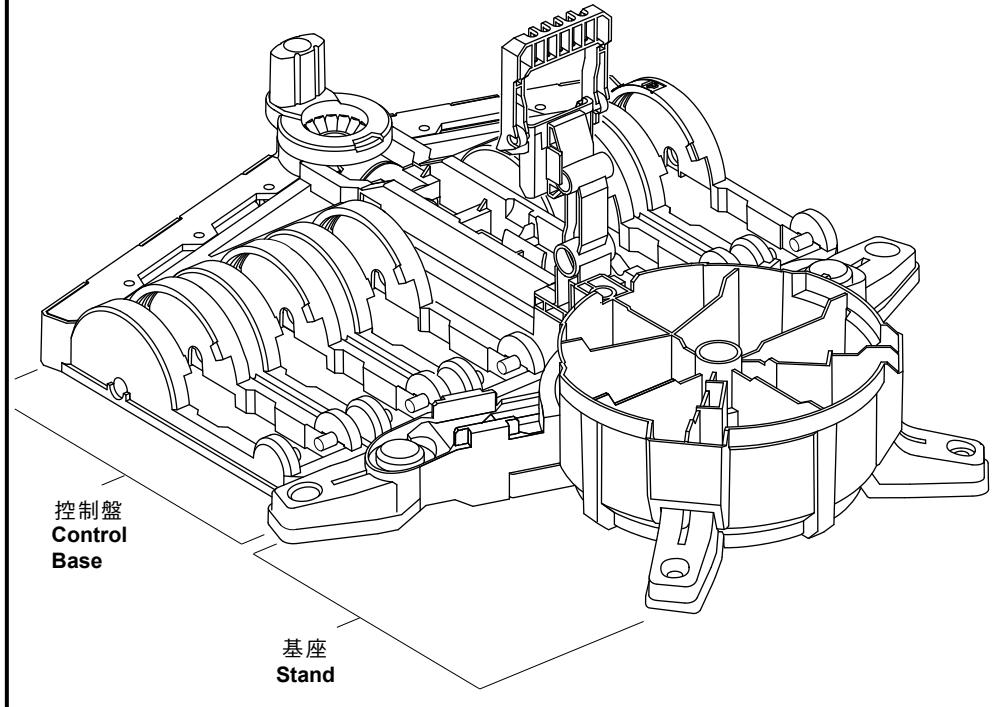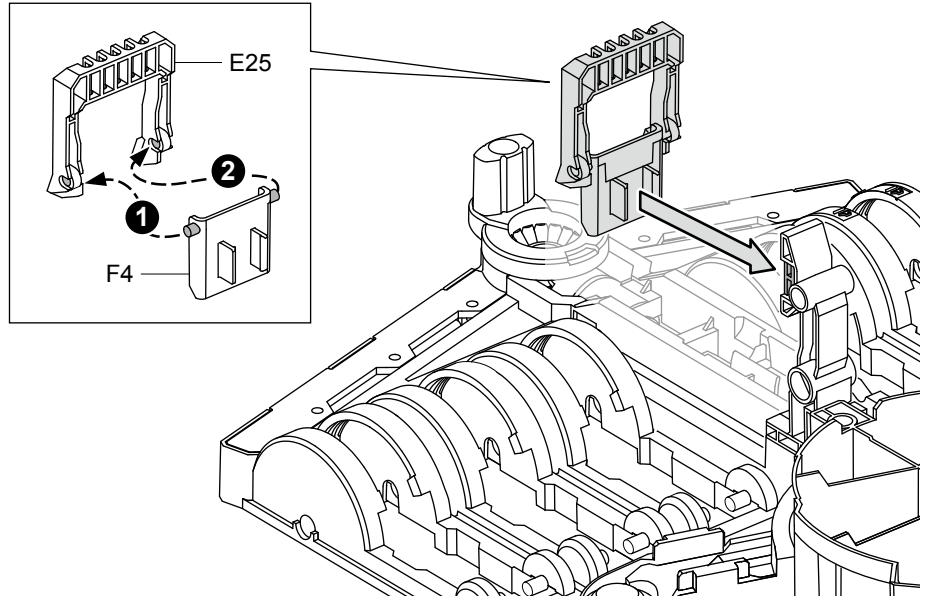


12

## 手臂組裝 Main Body Assembly


1

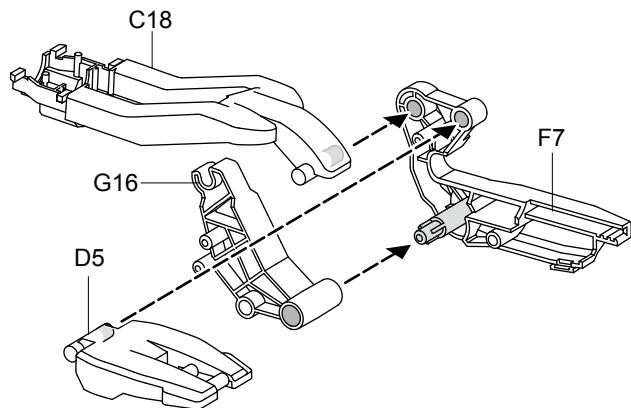





2




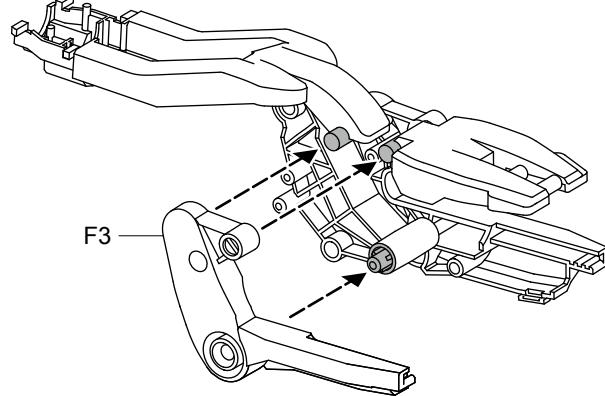





3

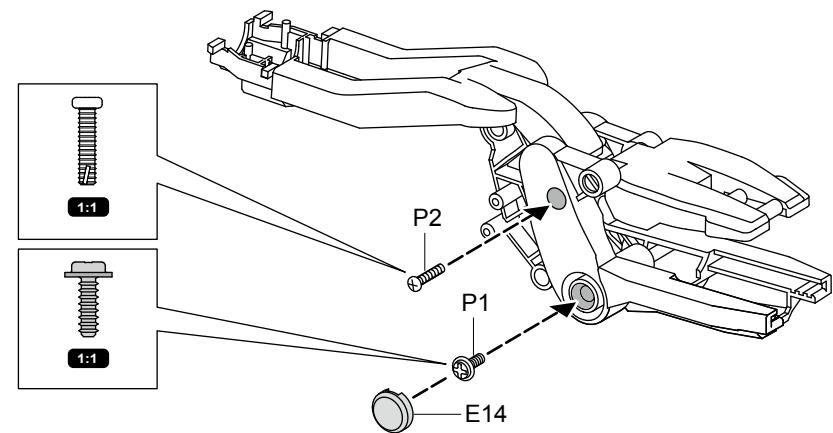

13

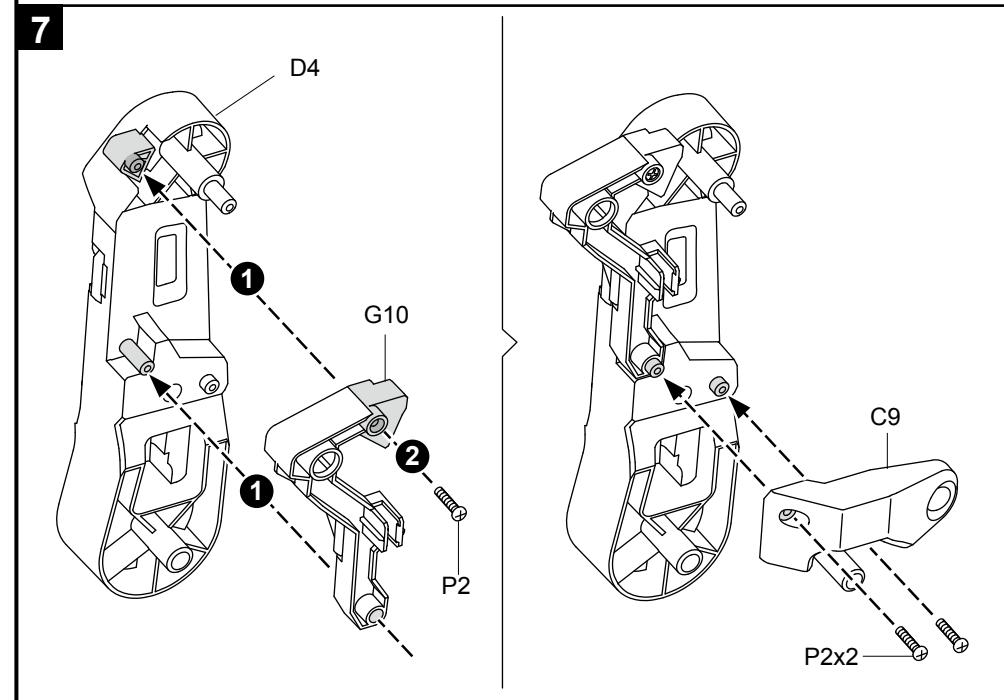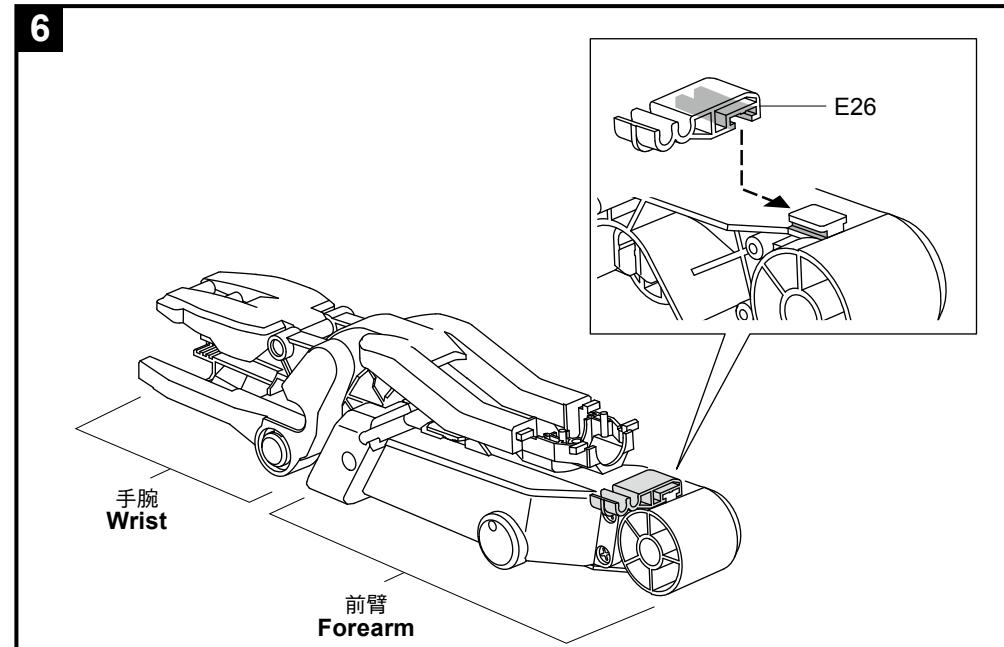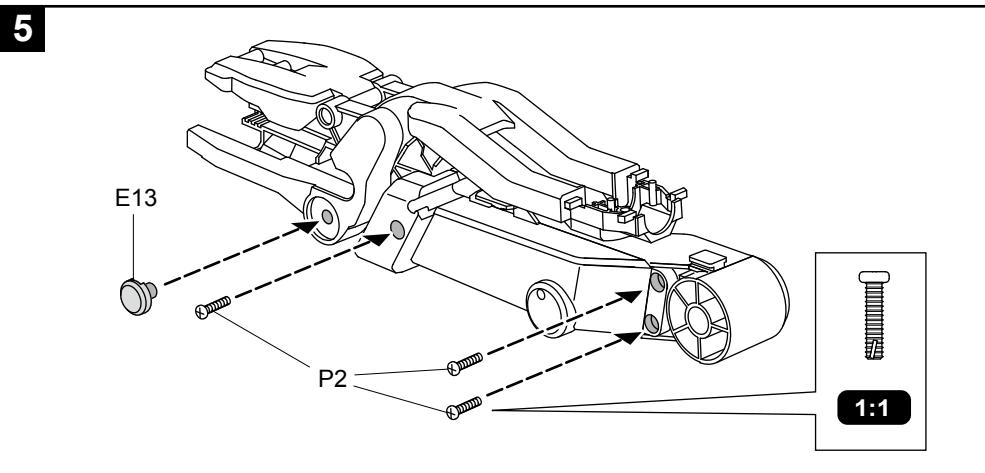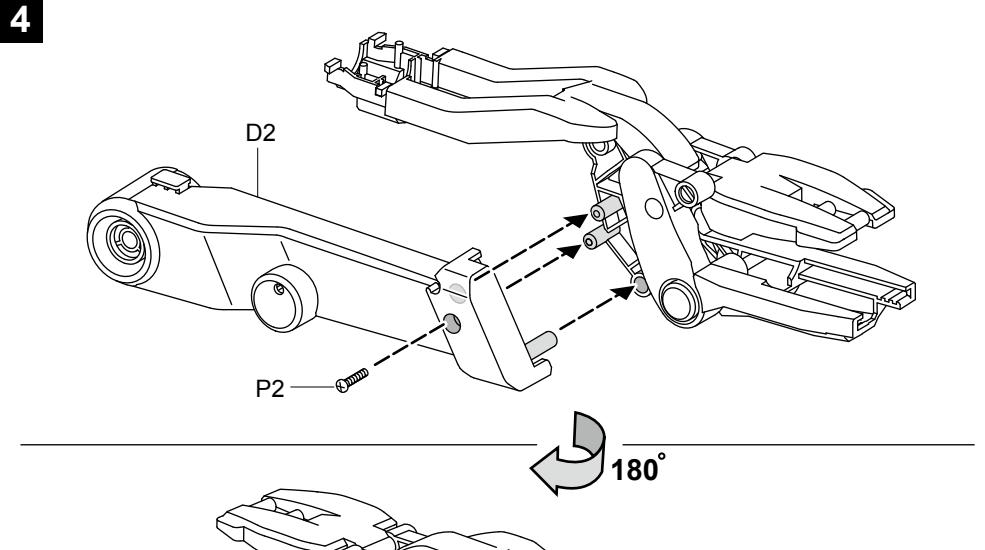


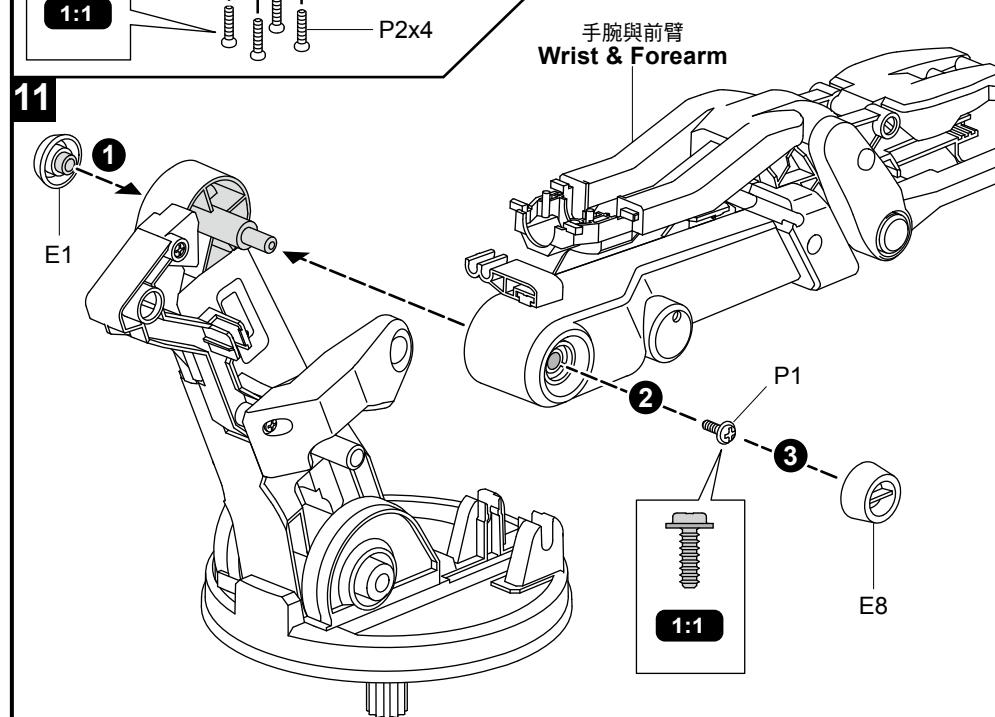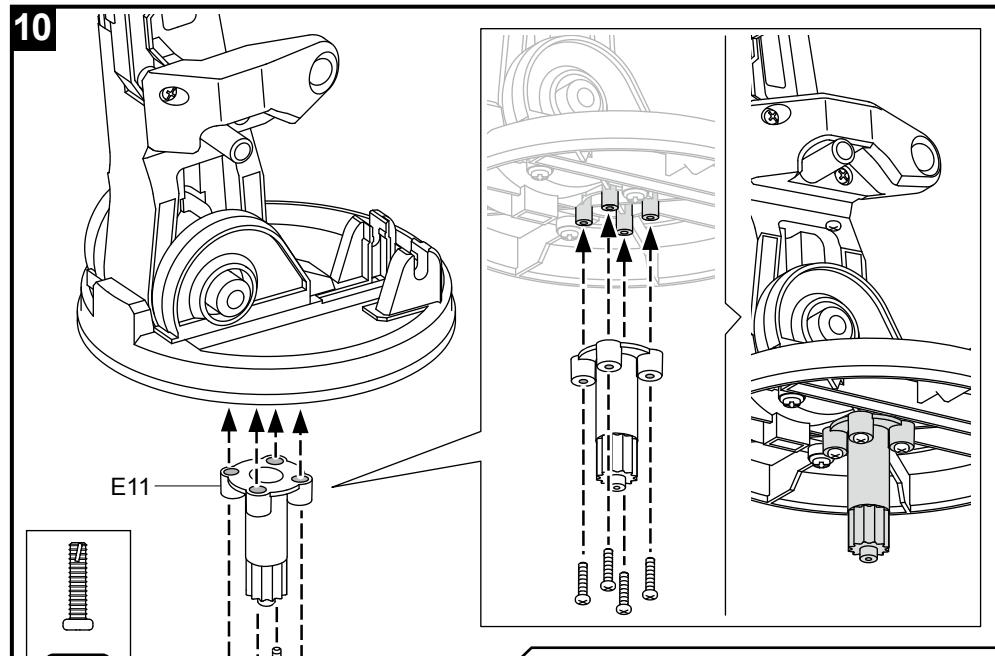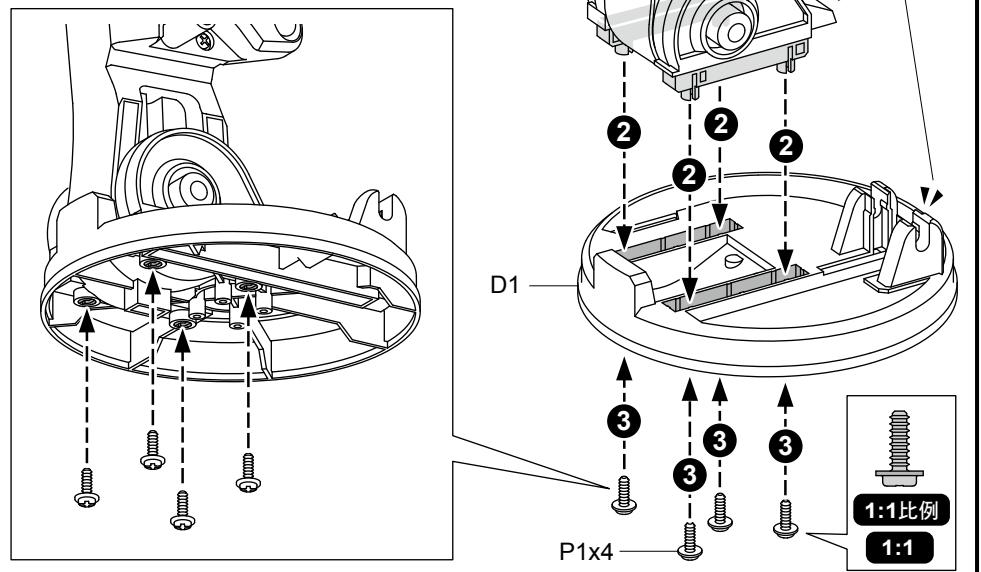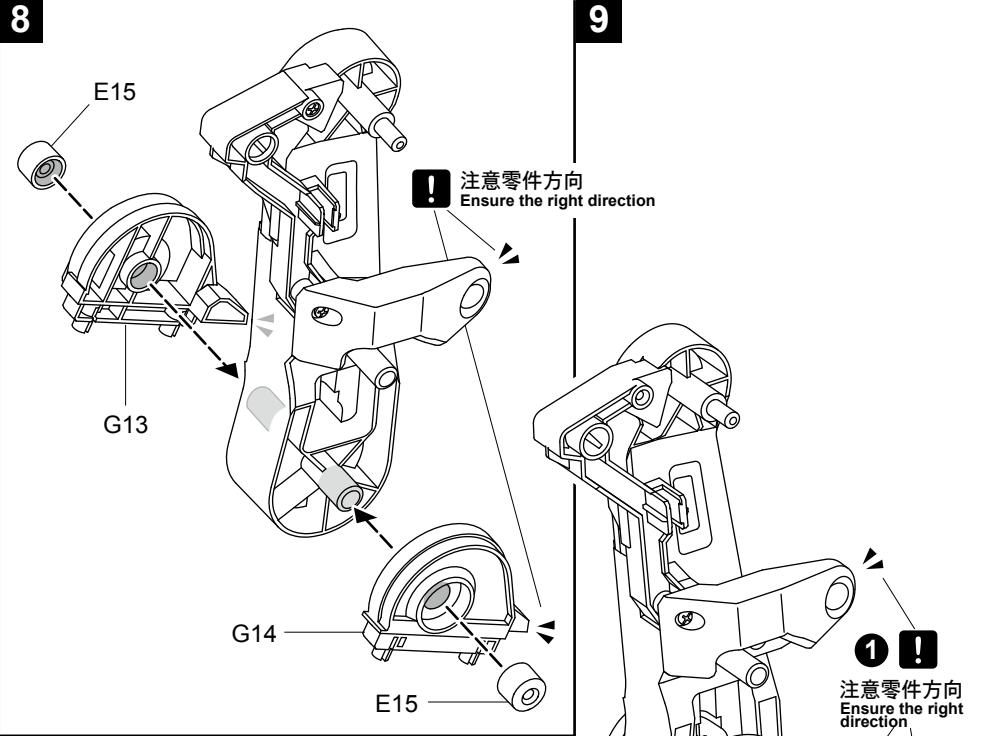

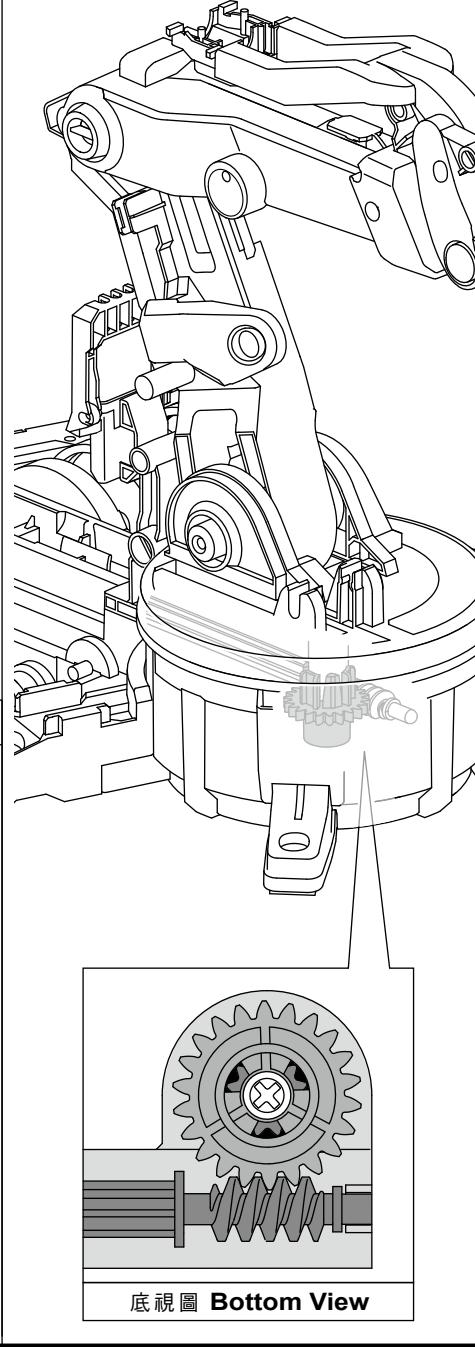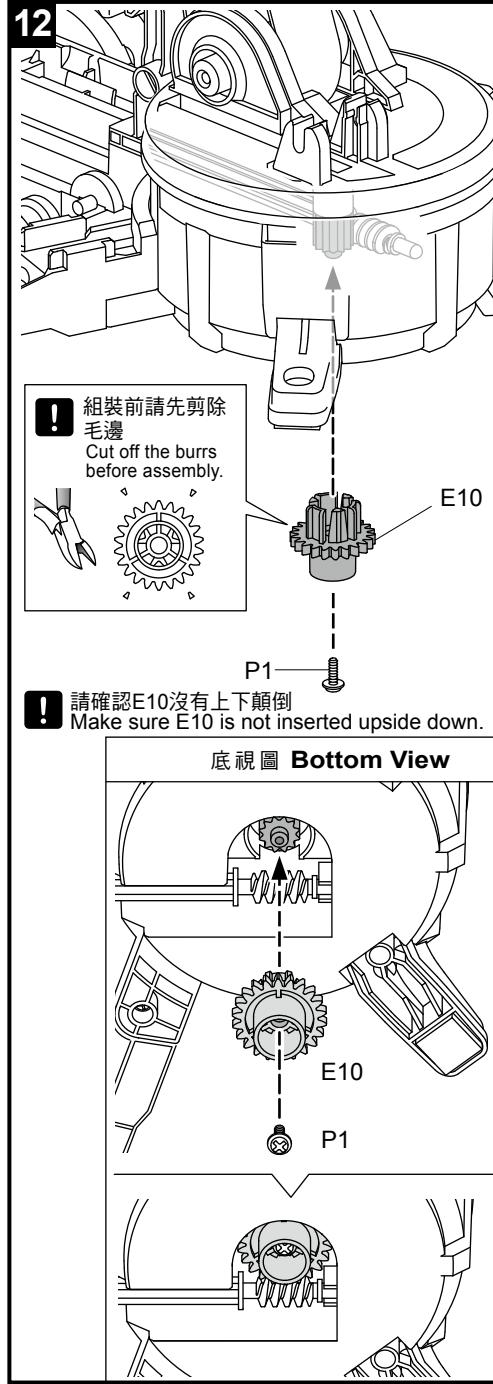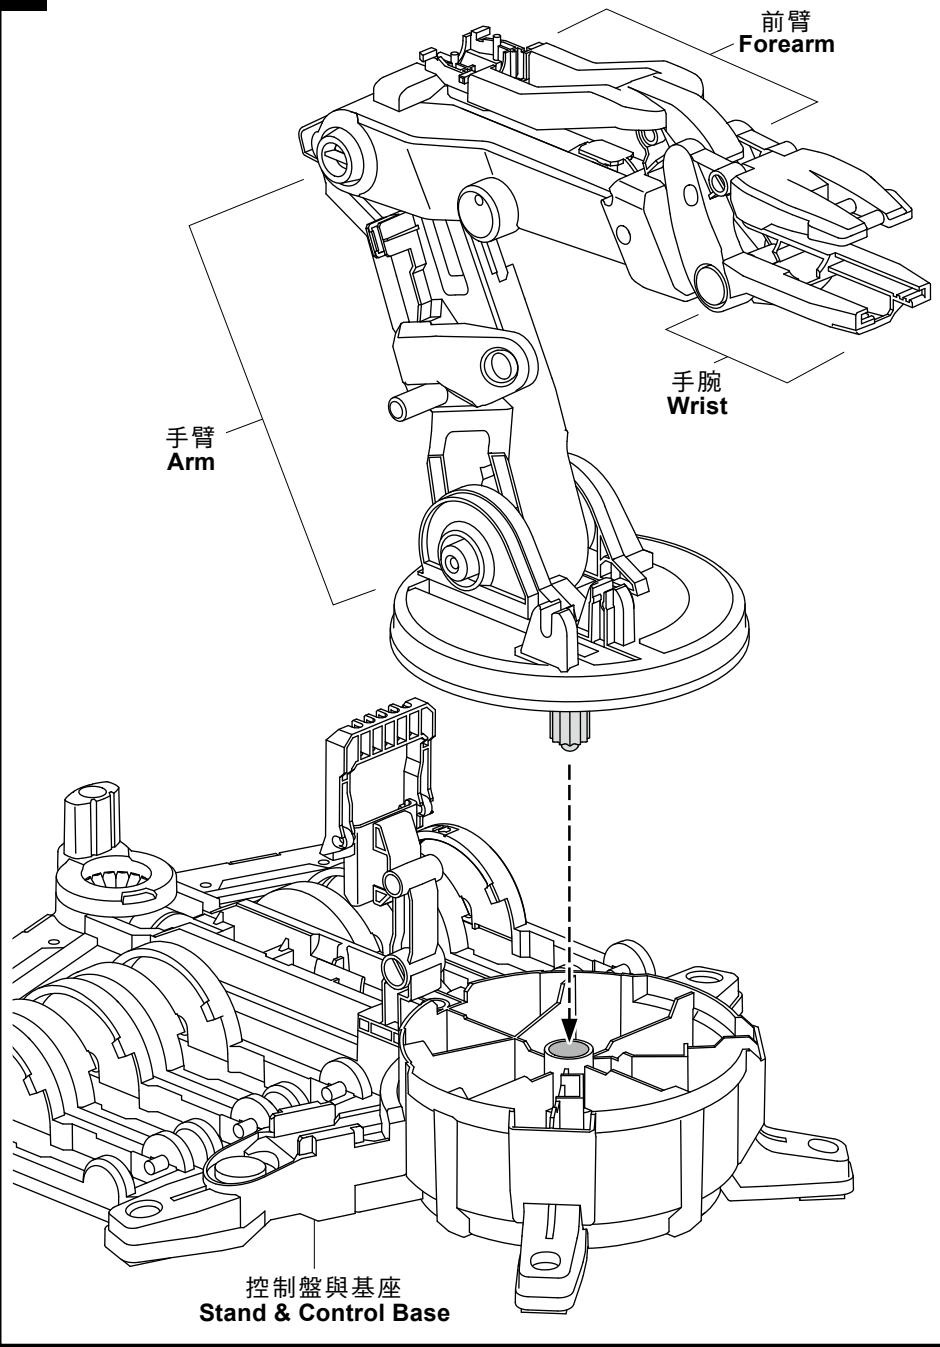


## 油包 使用說明 How To Oil The Parts

1

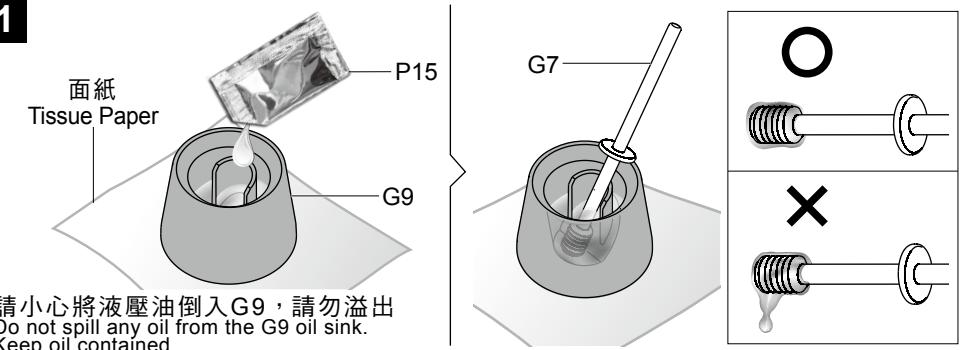


2

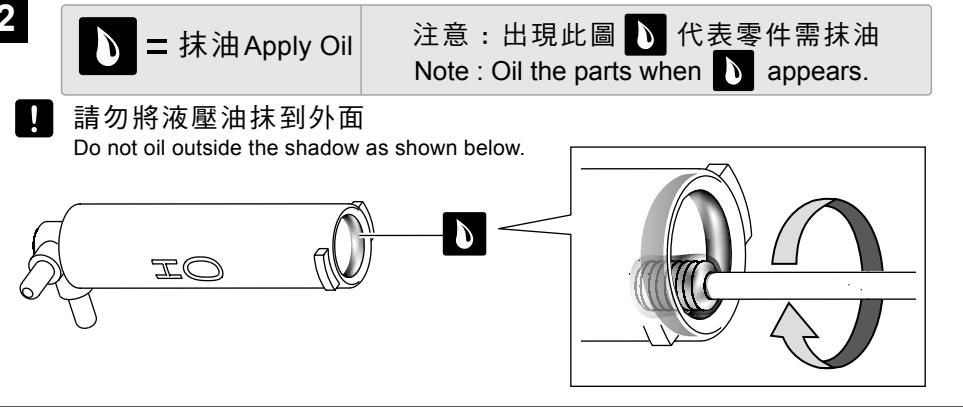

## H0~H5 液壓筒組裝 H0~H5 Cylinder Assembly

### H0 液壓筒組裝 H0 Cylinder Assembly

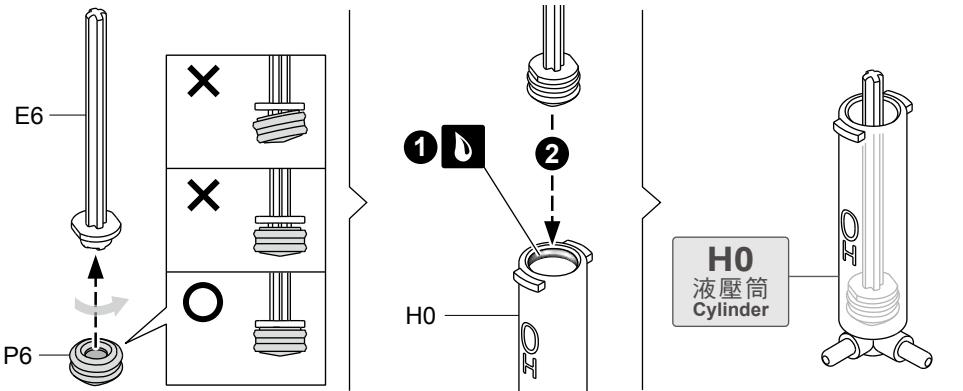


20


! 重要操作，請特別注意  
Important

## H1 液壓筒組裝 H1 Cylinder Assembly

1

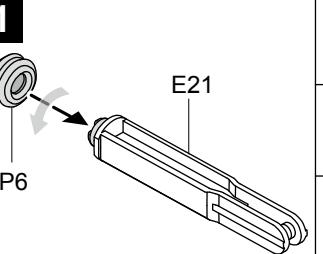


3

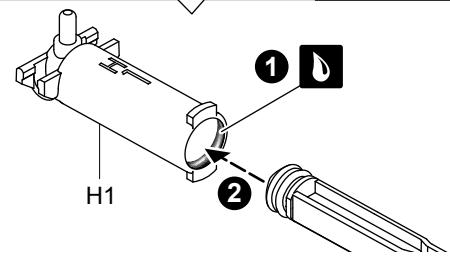



!

重要操作，請特別注意  
Important


G1

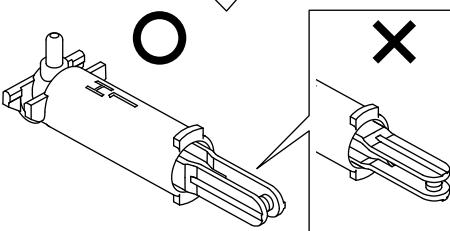

2

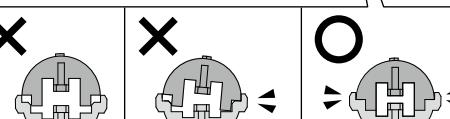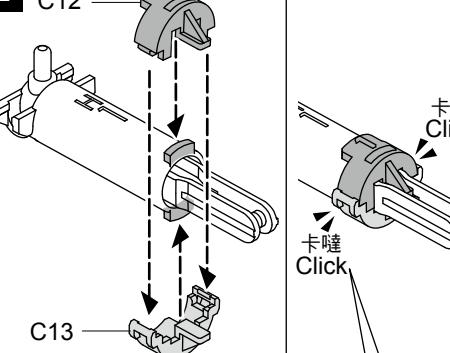


4

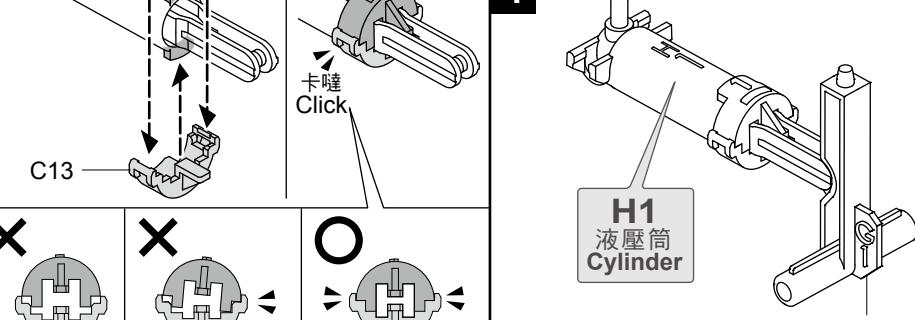

21


## H2 液壓筒組裝 H2 Cylinder Assembly

**! 重要操作，請特別注意**  
Important

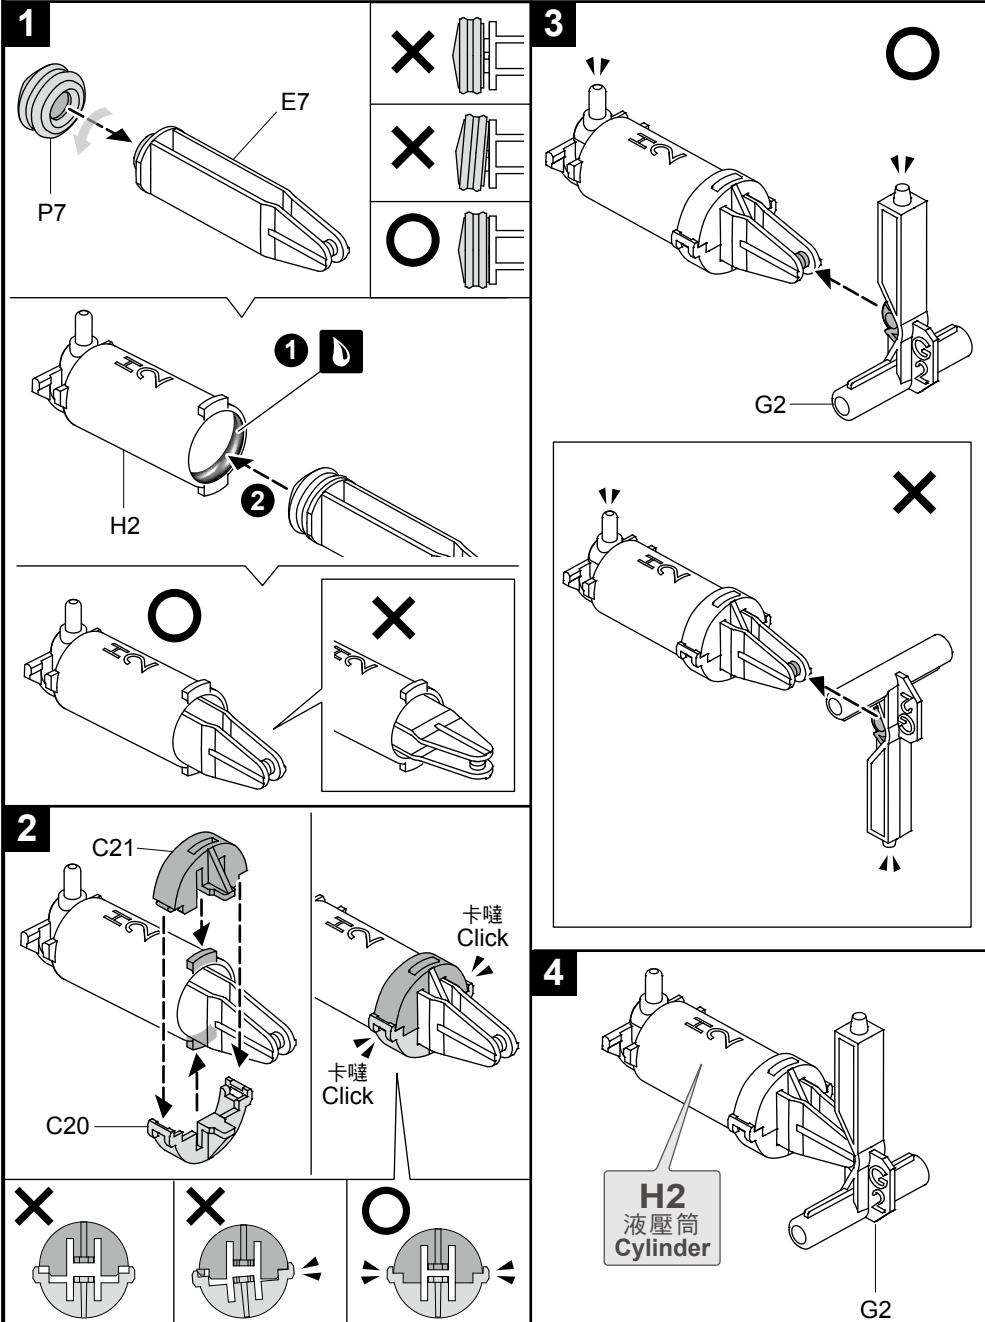


## H3 液壓筒組裝 H3 Cylinder Assembly

**! 重要操作，請特別注意**  
Important

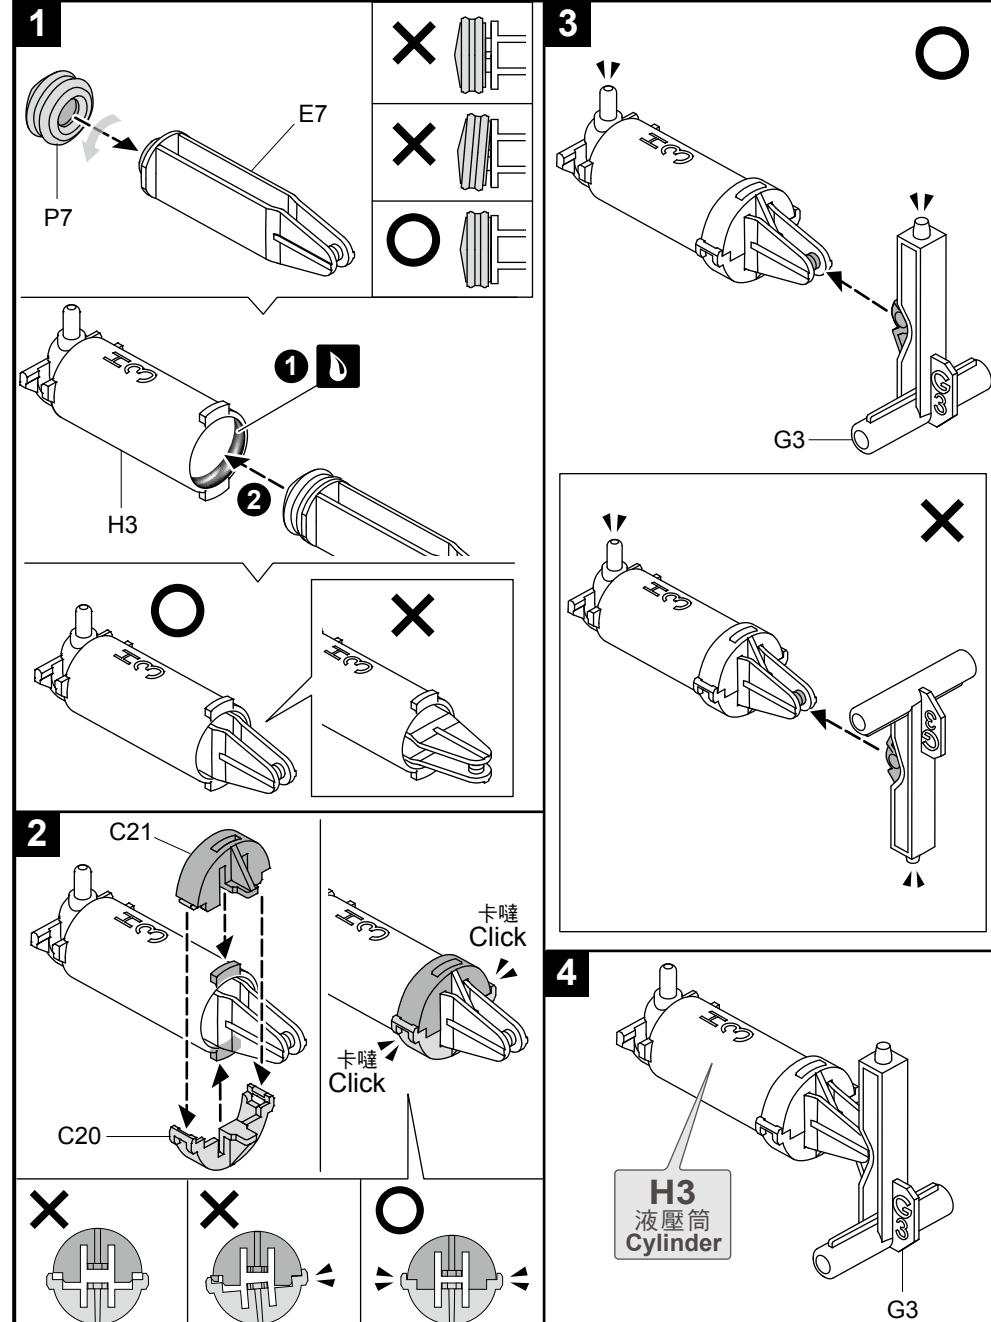


**! 重要操作，請特別注意**  
Important

### H 4 液壓筒組裝 H4 Cylinder Assembly

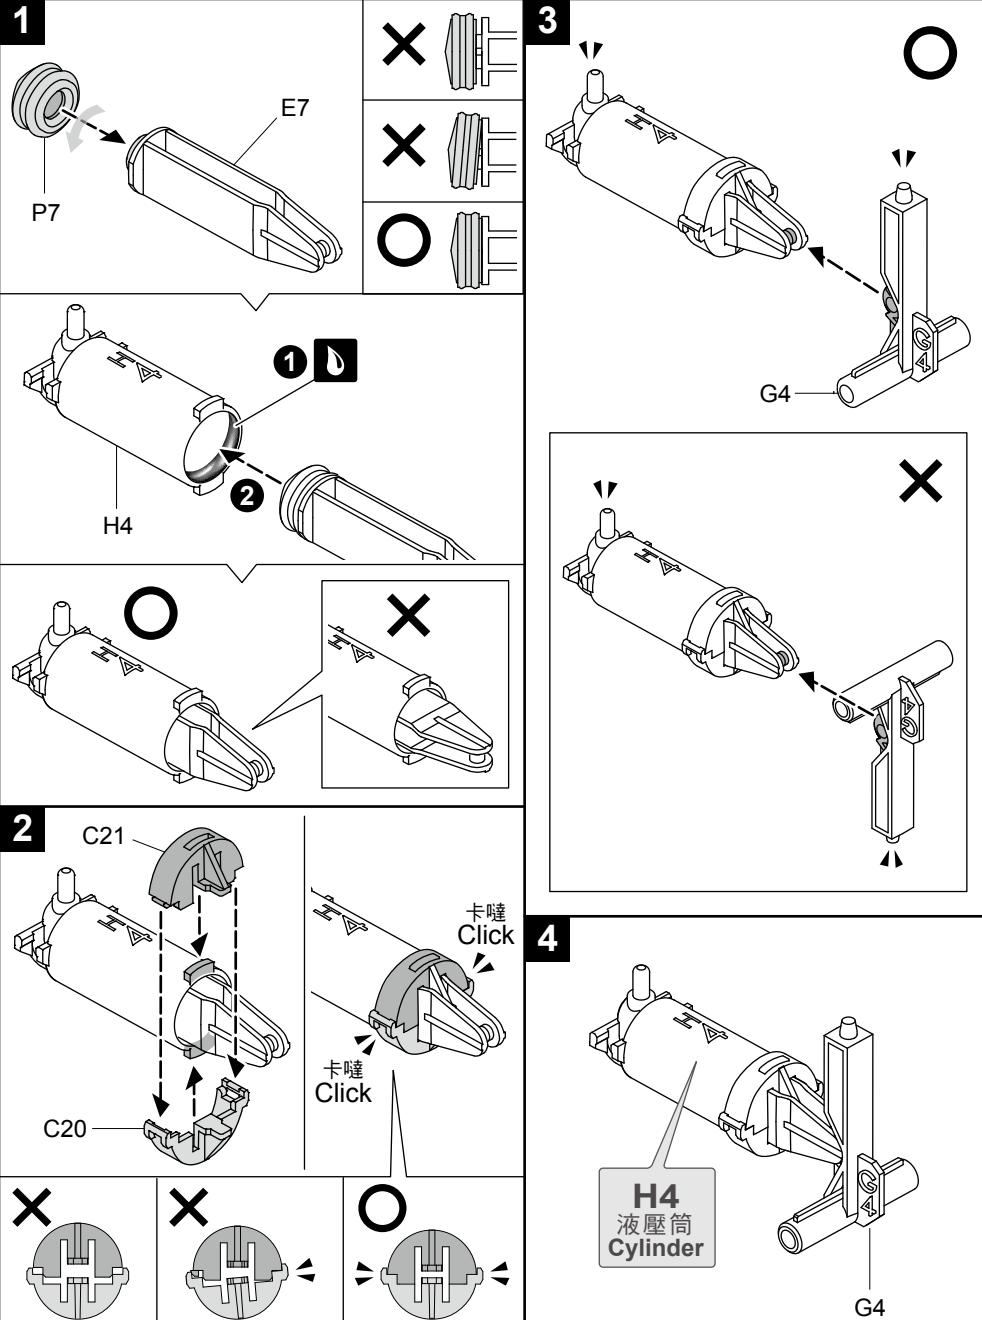








### H 5 液壓筒組裝 H5 Cylinder Assembly







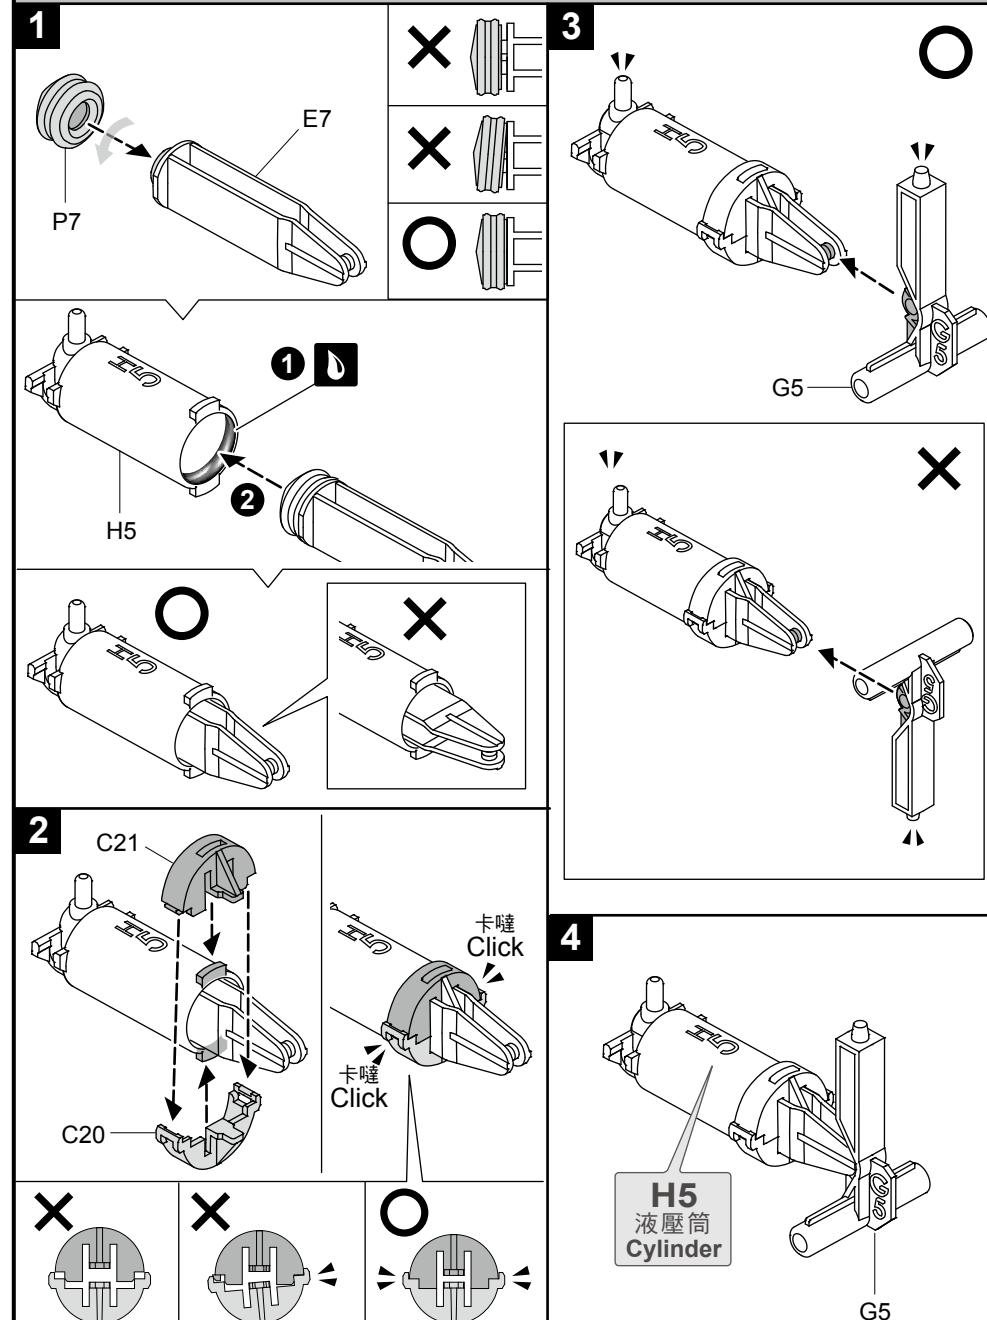


# I 1 ~ I 5 液壓筒組裝 I1 ~ I5 Cylinder Assembly




**! 重要操作，請特別注意**  
Important

## I 1 ~ I 2 液壓筒組裝 I1 & I2 Cylinder

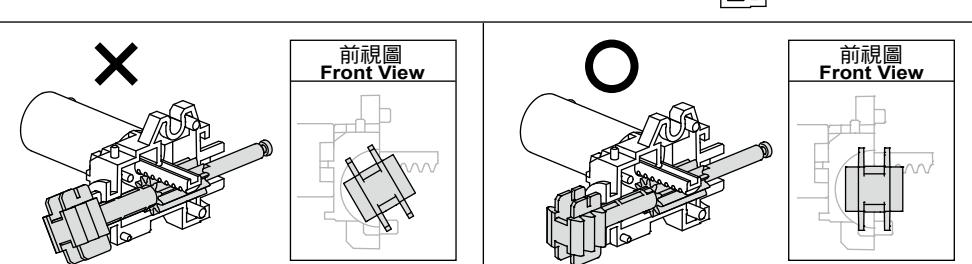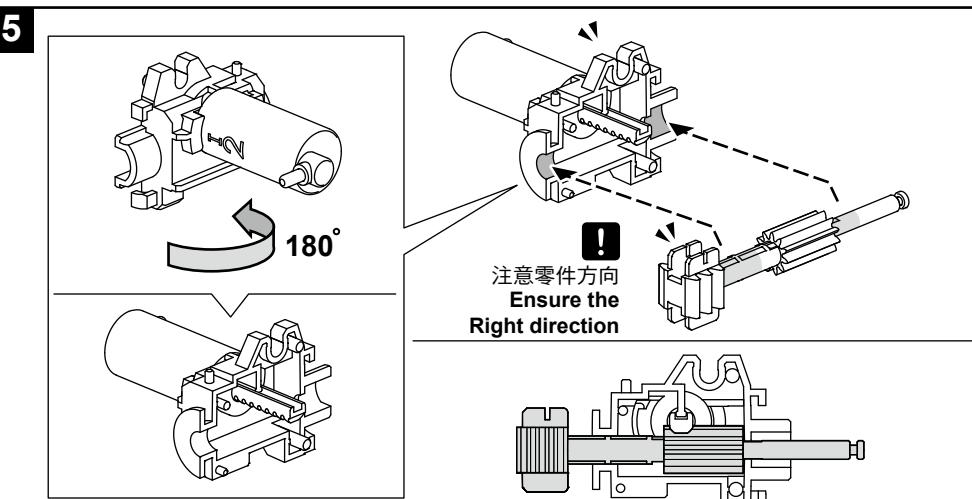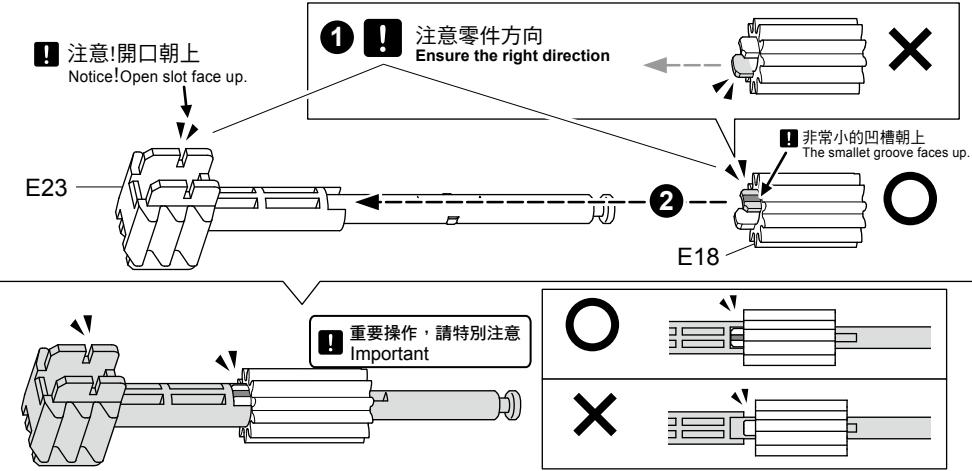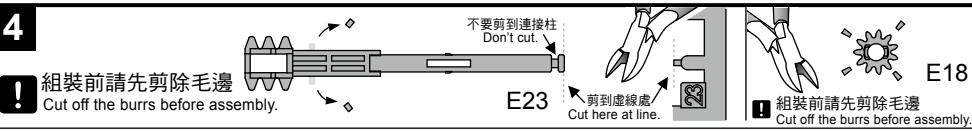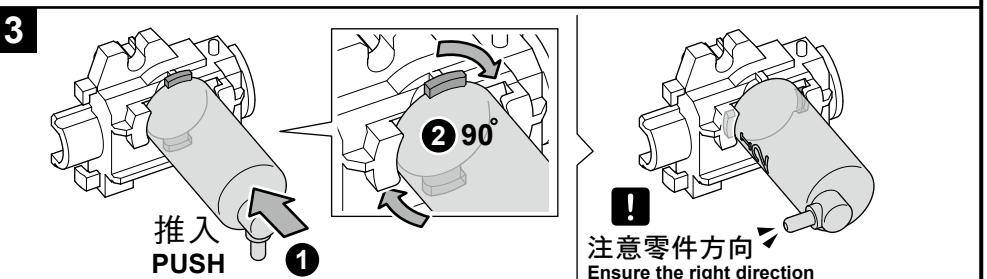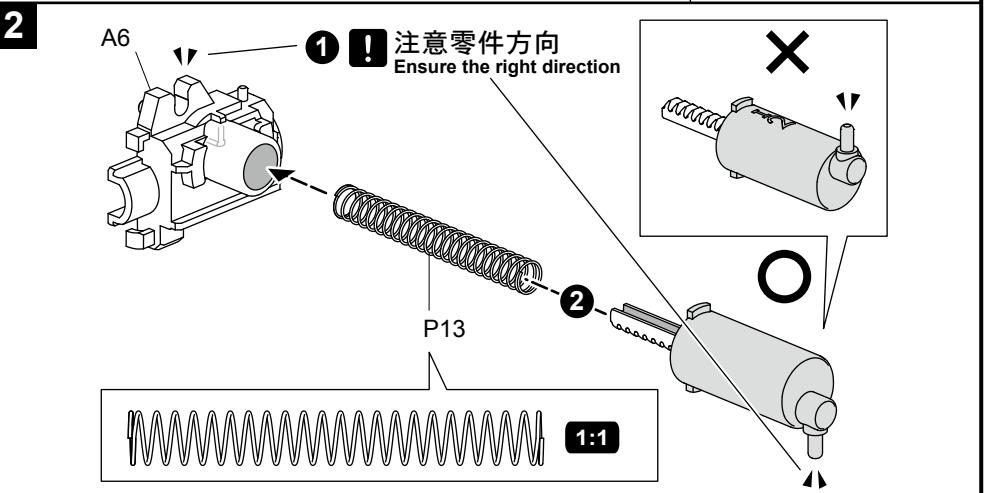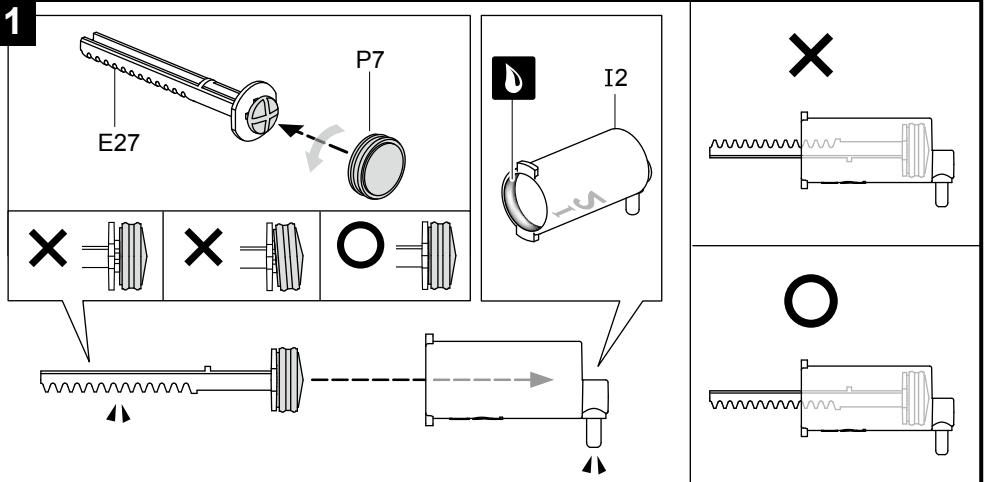


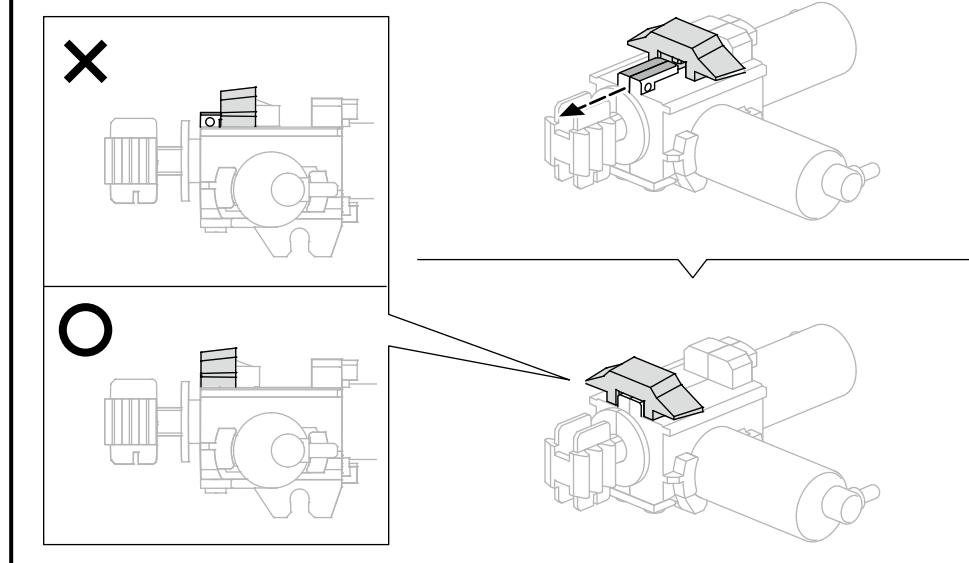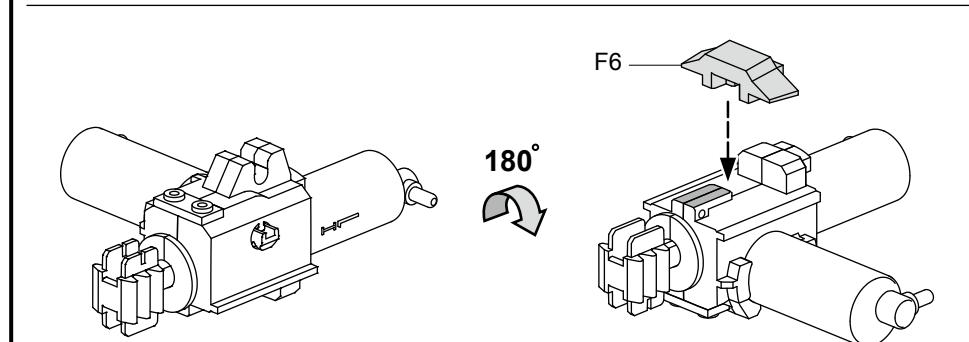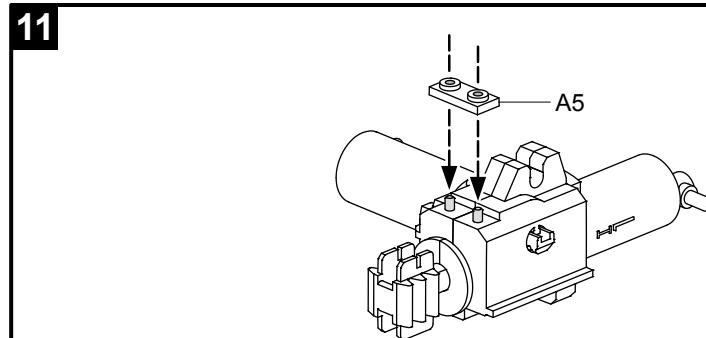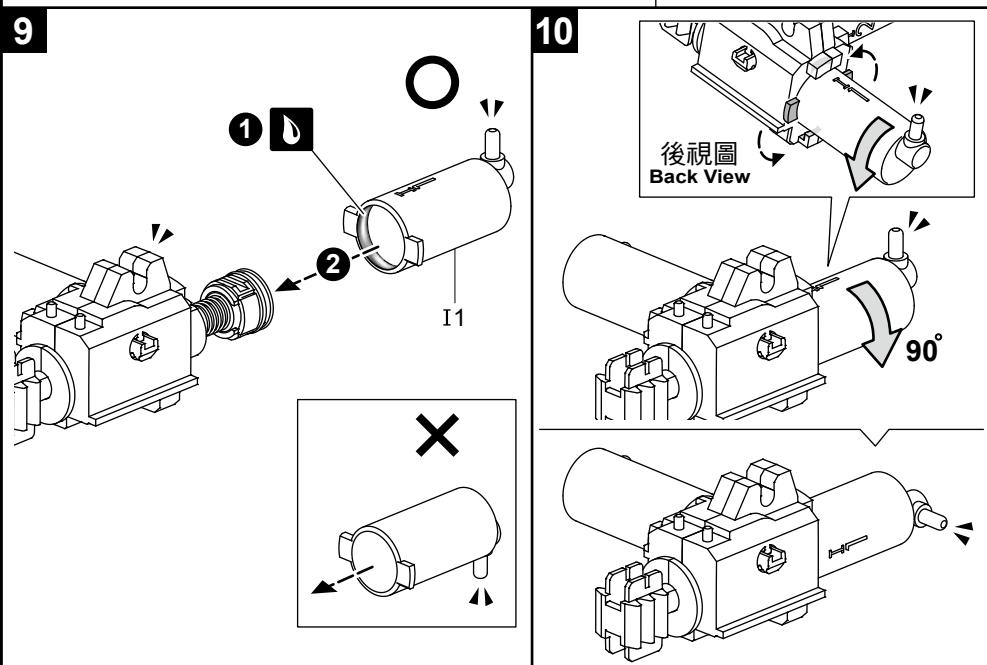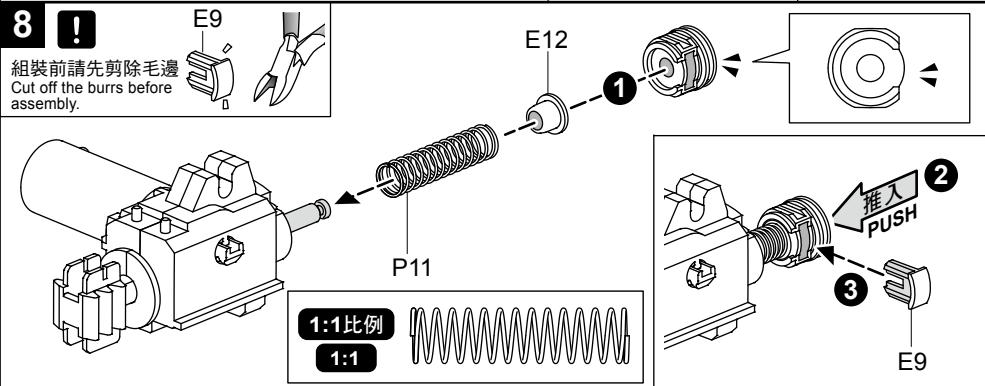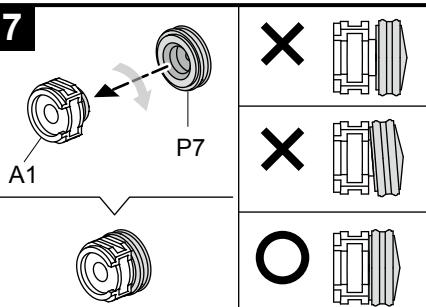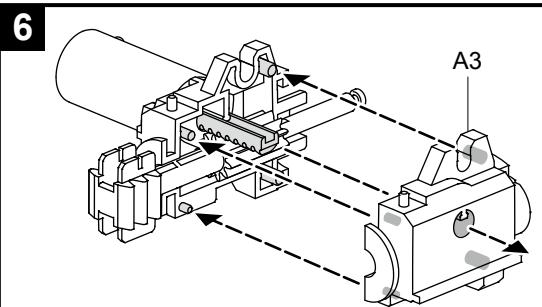




12

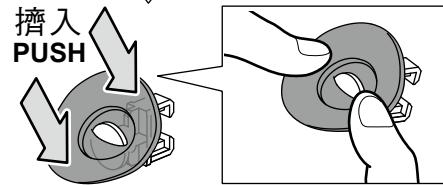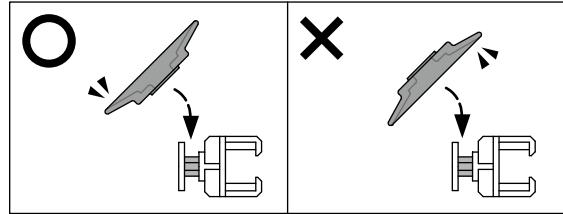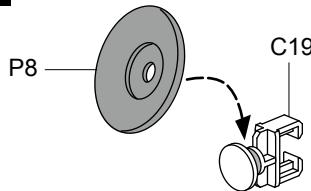



13

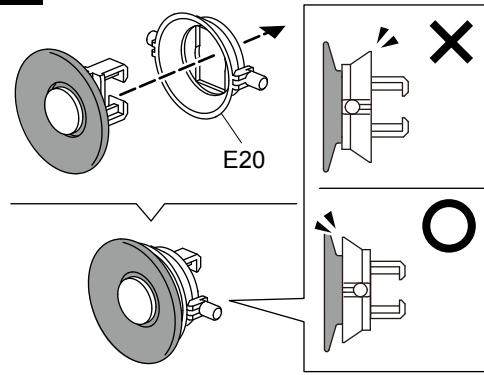




14

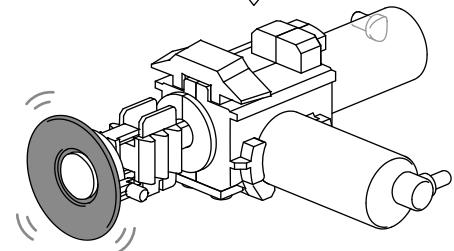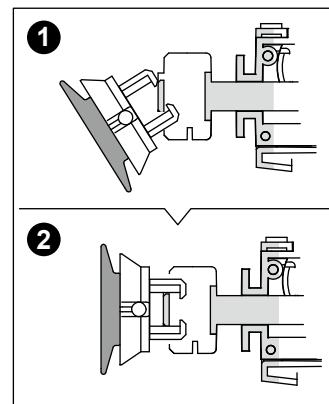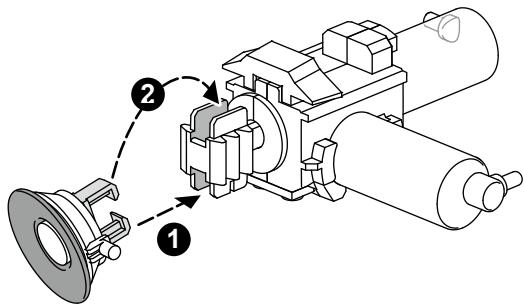

15

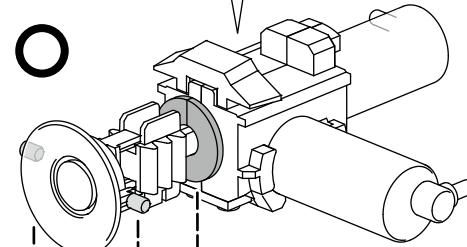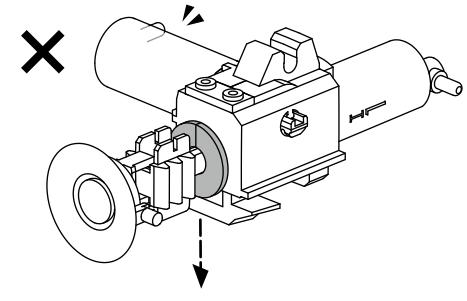


A7

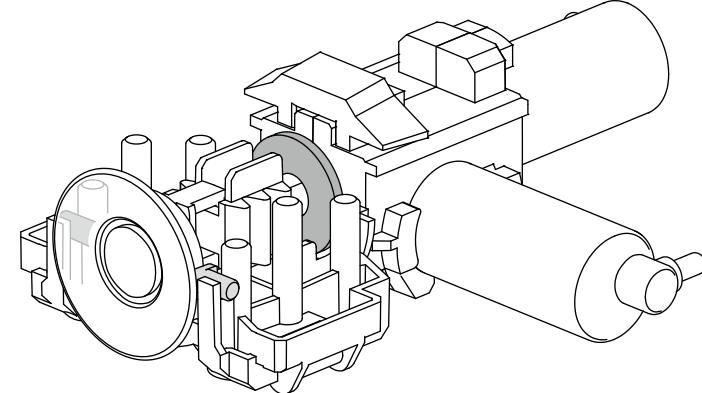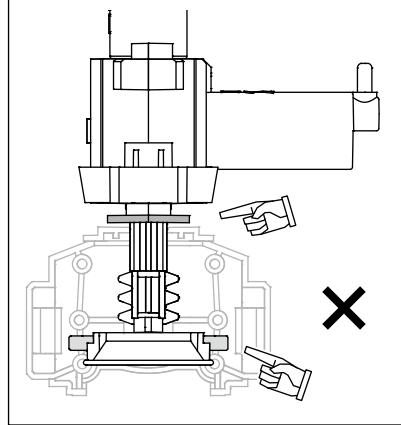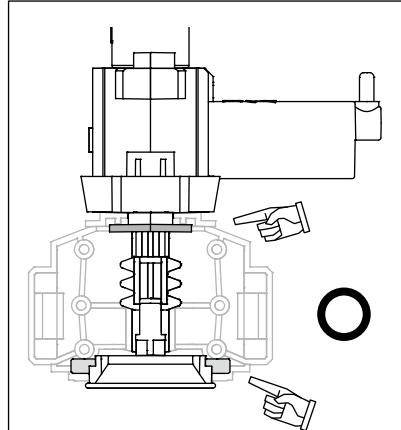

16

! 組裝前請先剪除毛邊  
Cut off the burrs before assembly.

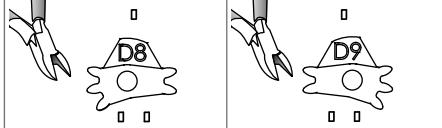

D8

D9

17

P2x4

1:1比例

1:1

A2

吸盤

Suction Cup

I1

液壓筒

Cylinder




I2

液壓筒

Cylinder


! 非常重要

Very important

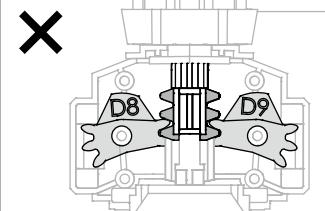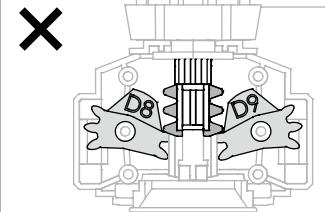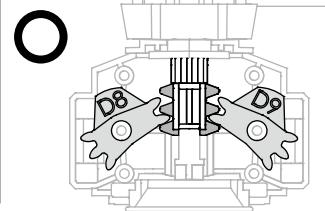


! 重要操作，請特別注意  
Important

I 3 液壓筒組裝 I3 Cylinder

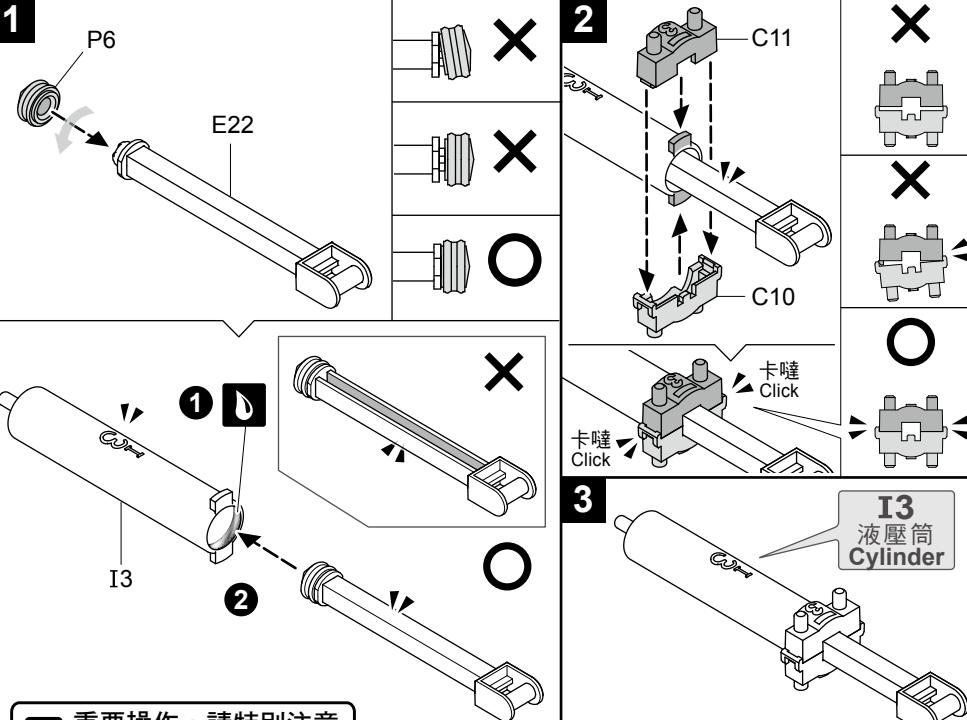

! 重要操作，請特別注意  
Important


I 4 液壓筒組裝 I4 Cylinder

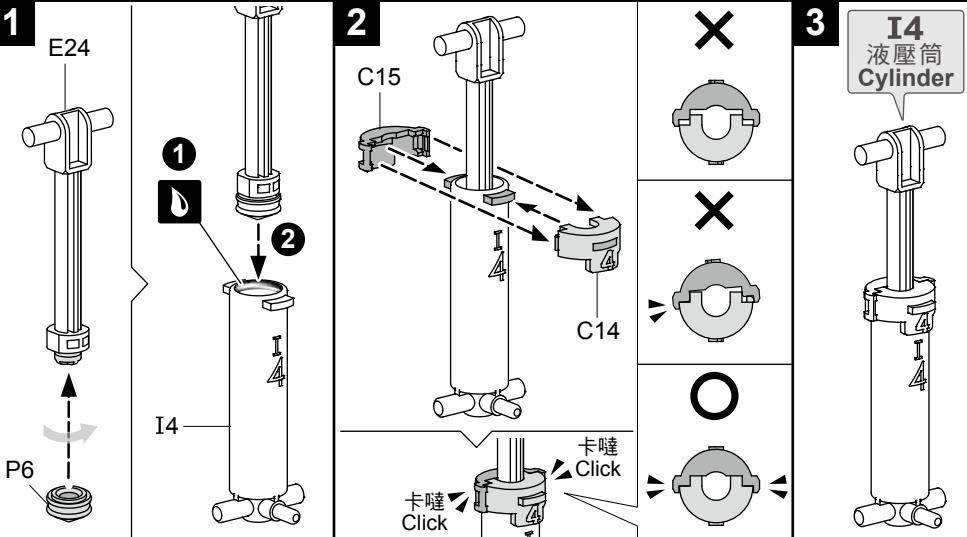

! 重要操作，請特別注意  
Important


## I 5 液壓筒組裝 I5 Cylinder

1


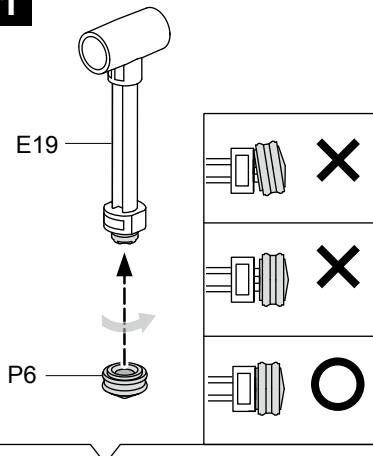


2

! 注意零件方向  
Ensure the right direction

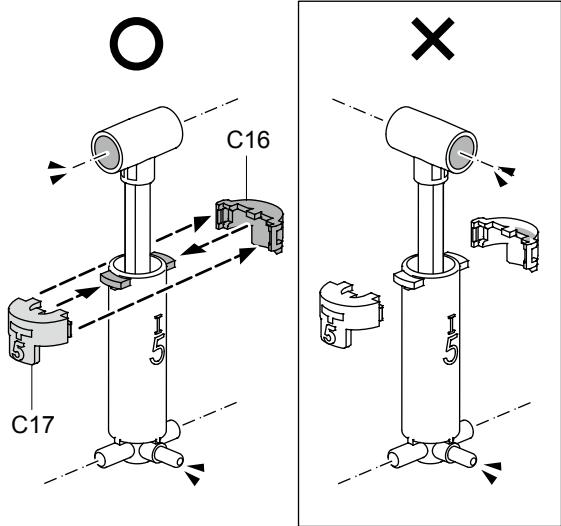


! 注意零件方向  
Ensure the right direction

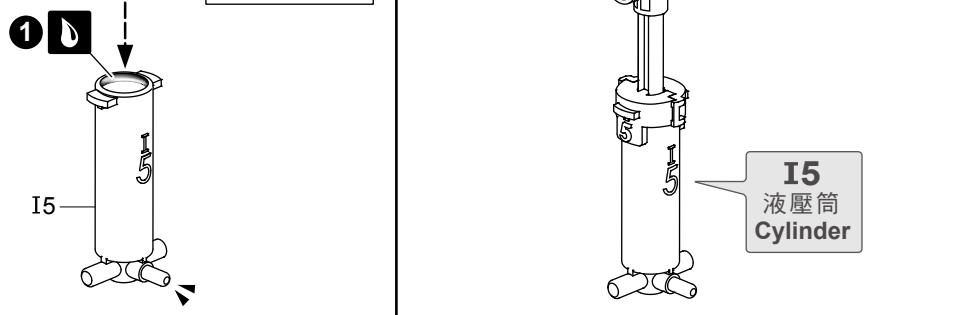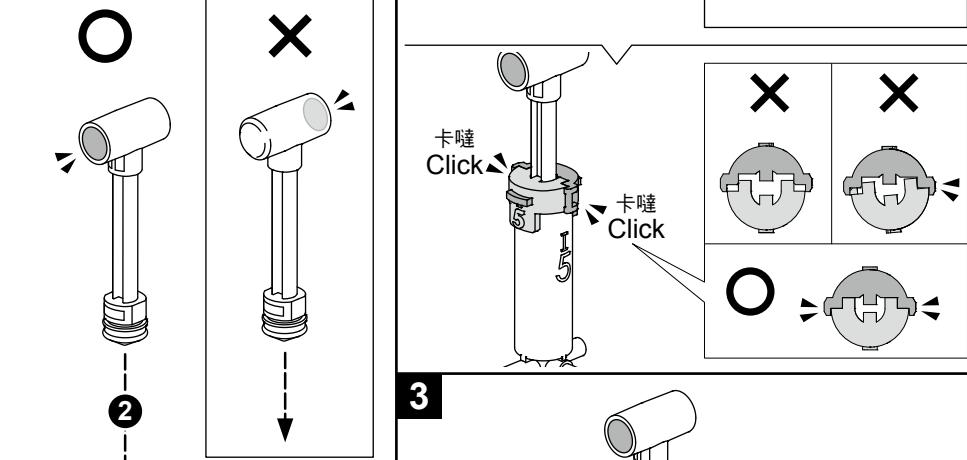

## 軟管裁切 How To Cut The Tube


1

量測與作記號 Measuring & Marking

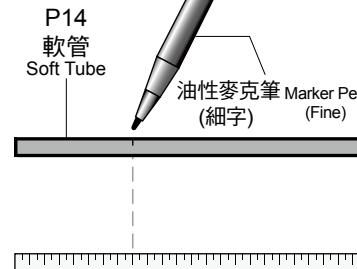


2

剪下 Cutting

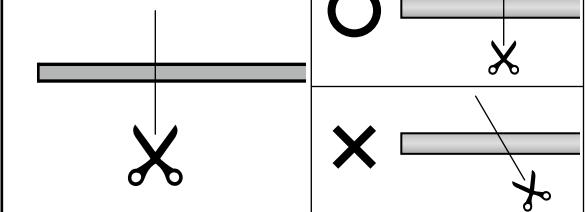

3

編號 Coding

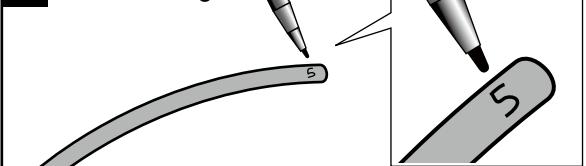


4


! 分別按照以下尺寸量測軟管與作記號，剪下後予以編號。軟管1和軟管0請用同一根軟管剪切。  
Use the same tube to cut Tube 1 & Tube 0.

軟管 Tube 0	8cm (3.15 inches)	
軟管 Tube 1	50cm (19.69 inches)	
軟管 Tube 2	56cm (22.05 inches)	
軟管 Tube 3	38cm (14.96 inches)	
軟管 Tube 4	42cm (16.54 inches)	
軟管 Tube 5	53cm (20.87 inches)	

## 液壓筒裝水說明 How To Fill Up The Cylinder With Water

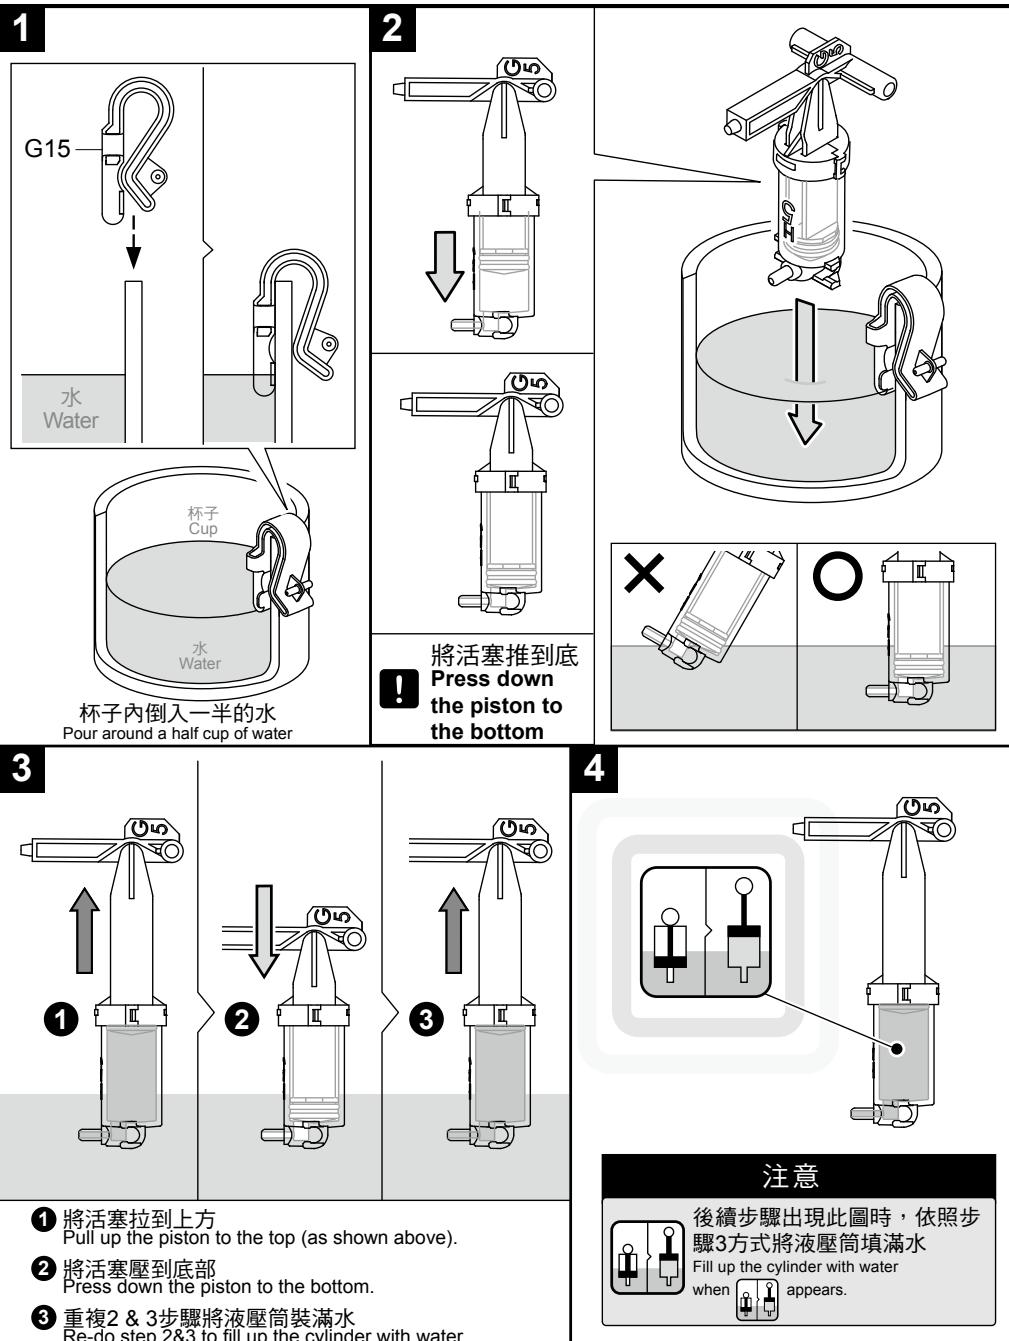


## 軟管與液壓筒組裝 How To Fit Tube

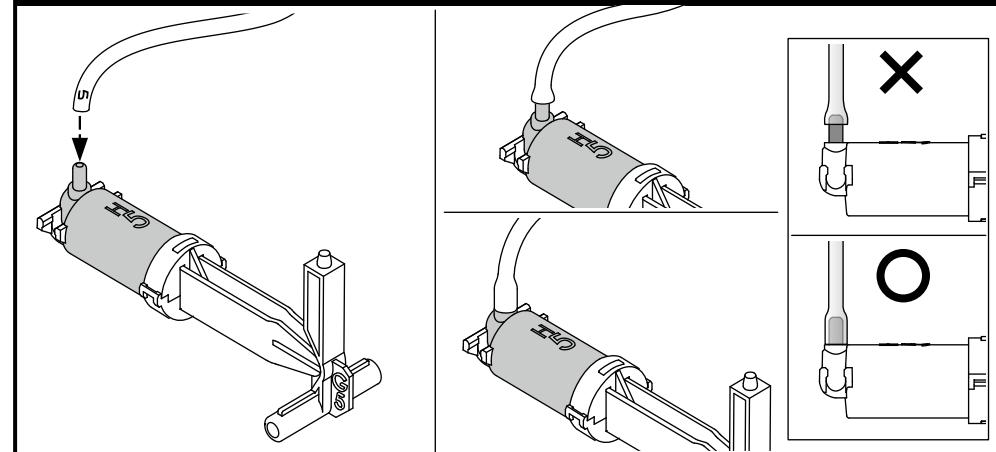


## 液壓筒模組組裝 Hydraulic Cylinder Module Assembly


### 連接 H5 和 I5 Connect H5 With I5

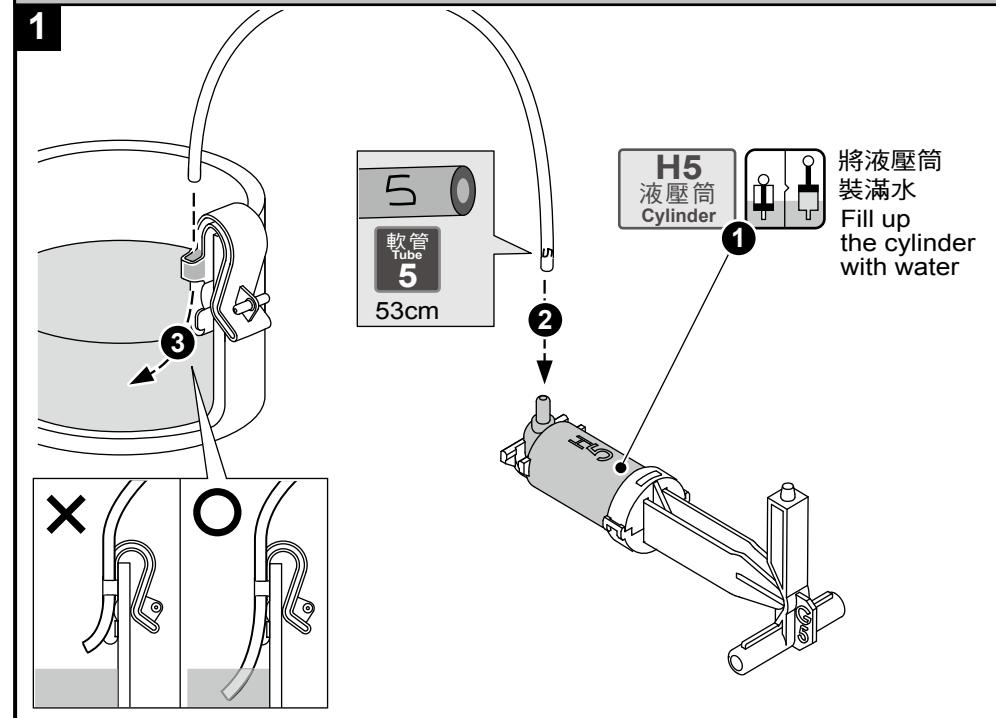

2

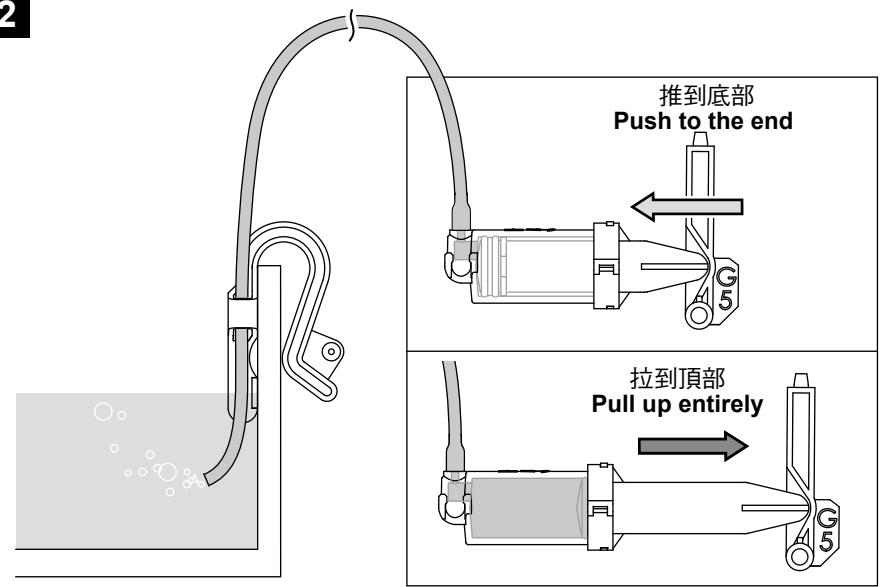


3

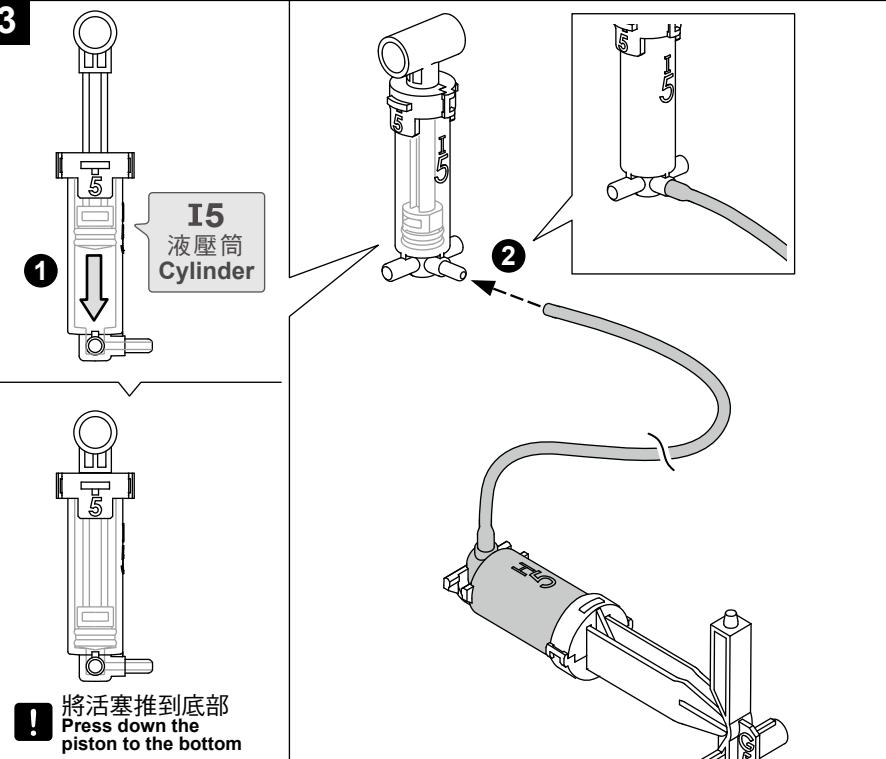


## 連接 H4 和 I4 Connect H4 With I4


1

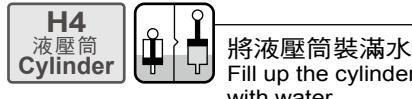


2

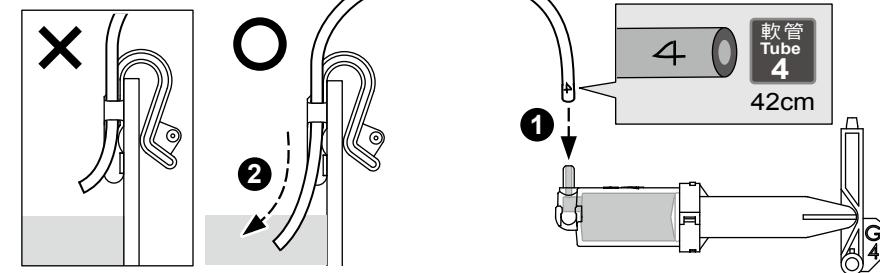

3

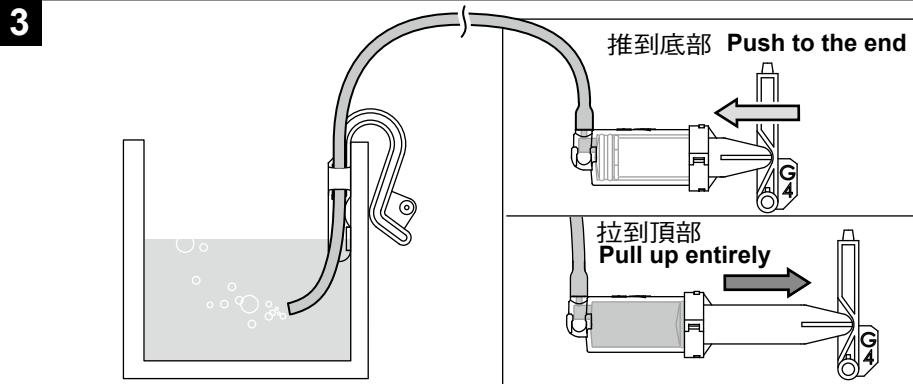

4

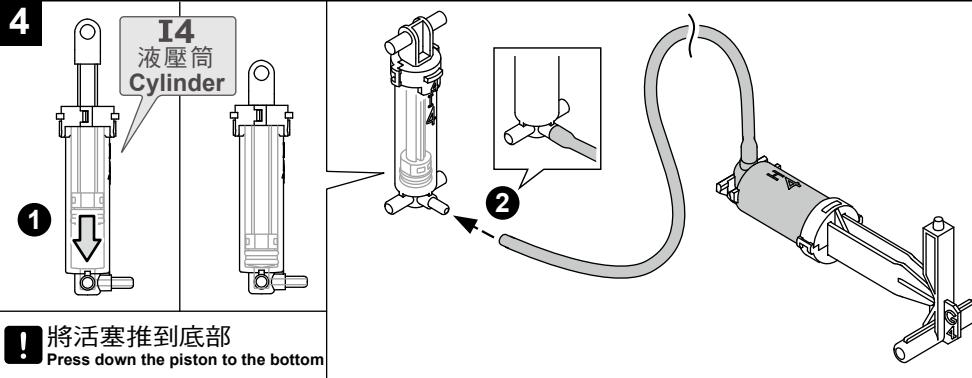


## 連接 H3 和 I3 Connect H3 With I3




1



將液壓筒裝滿水  
Fill up the cylinder with water

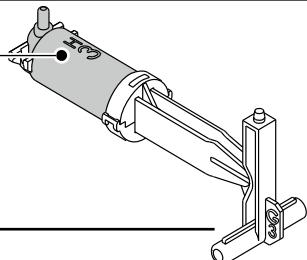


2

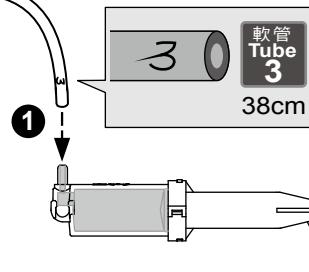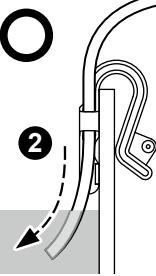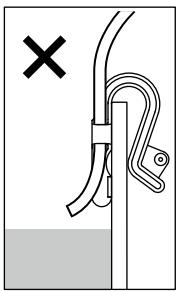

軟管  
Tube 3  
38cm


3

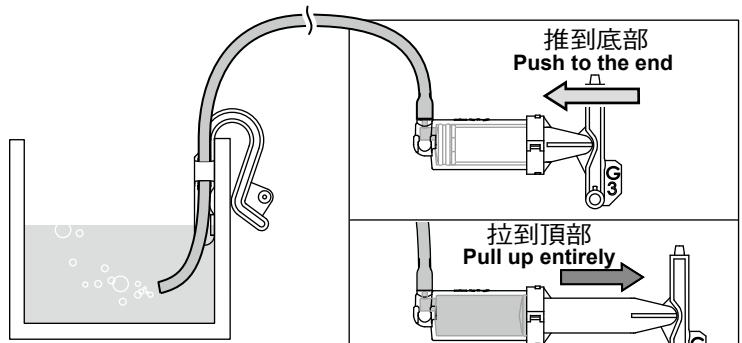

推到底部  
Push to the end

拉到頂部  
Pull up entirely

4

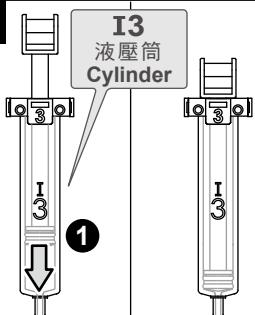


! 將活塞推到底部  
Press down the piston to the bottom

## 連接 H2 和 I2 Connect H2 With I2


1



將液壓筒裝滿水  
Fill up the cylinder with water

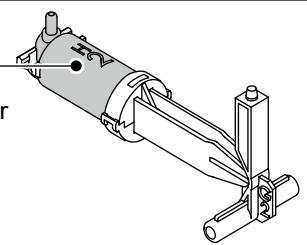


2

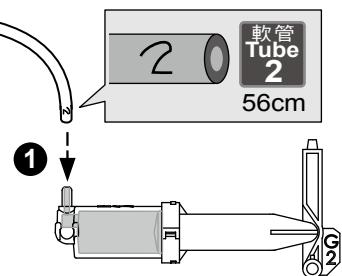

軟管  
Tube 2  
56cm


3

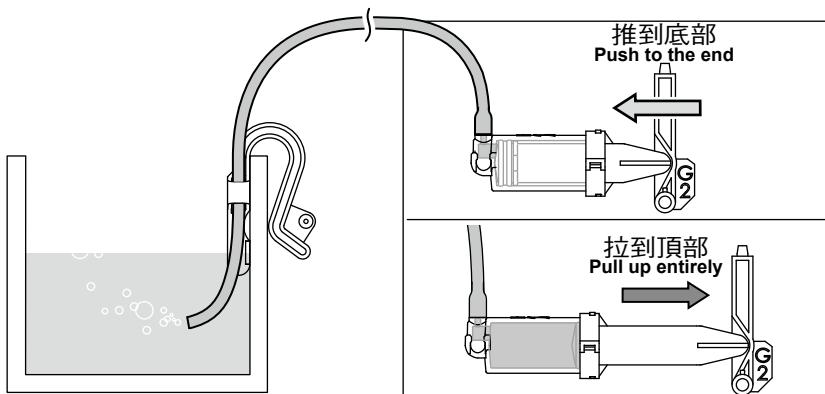

推到底部  
Push to the end

拉到頂部  
Pull up entirely

4

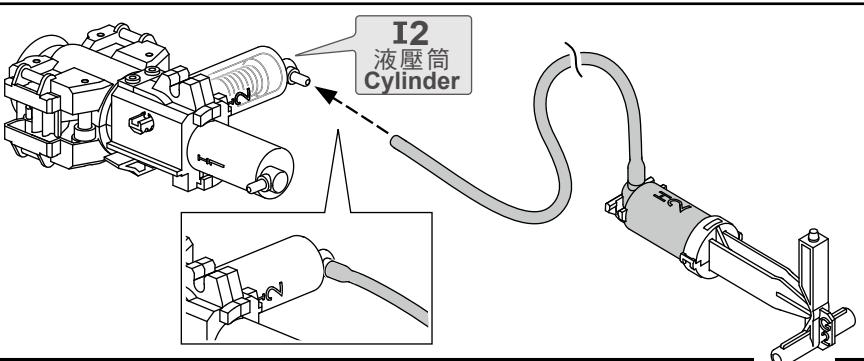

## 連接 H1、H0 和 I1 Connect H1、H0 With I1



1



2



3

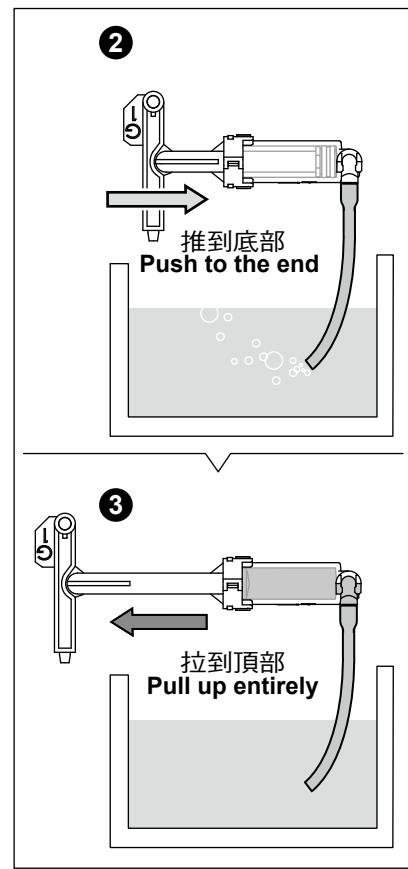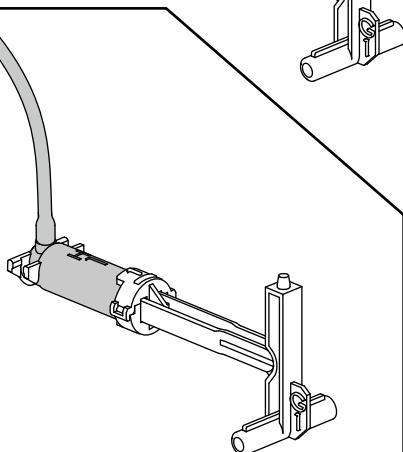


4


推到底部  
Push to the end

**H0 液壓筒 Cylinder**


拉到頂部  
Pull up entirely

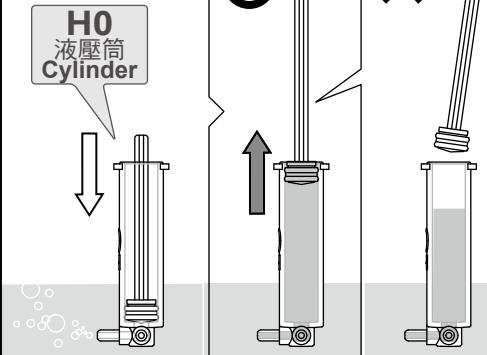


**I 軟管 Tube 1**  
50cm




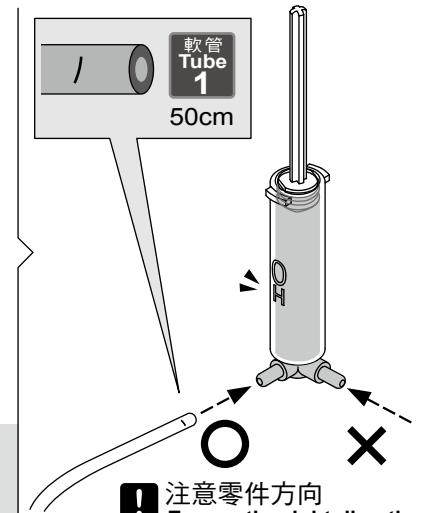


5

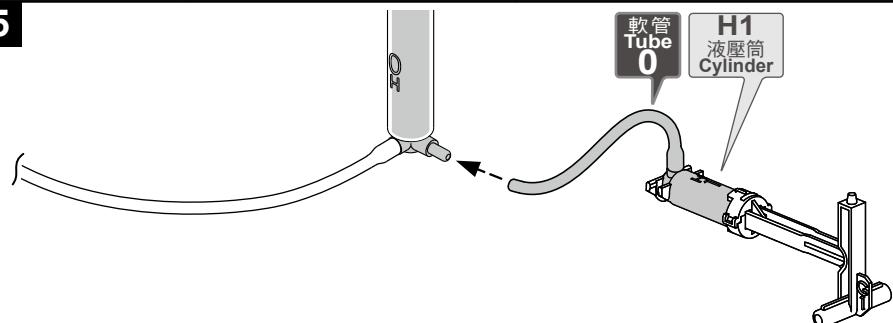


6

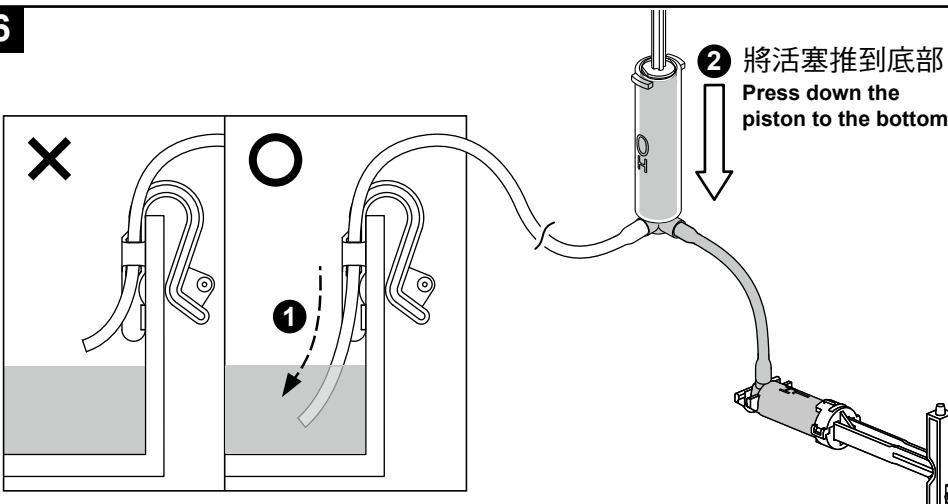

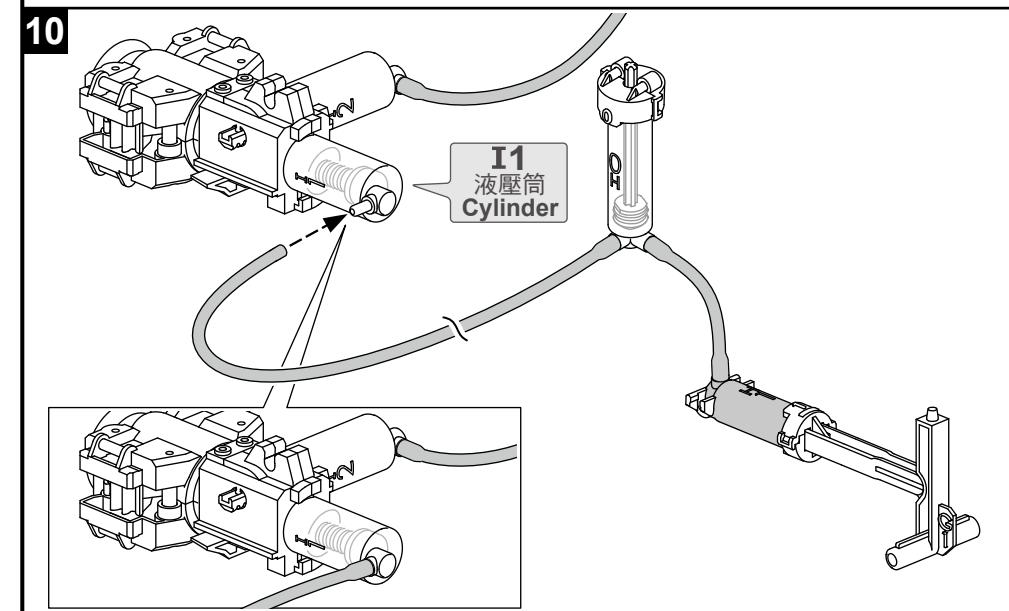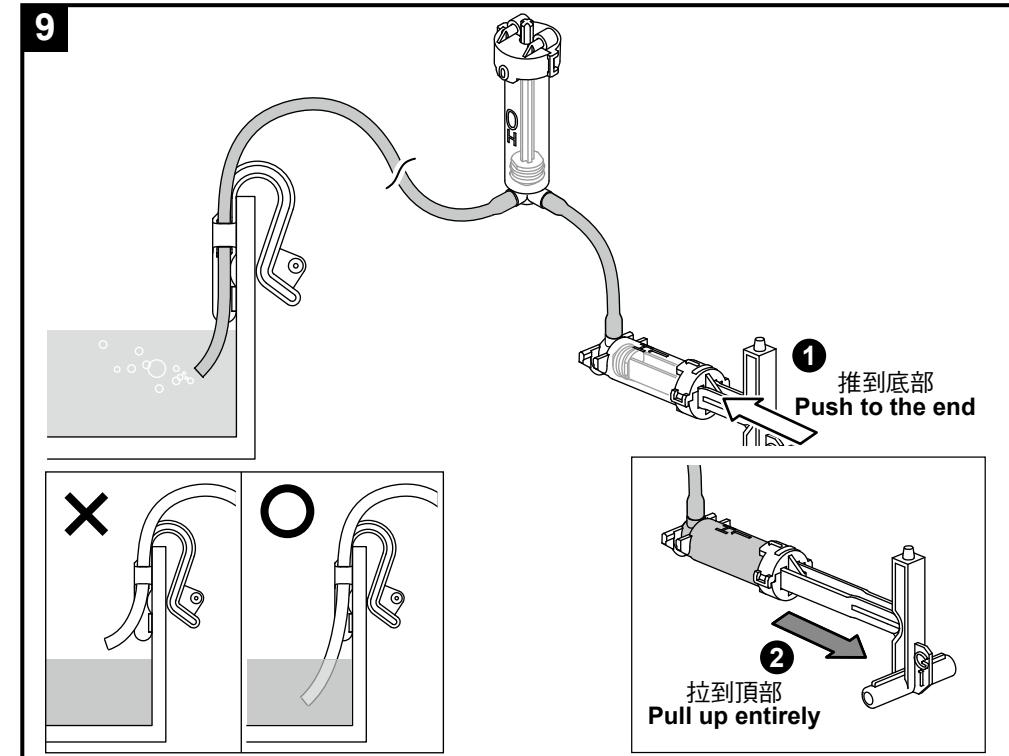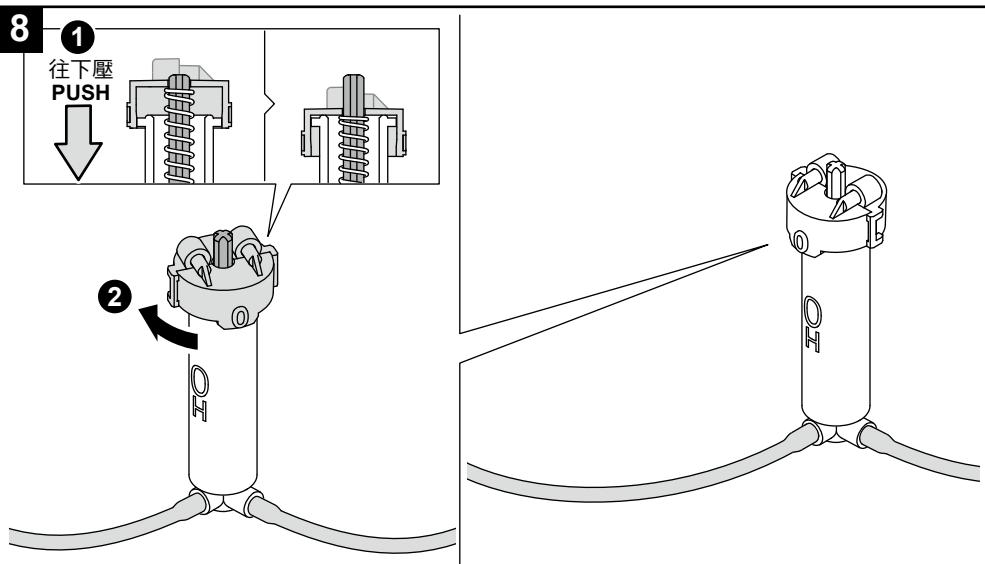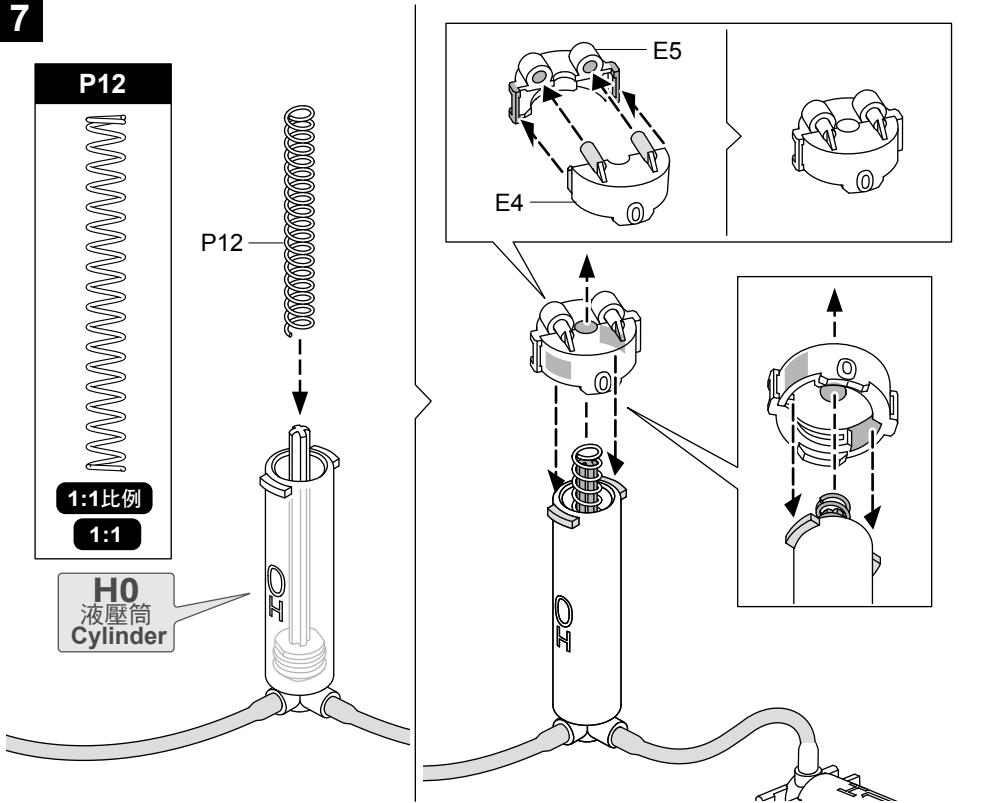

## 量測與作記號 Measuring & Marking

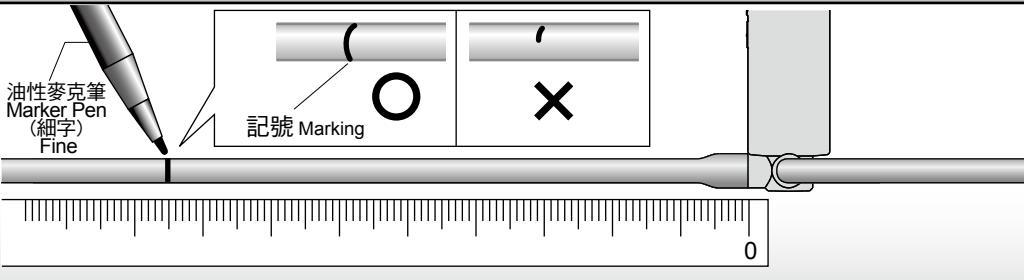

50cm  
(19.69 inches)

軟管  
Tube 1

H0  
液壓筒  
Cylinder

H1  
液壓筒  
Cylinder

8.5 cm  
(3.26 inches)

56cm  
(22.05 inches)

軟管  
Tube 2

H2  
液壓筒  
Cylinder



13.5 cm  
(5.31 inches)

38cm  
(14.96 inches)


軟管  
Tube 3

H3  
液壓筒  
Cylinder


11 cm  
(4.33 inches)

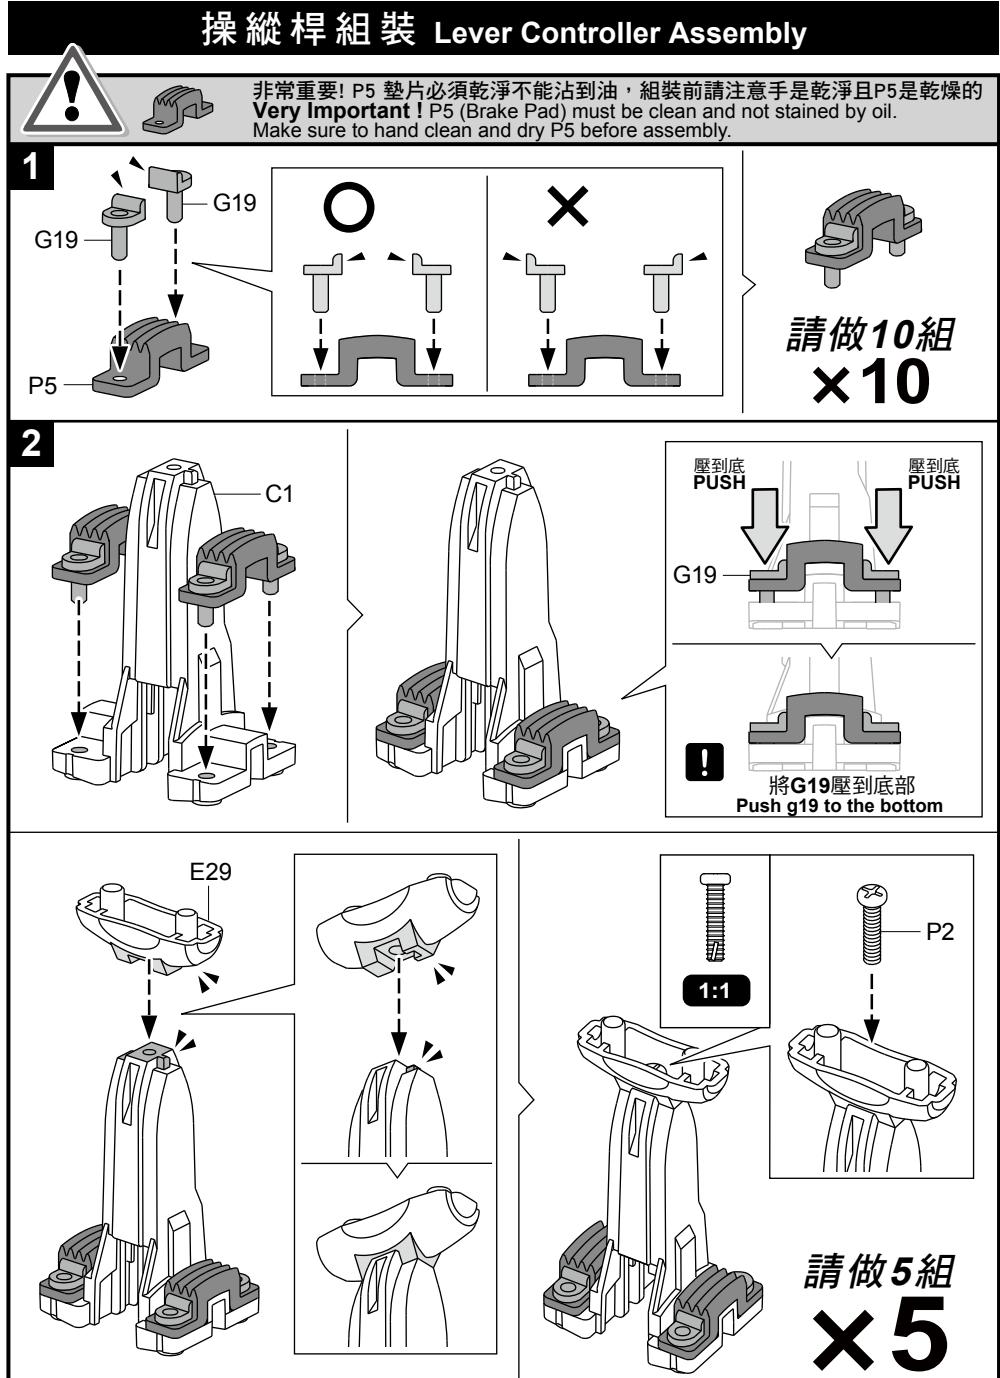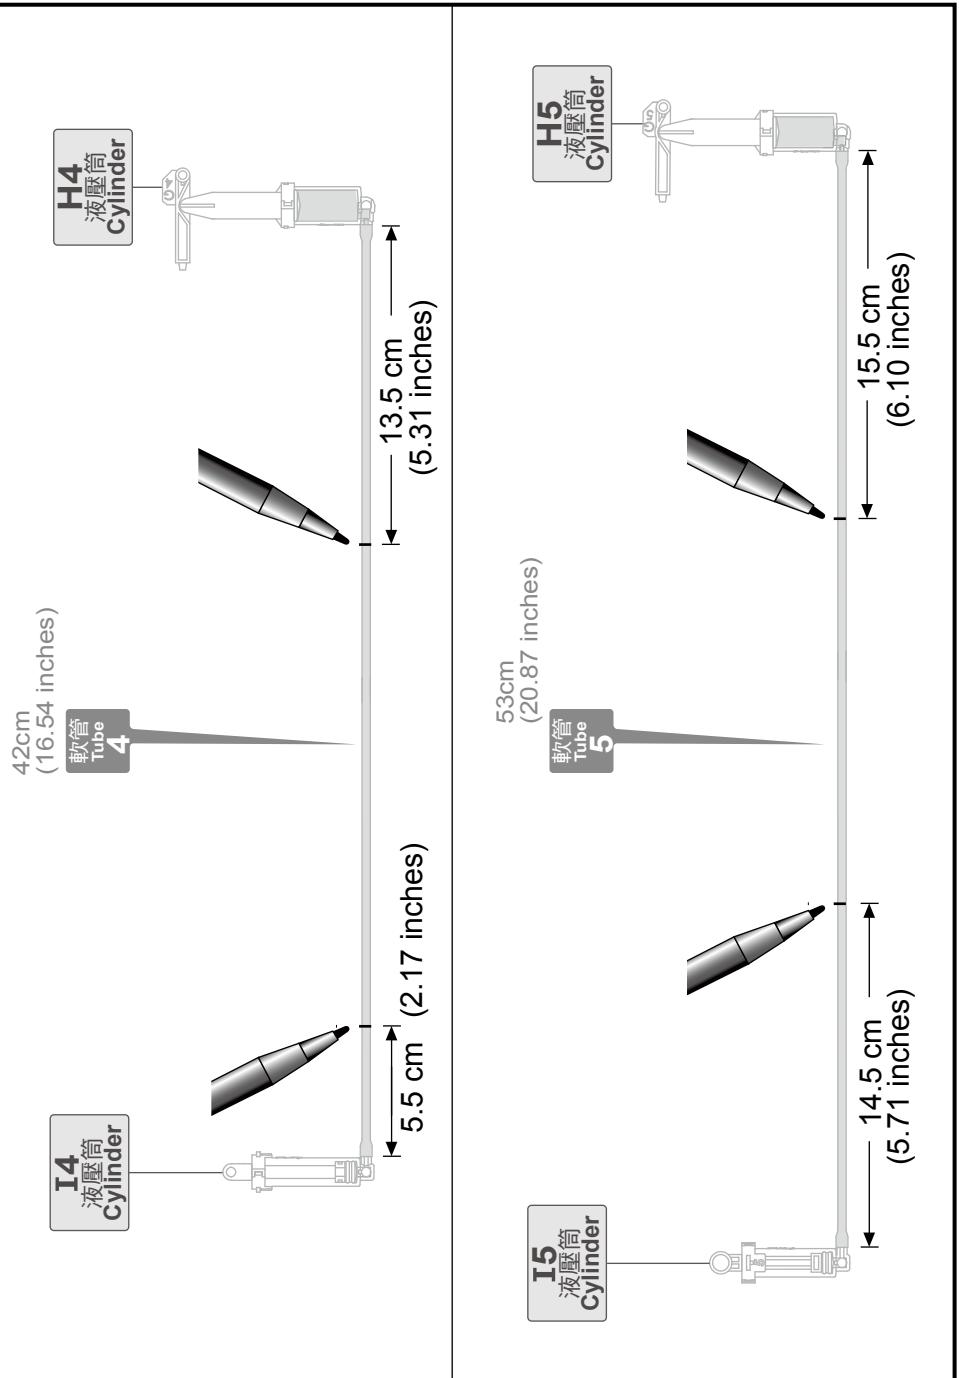


3

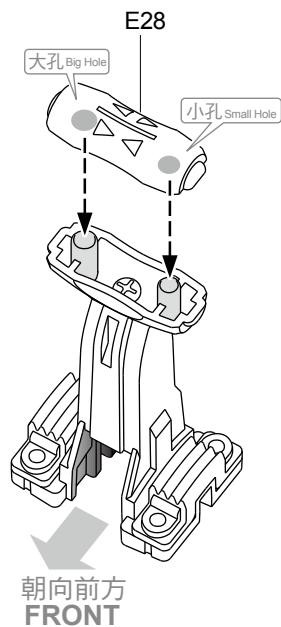

4

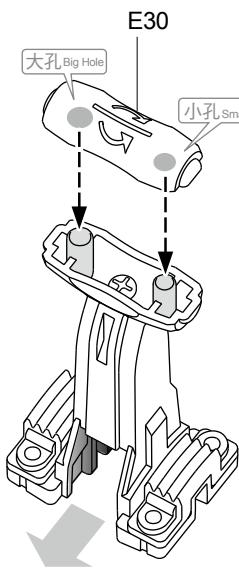


5

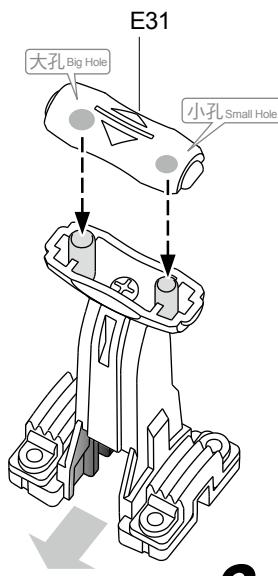


請做 3 組  
×3


**操縱桿 1**  
Lever Controller 1

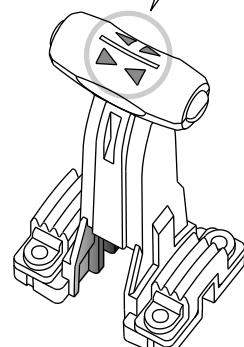

**操縱桿 2**  
Lever Controller 2

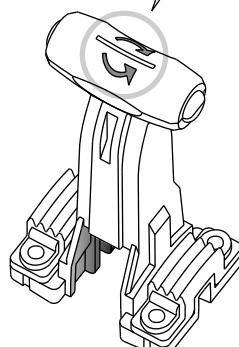


**操縱桿 3.4.5**  
Lever Controller 3.4.5

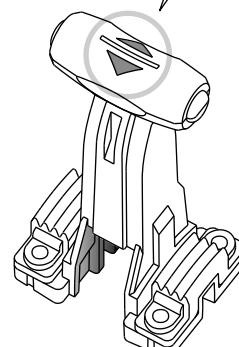


## 控制盤與液壓筒模組組裝 Control Module Assembly






單元1：H0, H1 液壓筒與操縱桿 1 Unit 1: H0.H1 Cylinder & Lever Controller 1

1




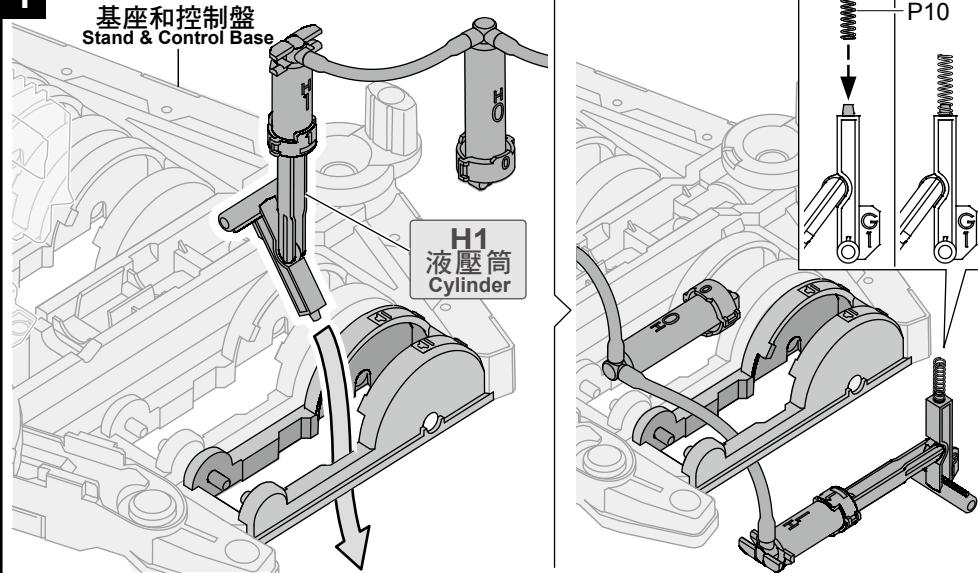






2








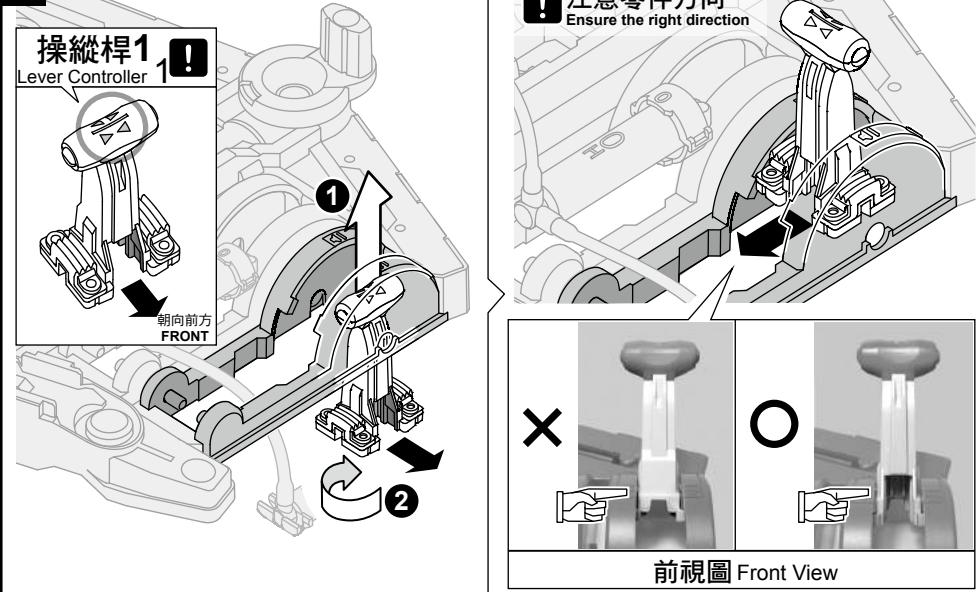


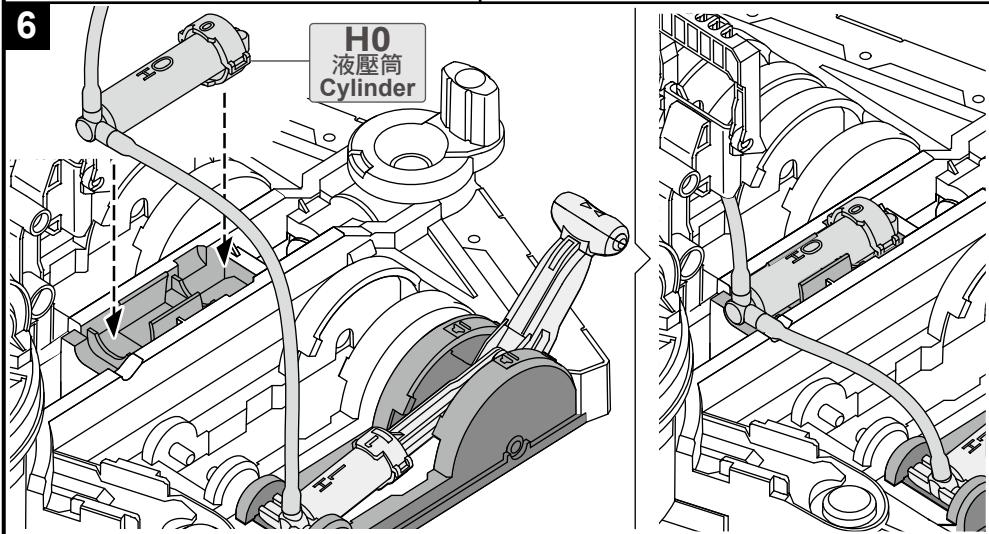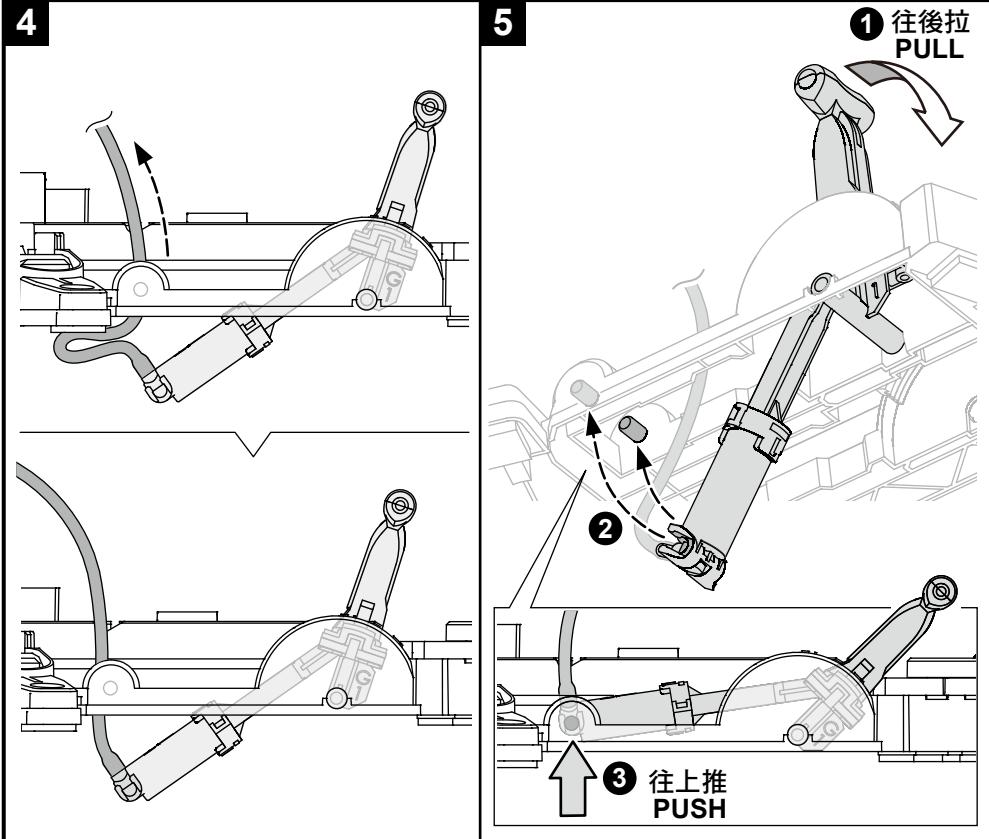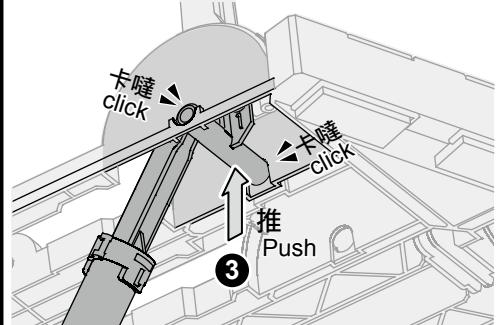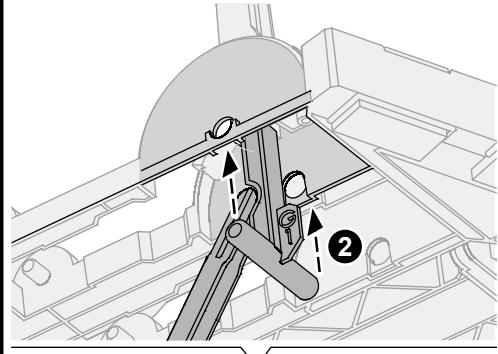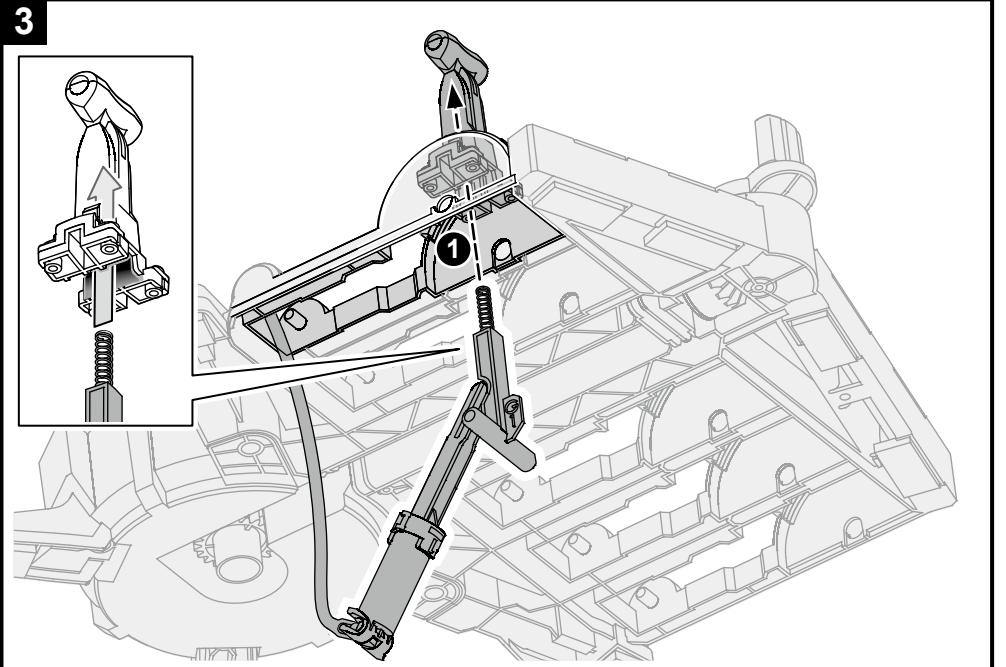

單元2 : H2 液壓筒與操縱桿 2 Unit 2: H2 Cylinder & Lever Controller 2

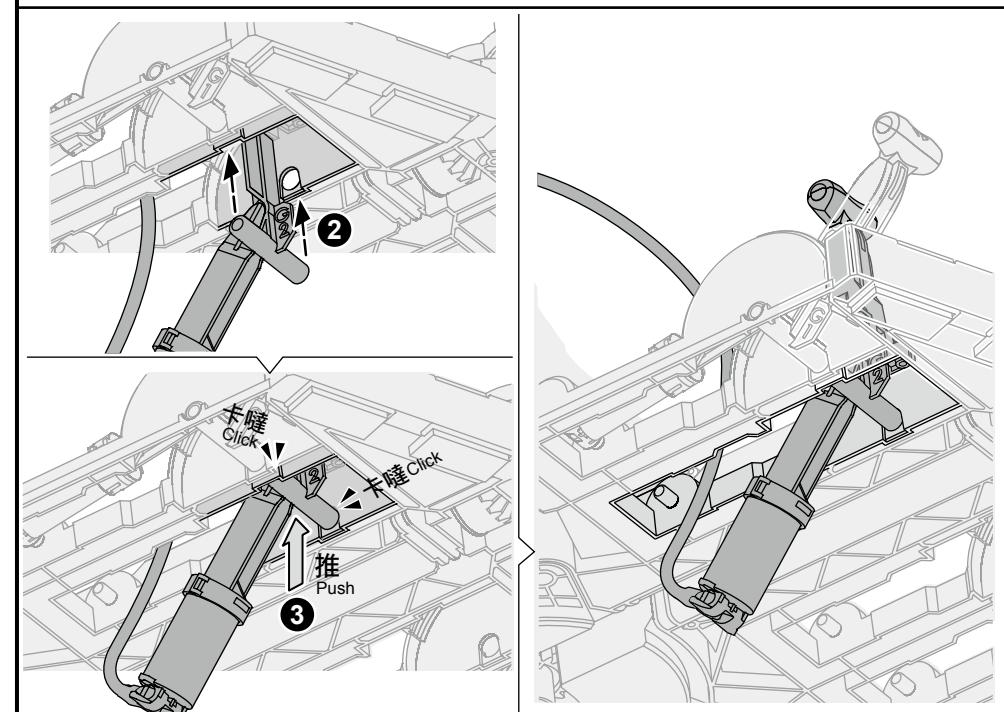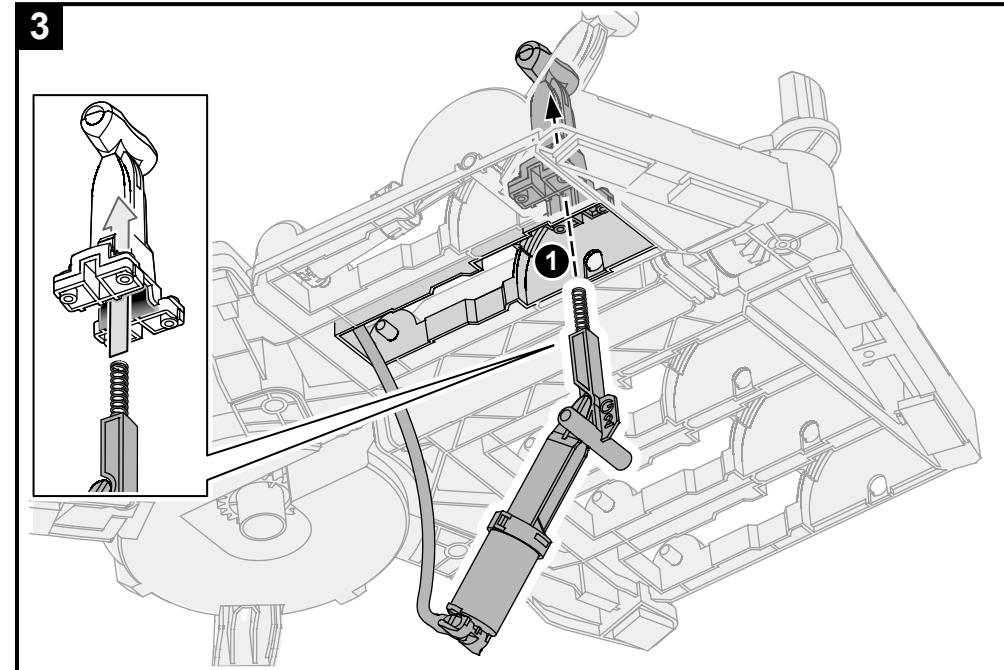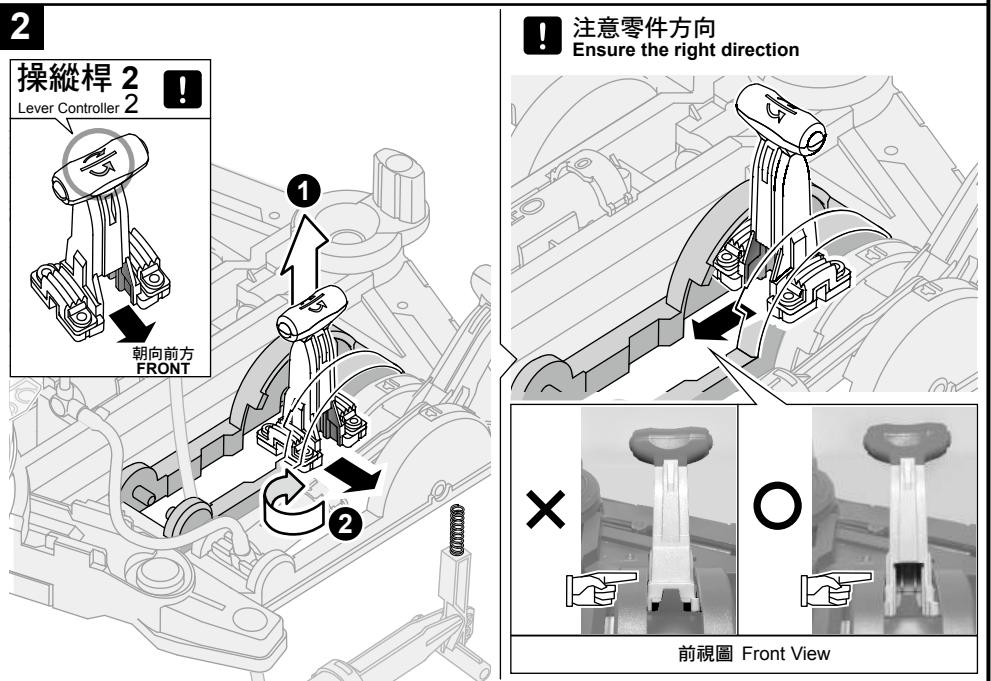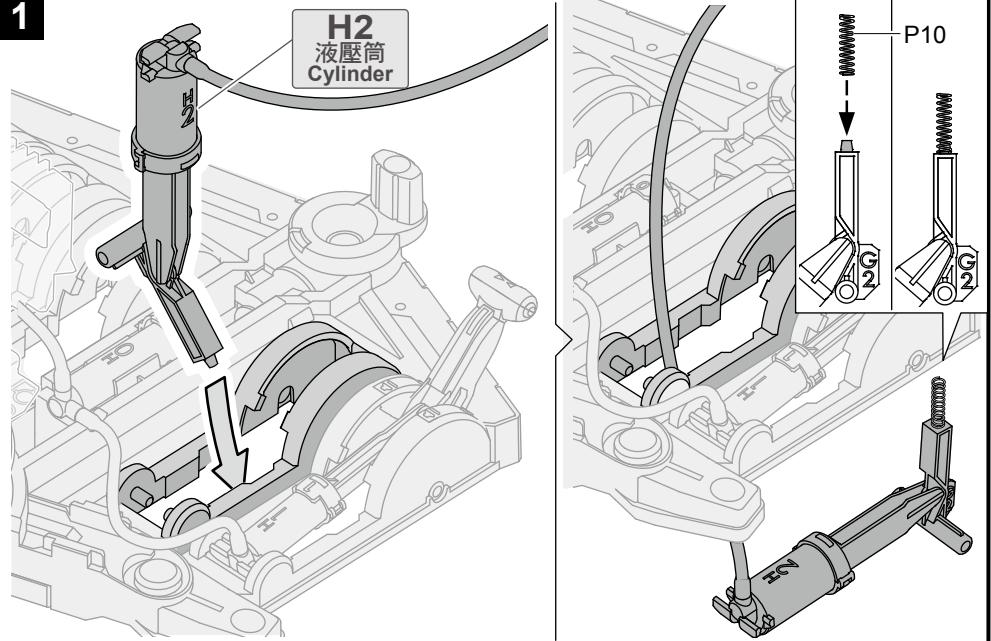


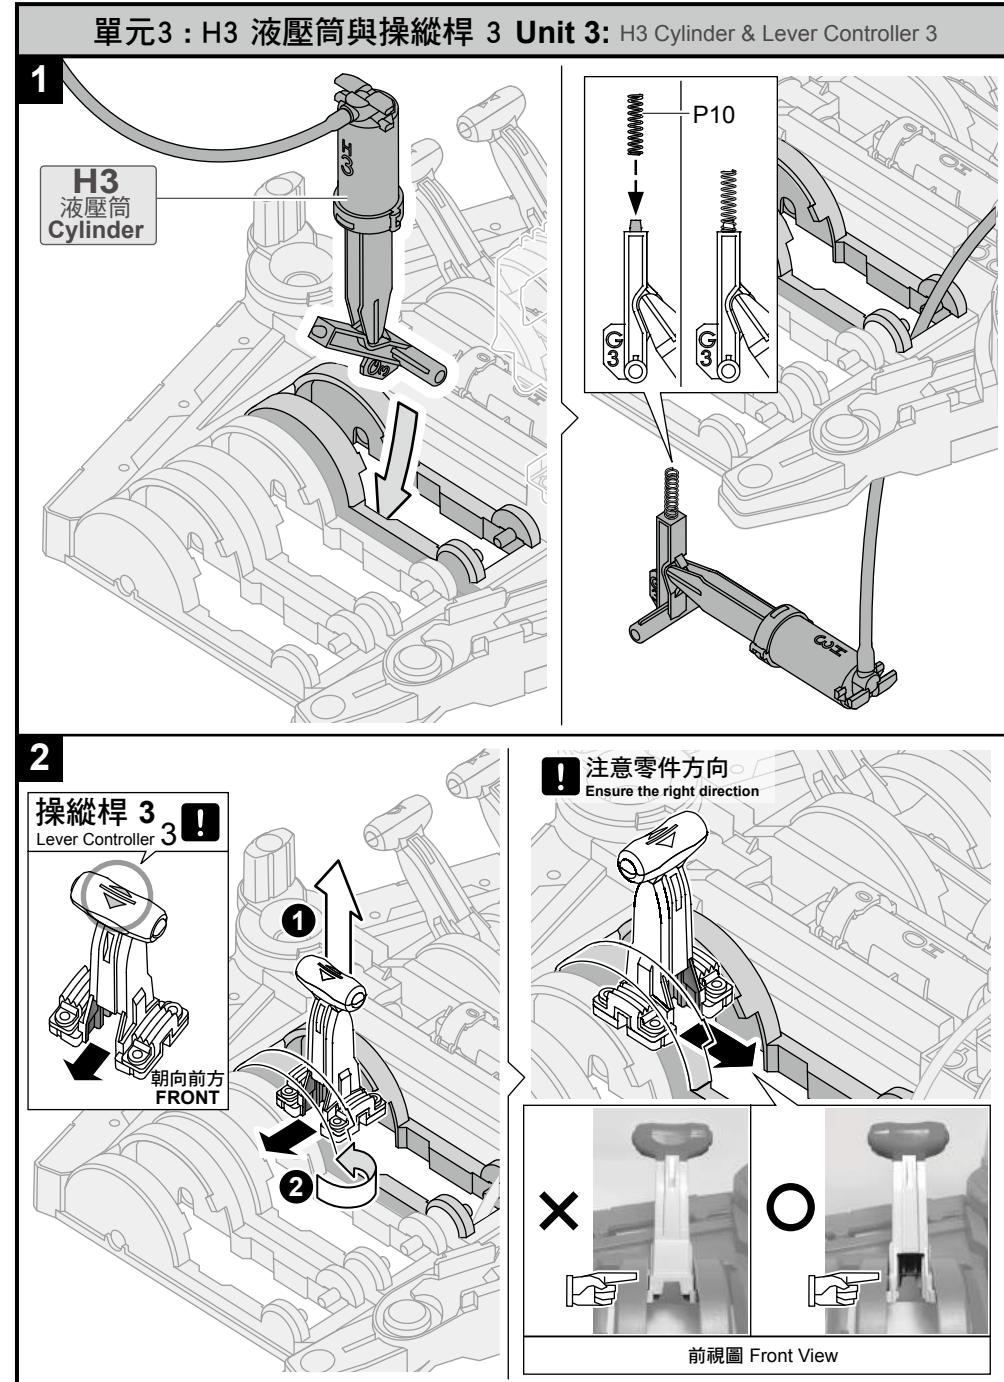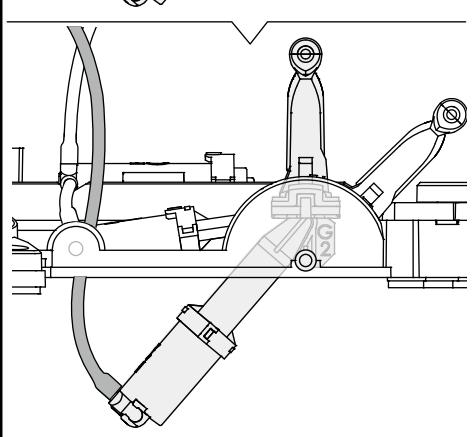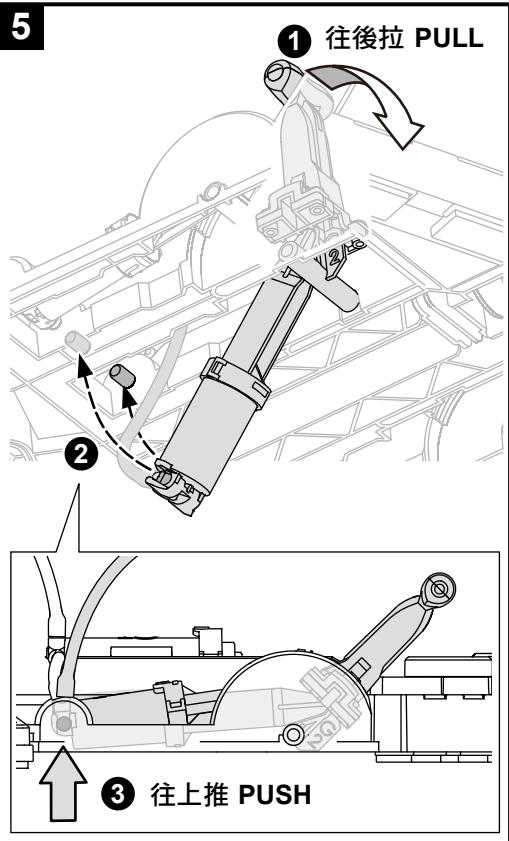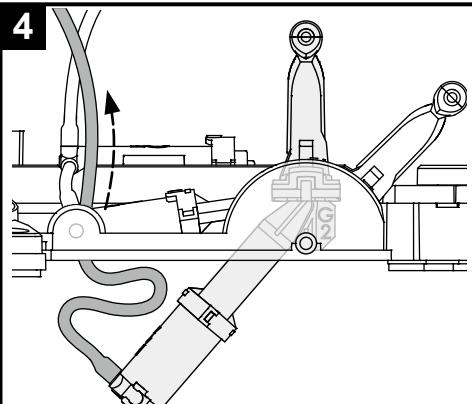

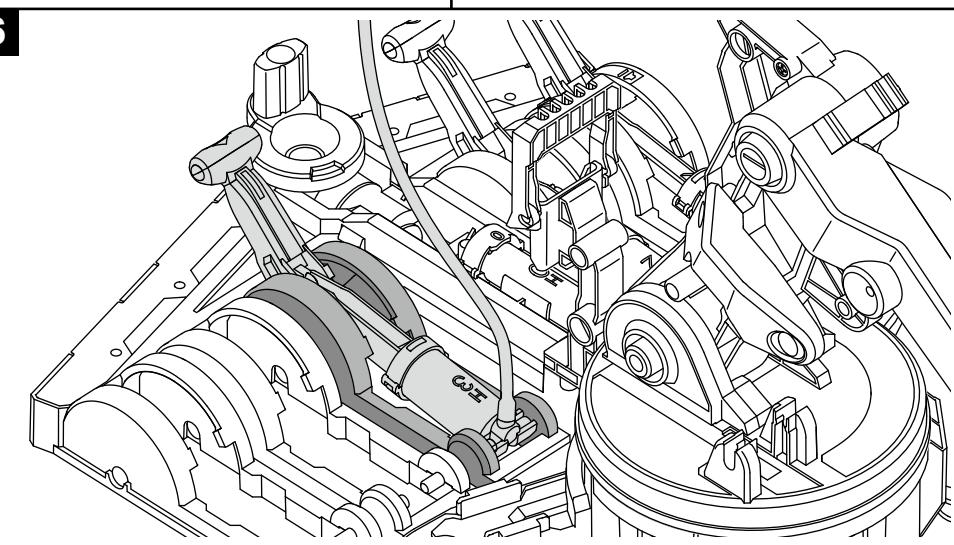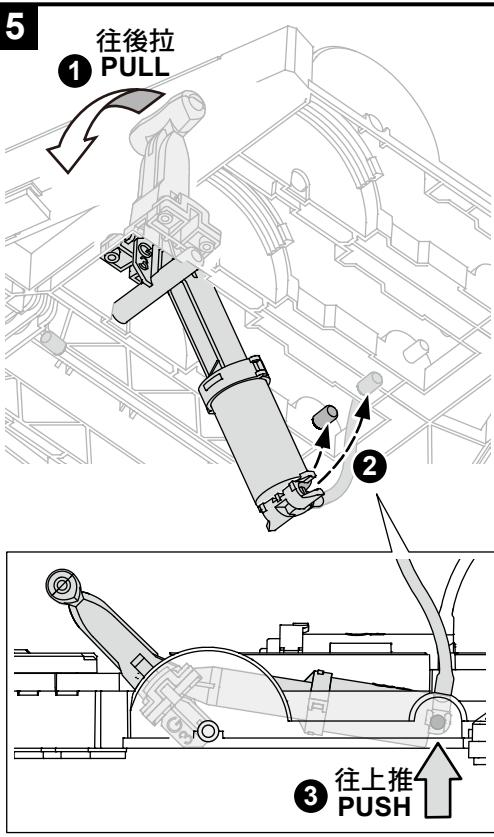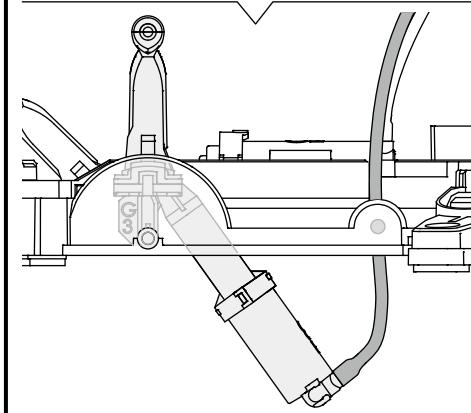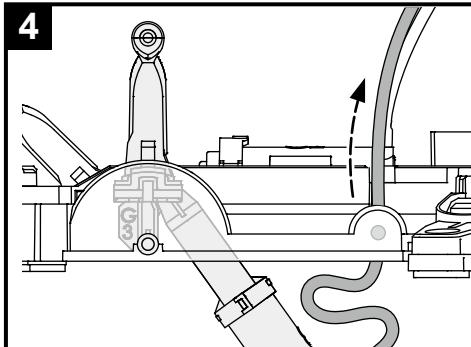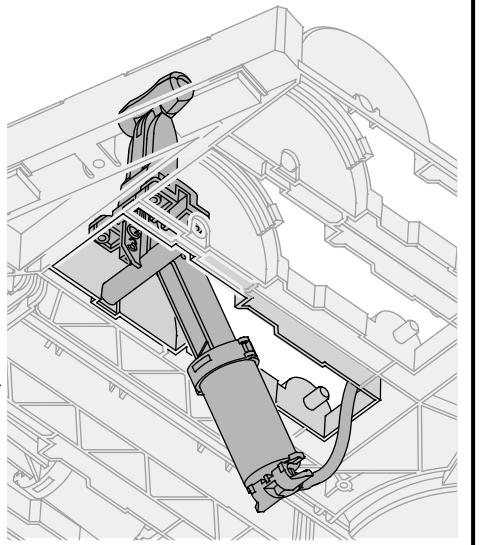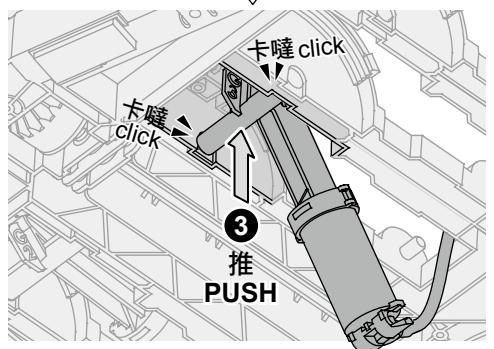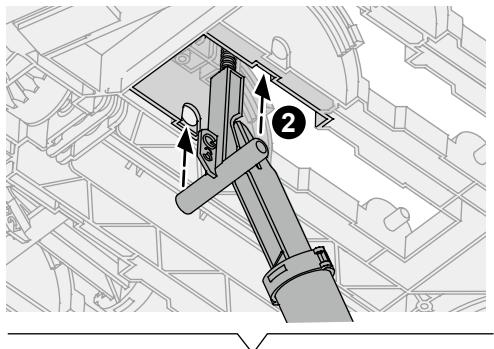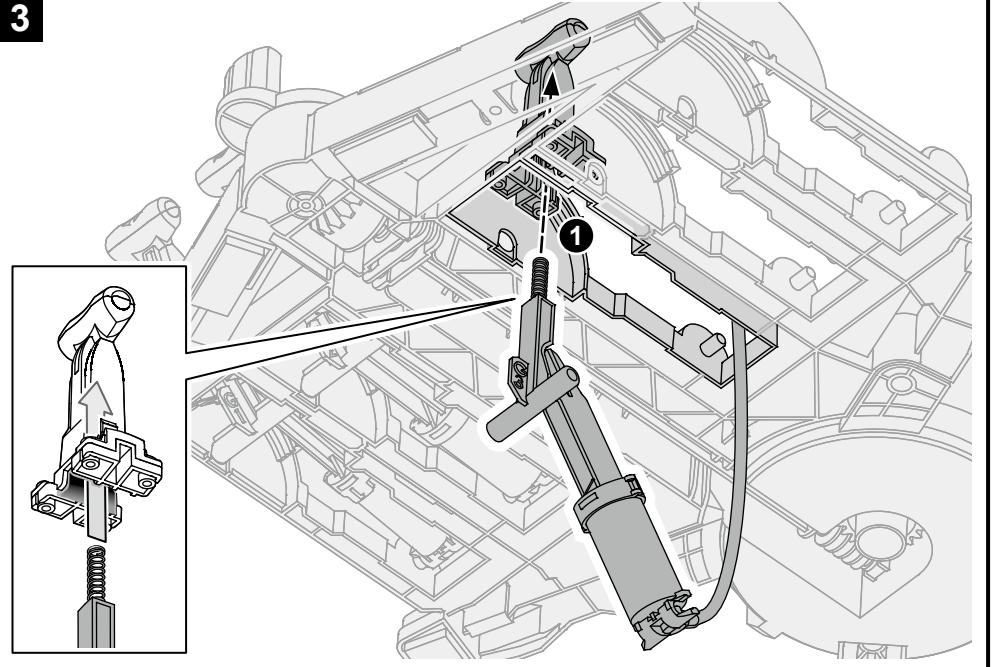


## 單元4 : H4 液壓筒與操縱桿 4 Unit 4: H4 Cylinder & Lever Controller 4


1

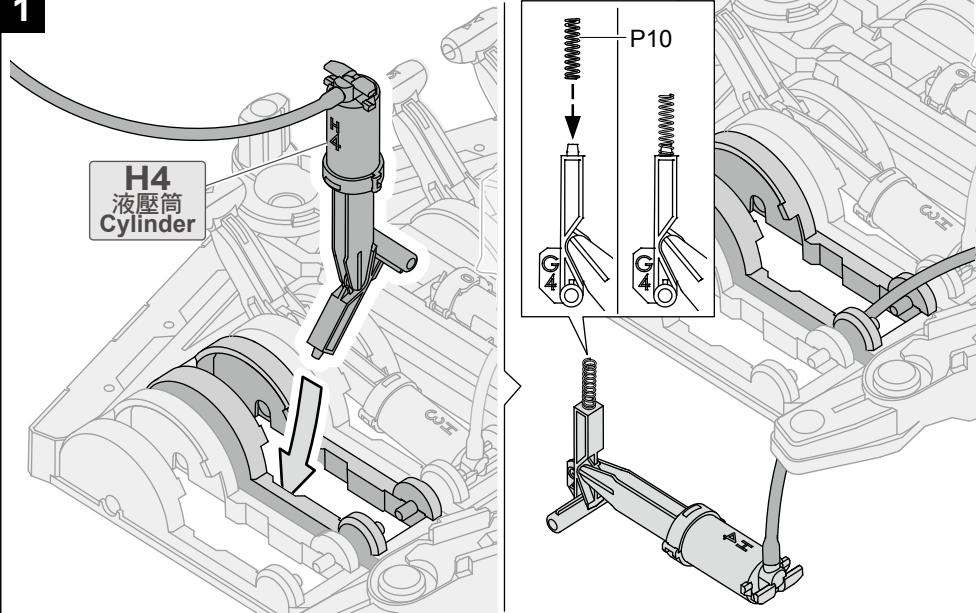


3

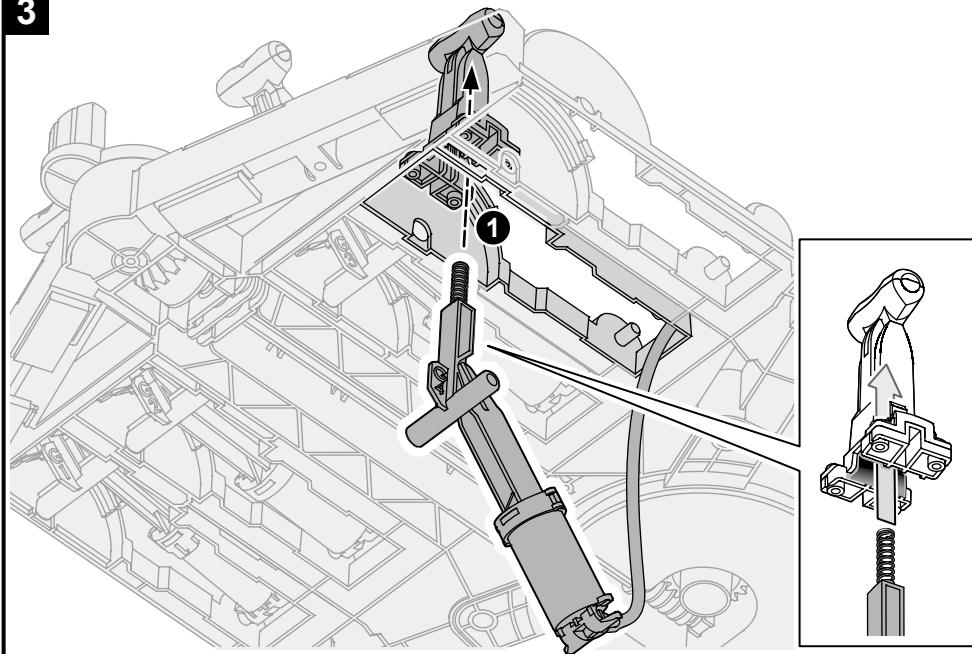


2

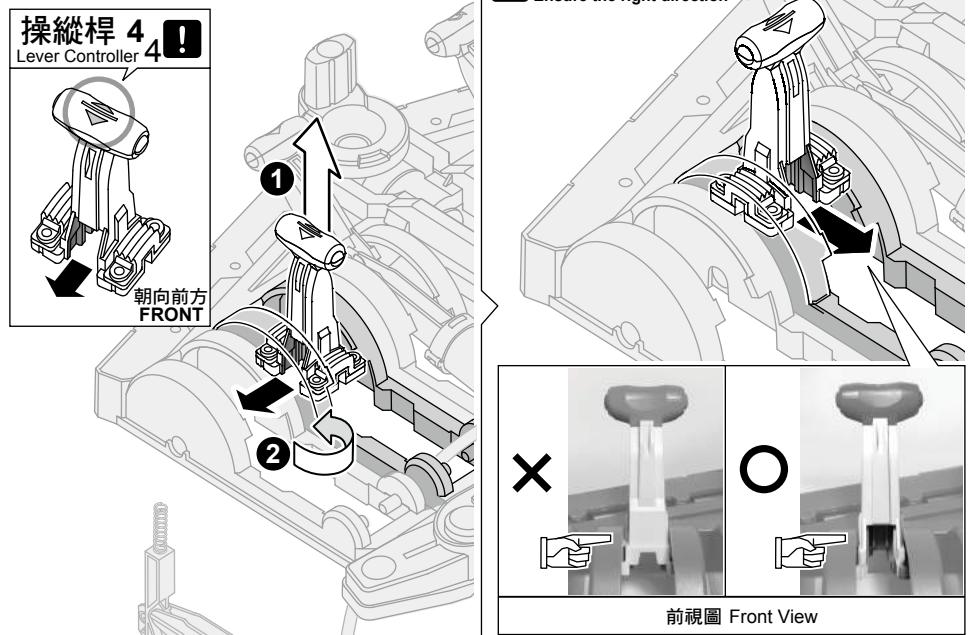


4

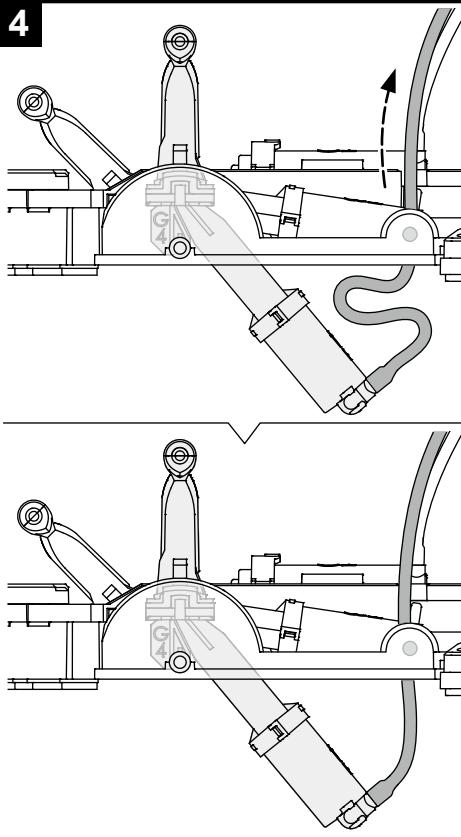

5


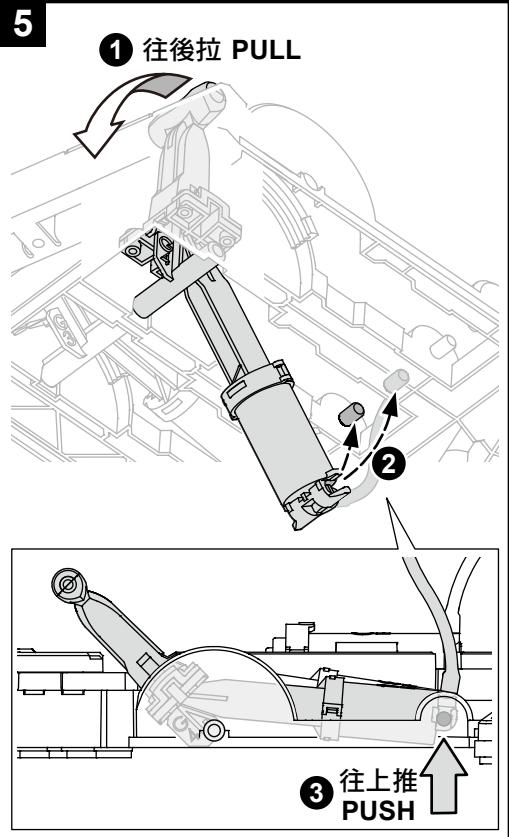


6




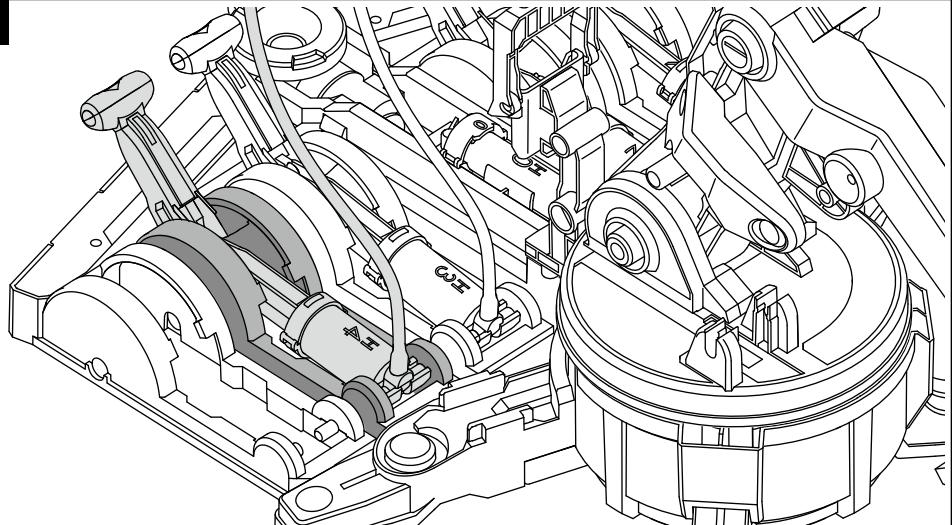


單元5 : H5 液壓筒與操縱桿 5 Unit 5: H5 Cylinder & Lever Controller 5





1

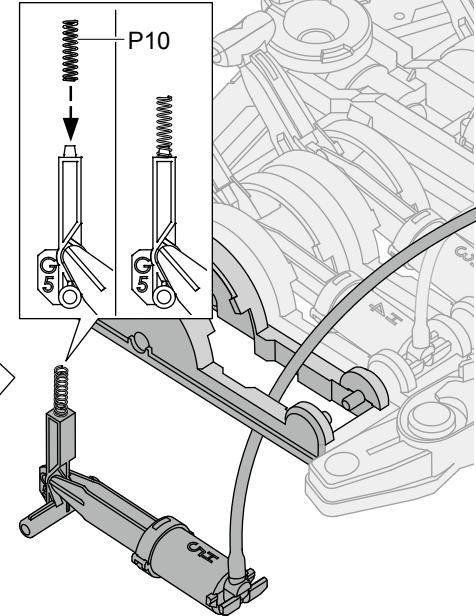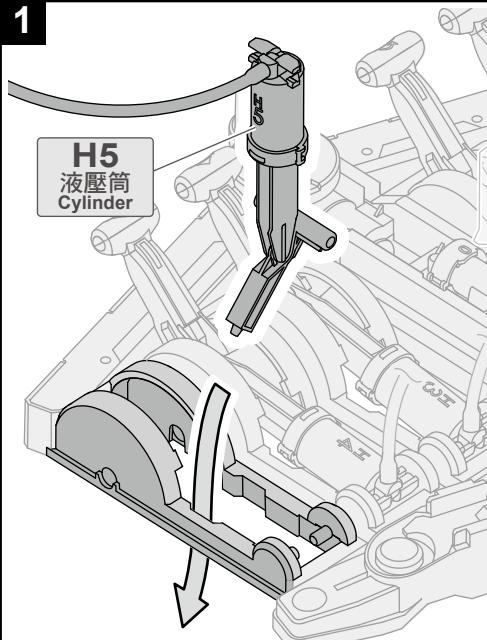

2

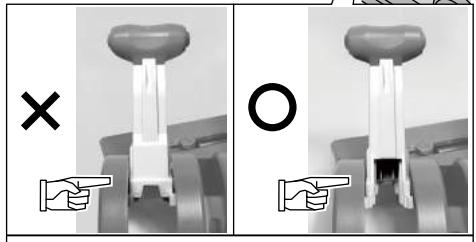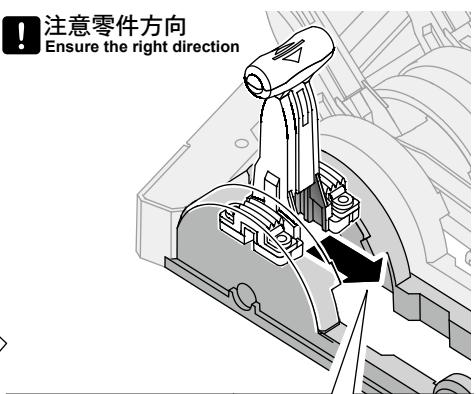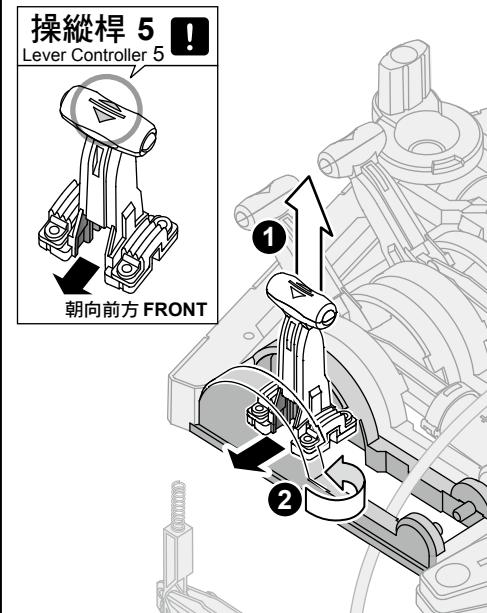
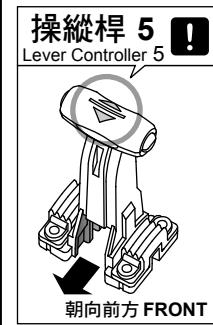


前視圖 Front View

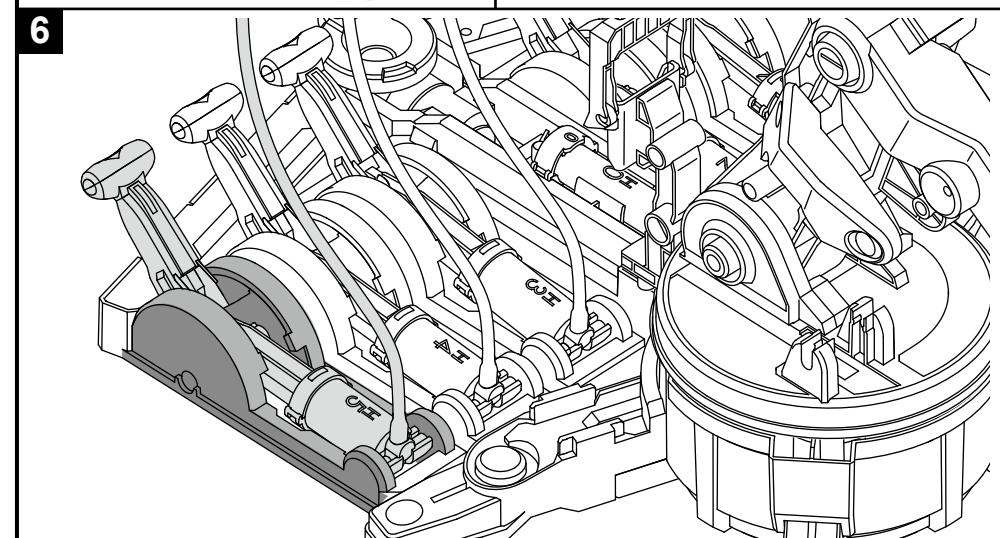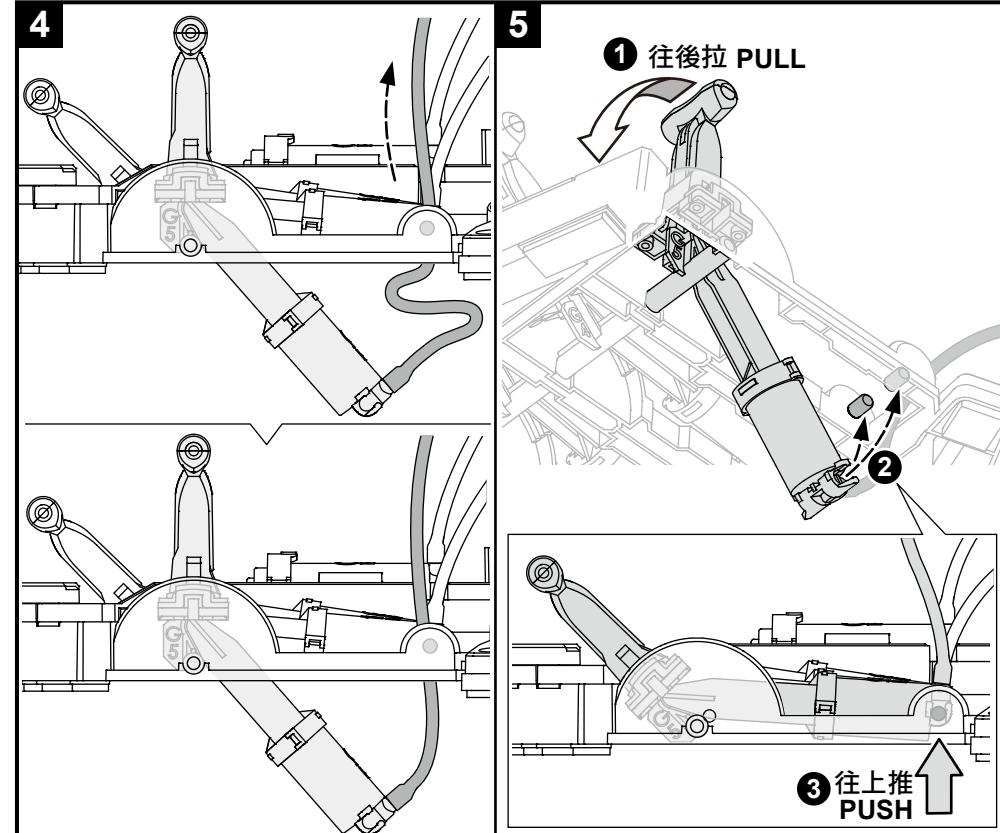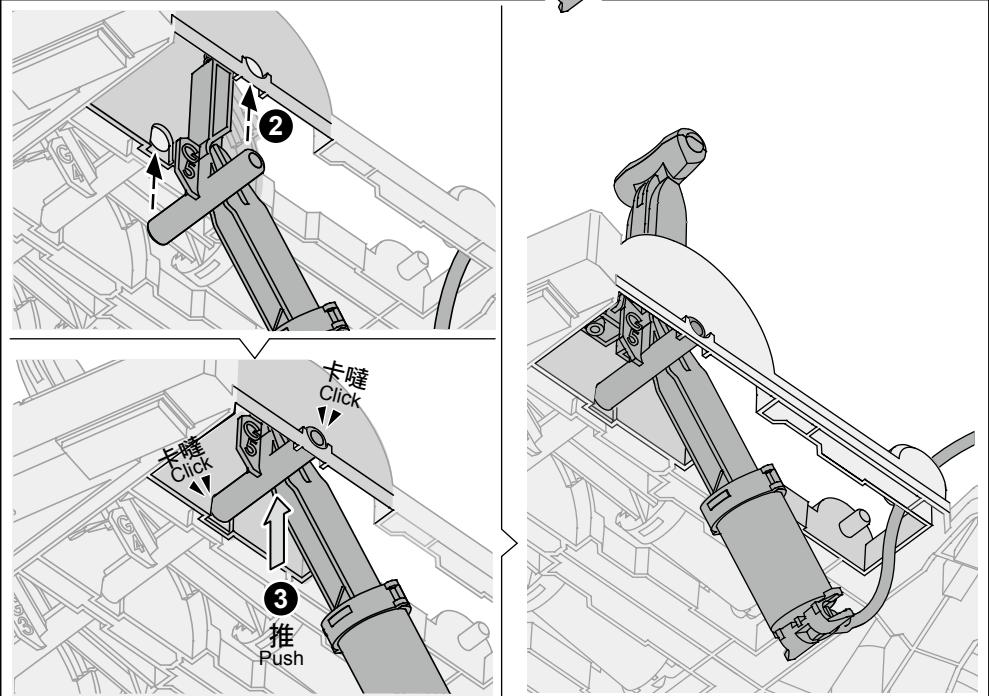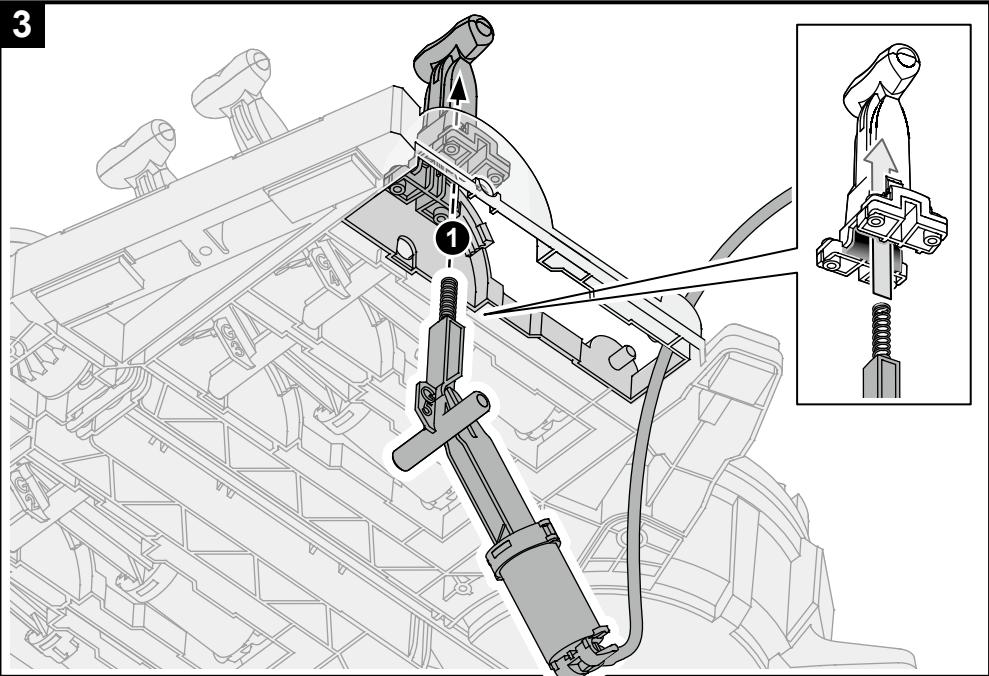


## 液壓筒與手臂組裝 Robot Arm Module Assembly


1

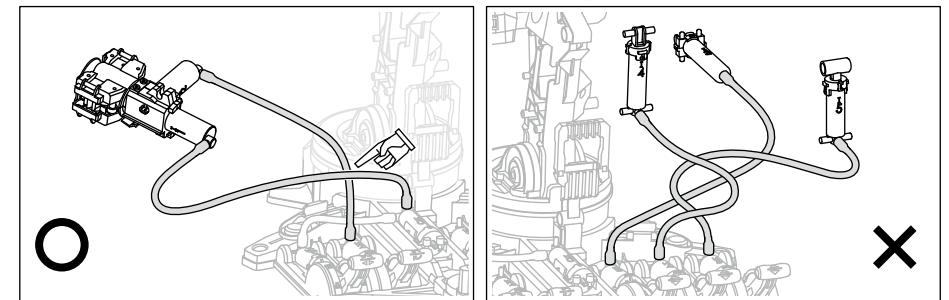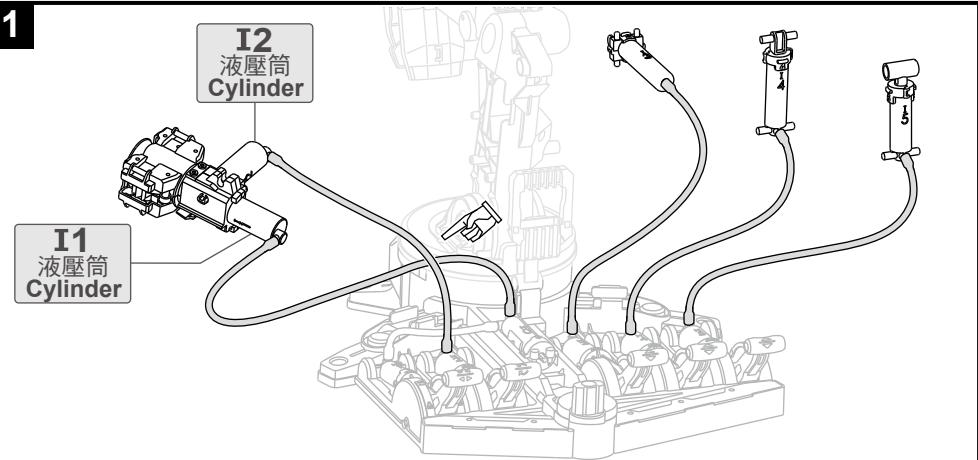


2

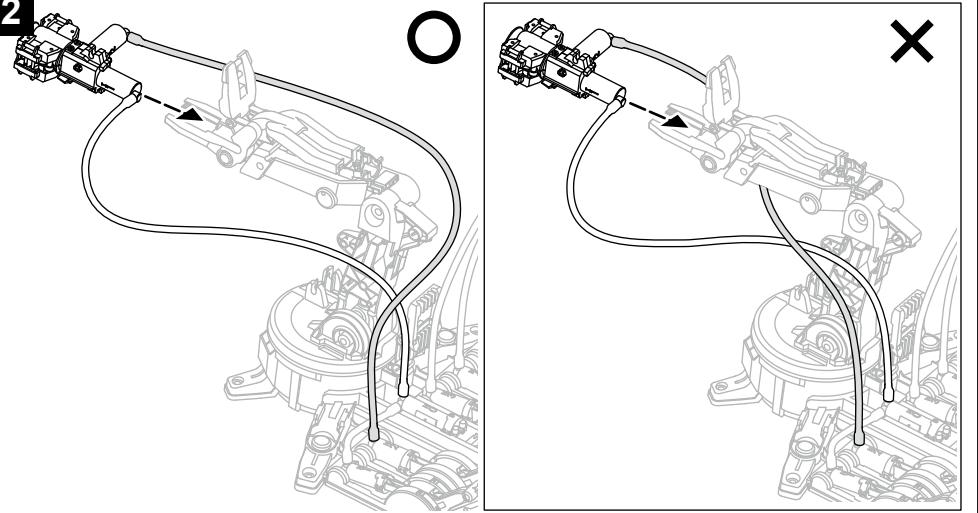


3

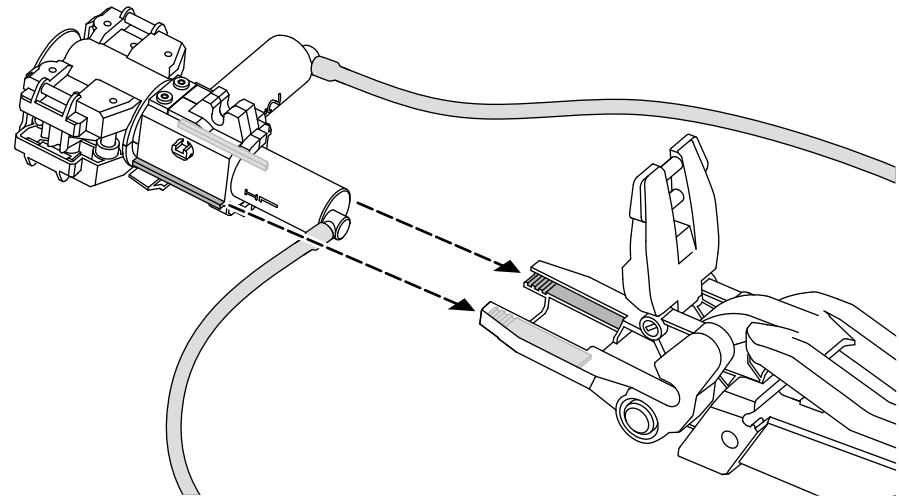


4

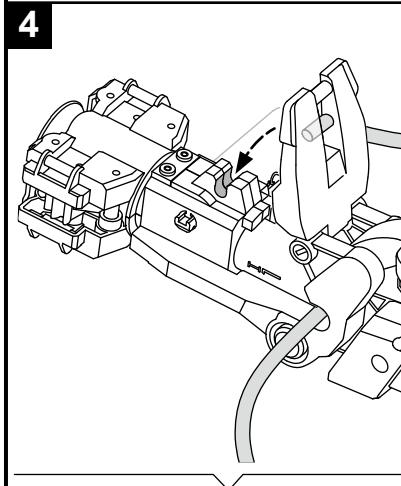











5

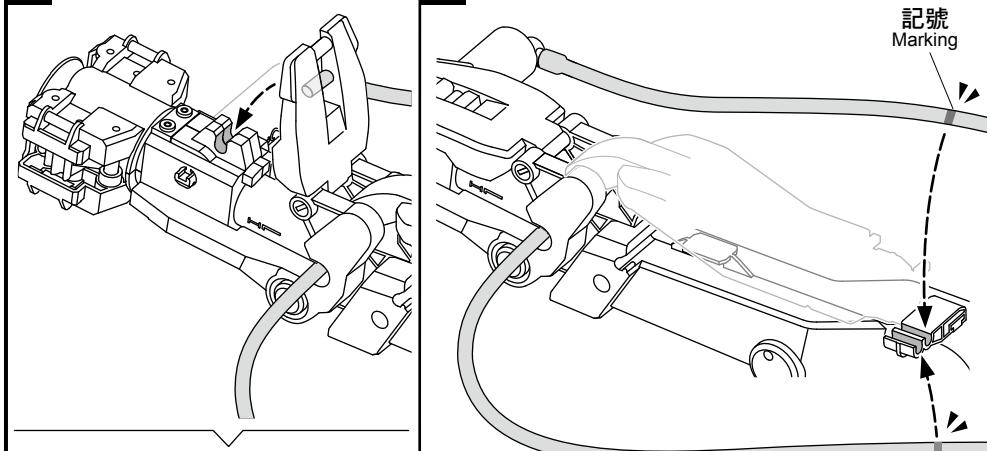


記號  
Marking

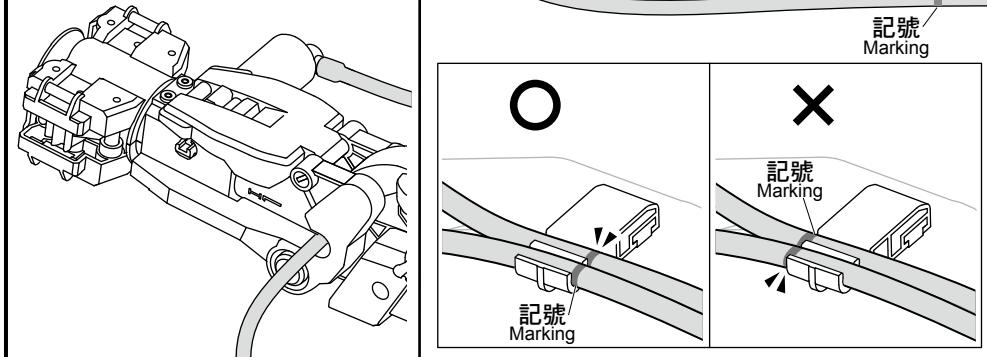


**6 將軟管卡入線槽**  
Set the soft tube in the groove.

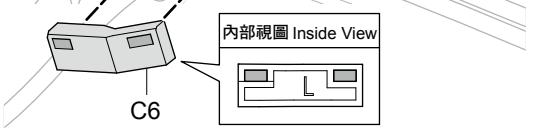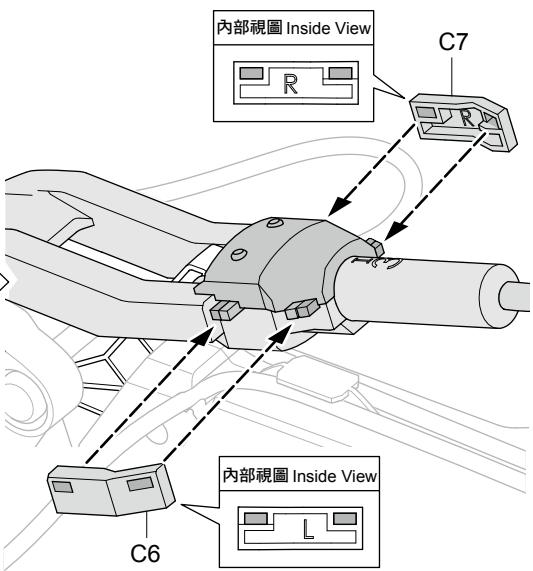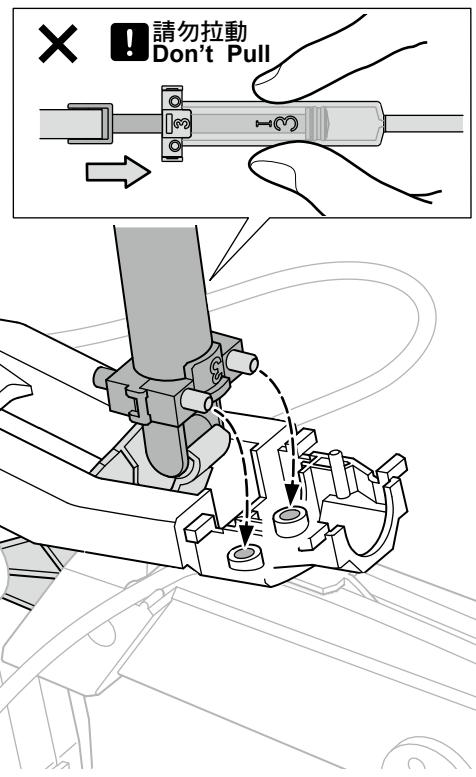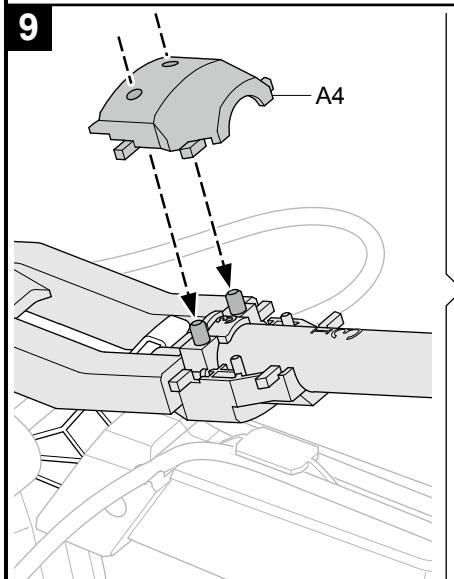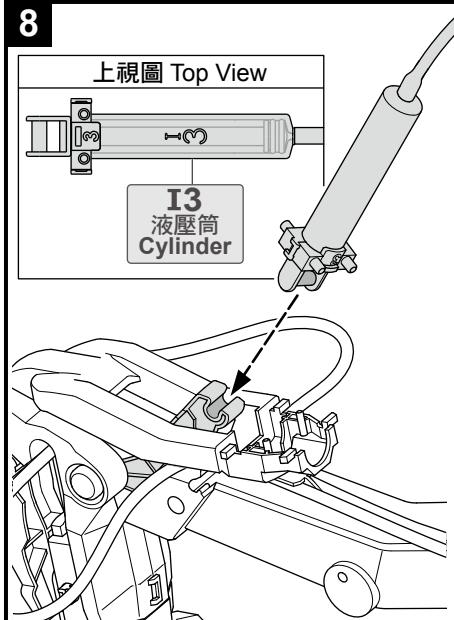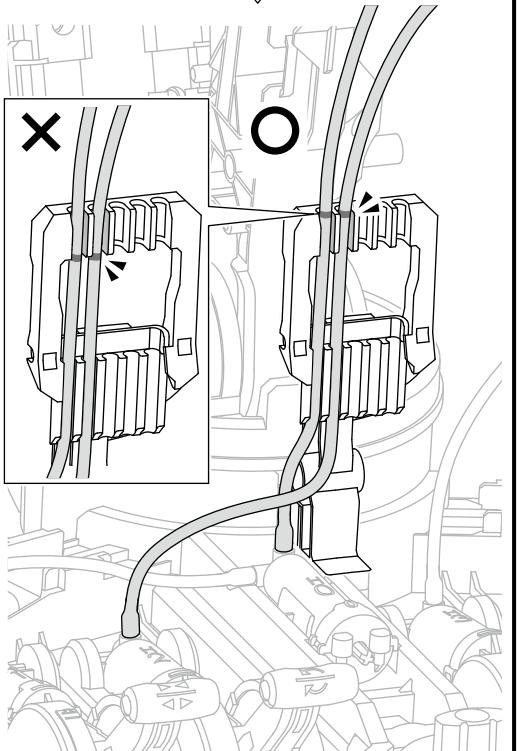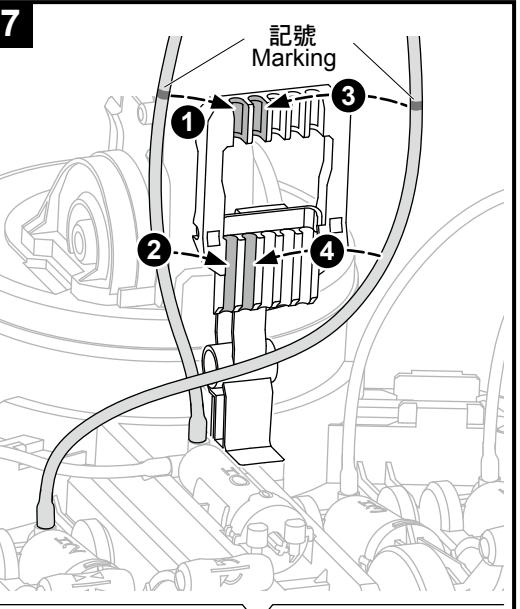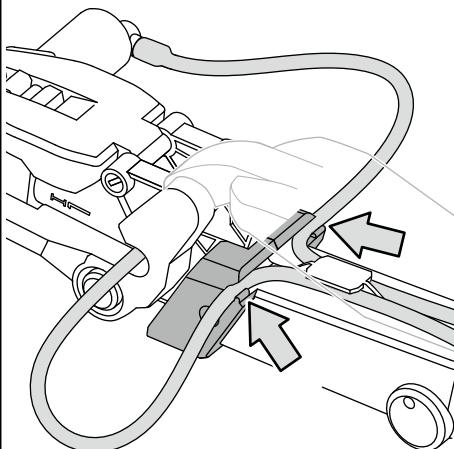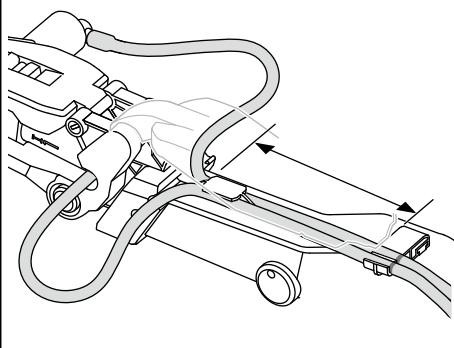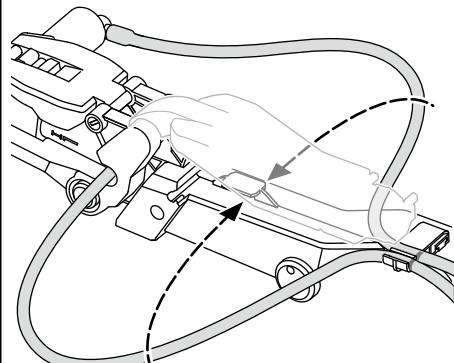

10

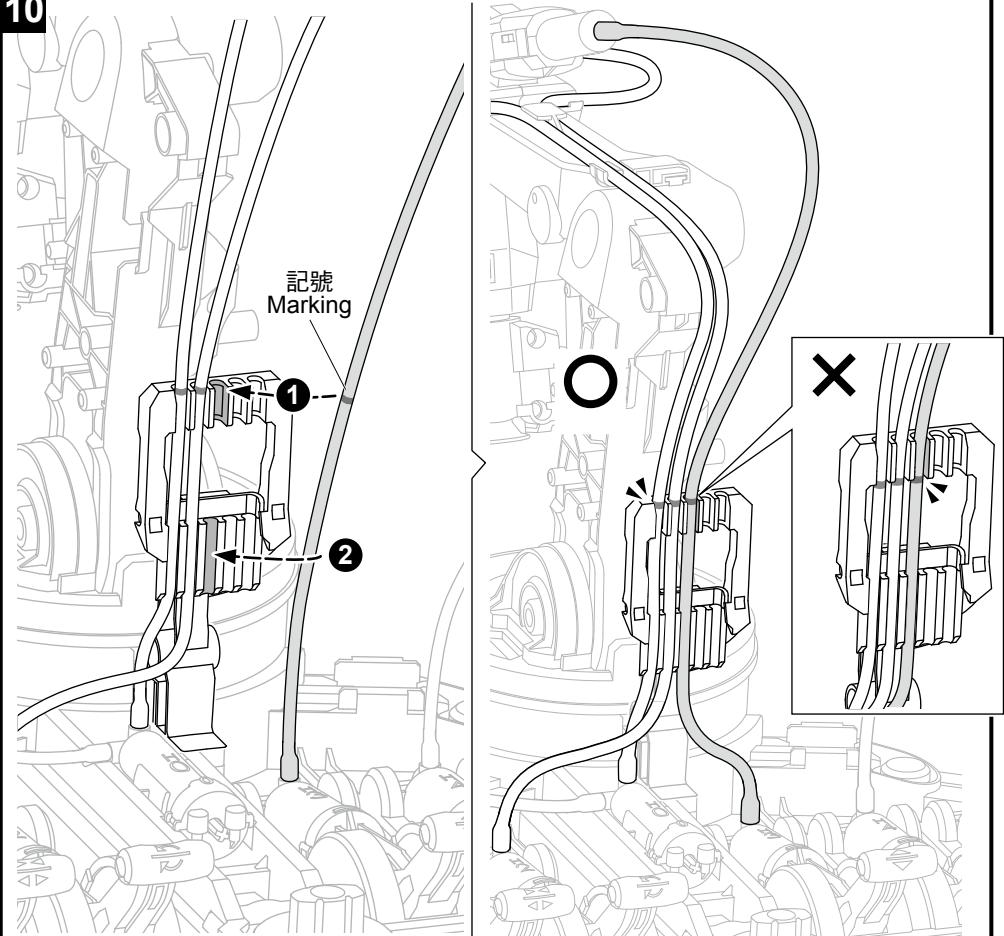


11

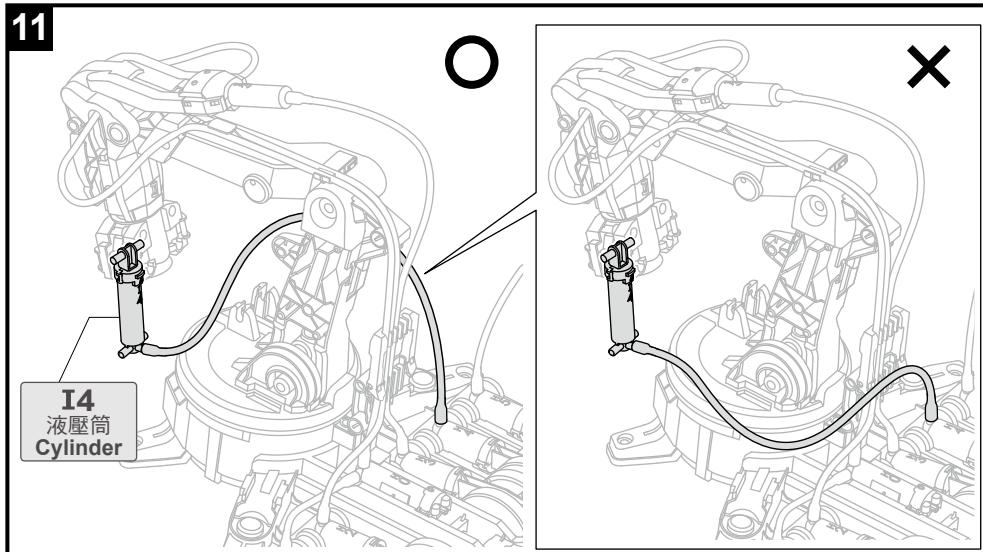


12


① 注意零件方向  
Ensure the right direction

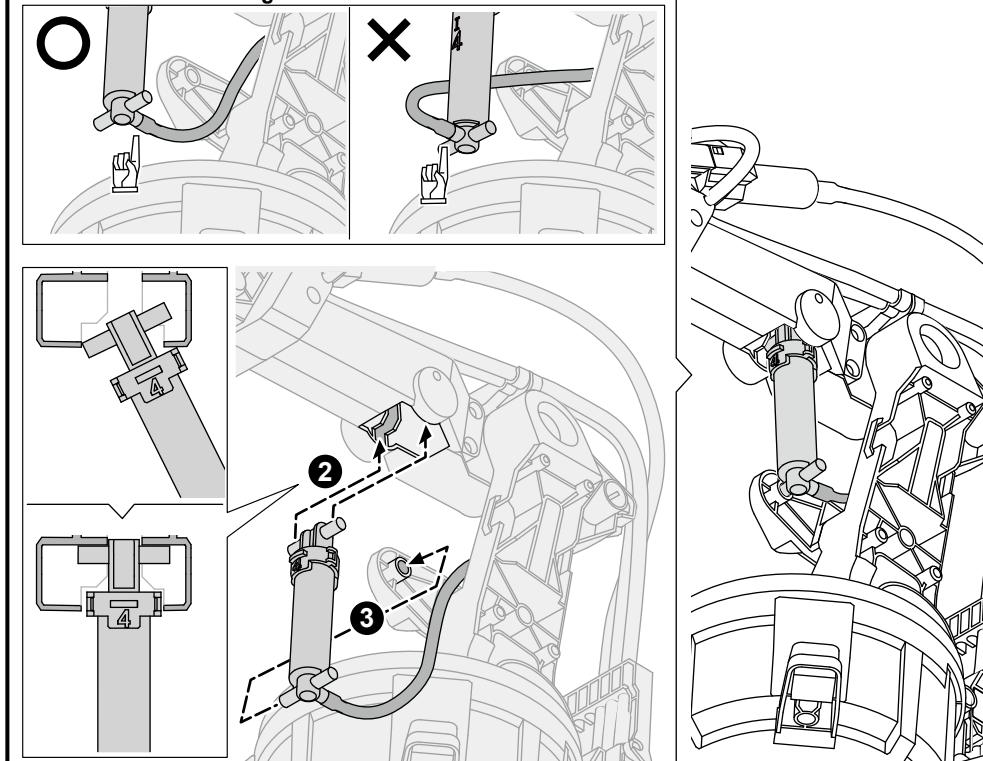


13

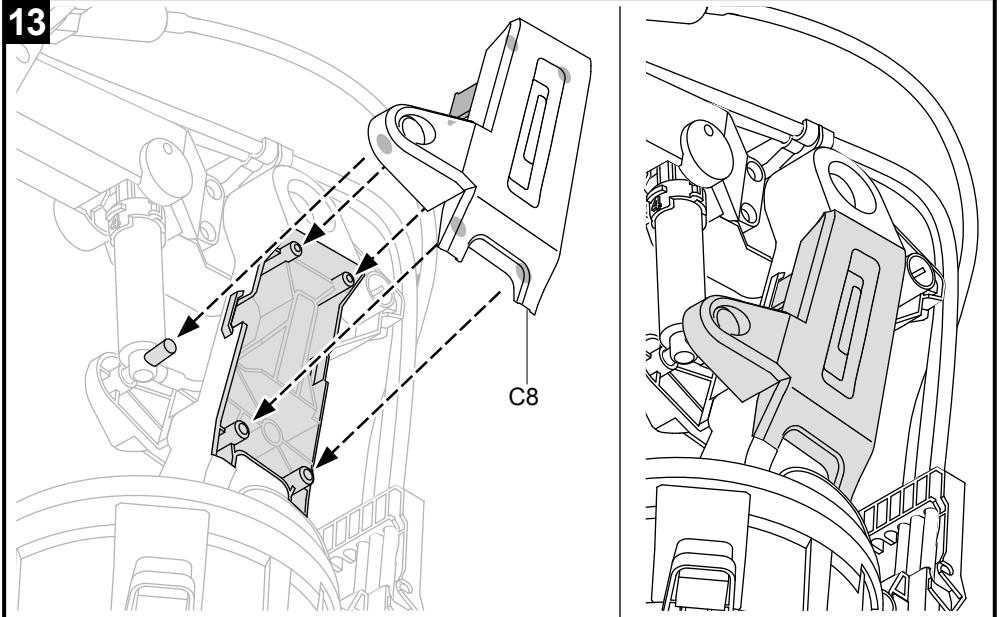


14

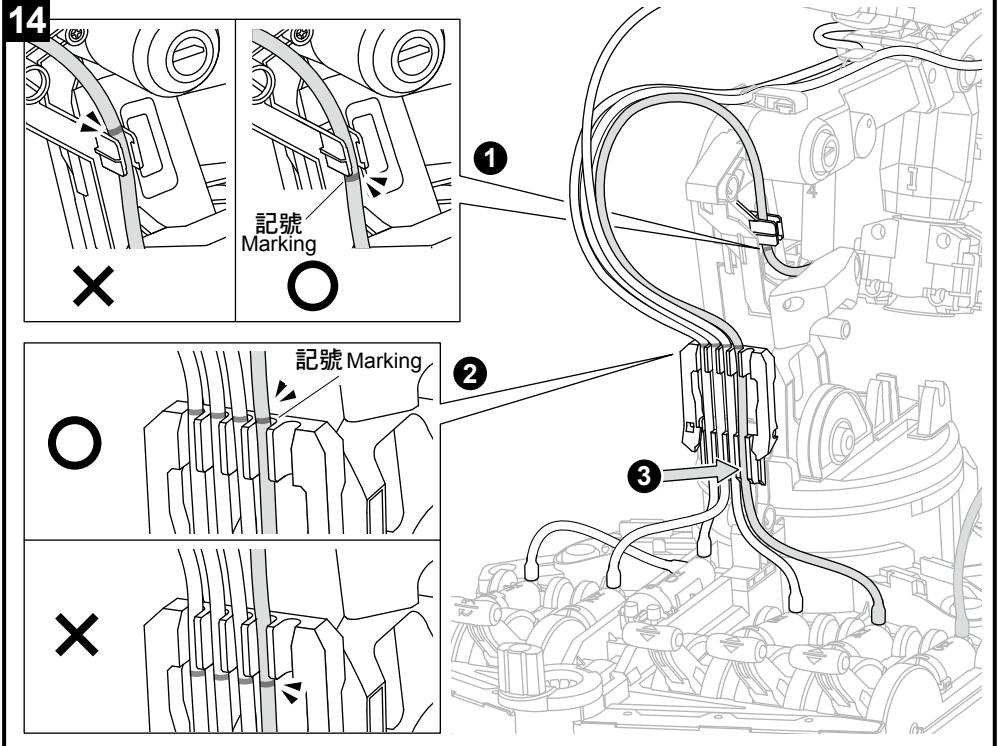


15

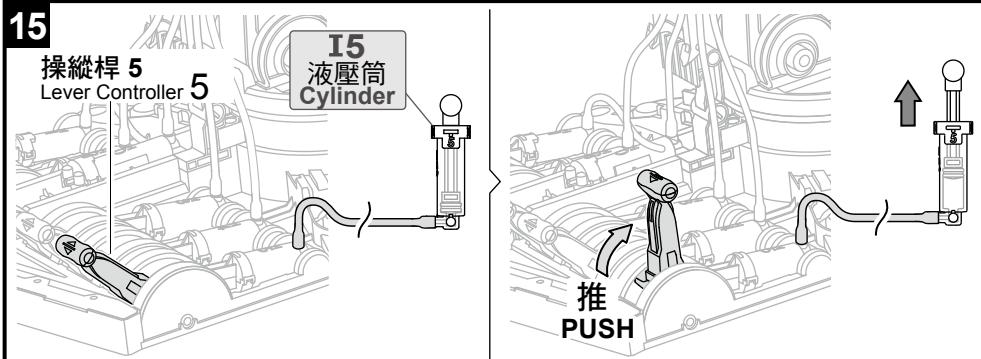


16

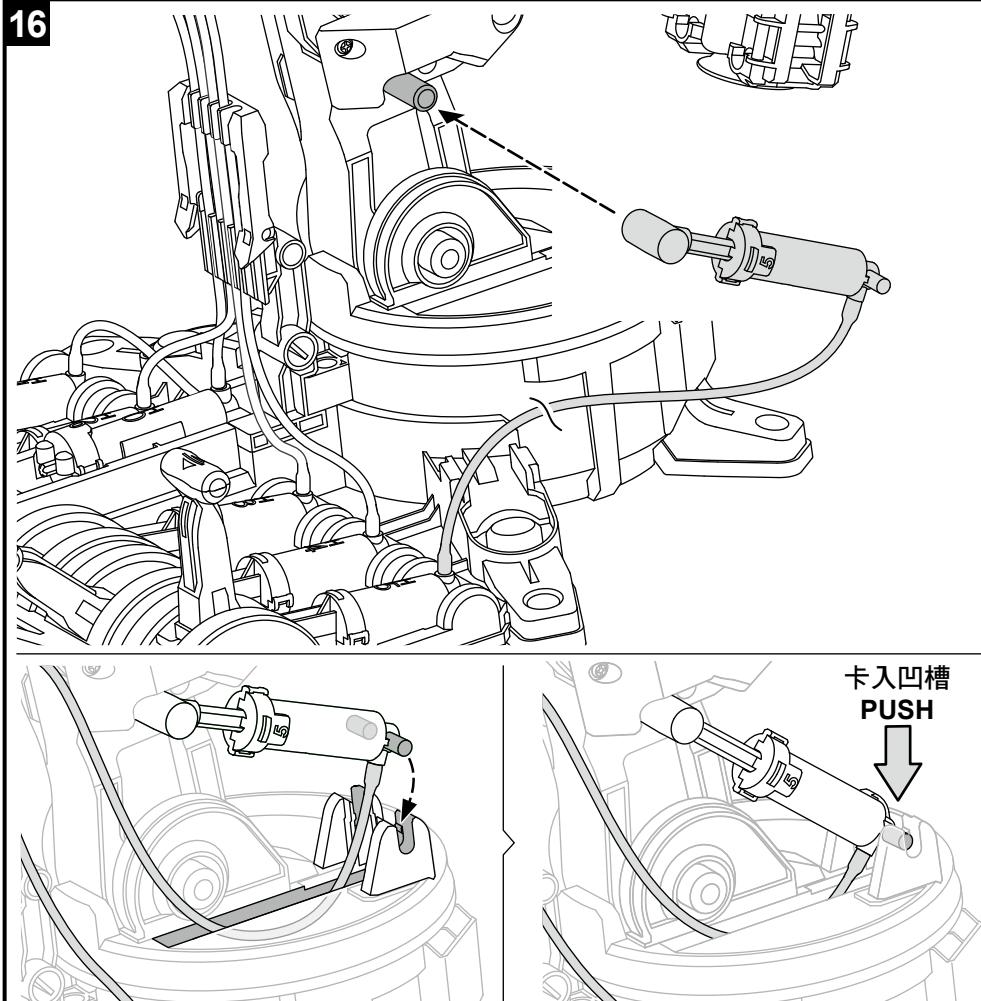



17

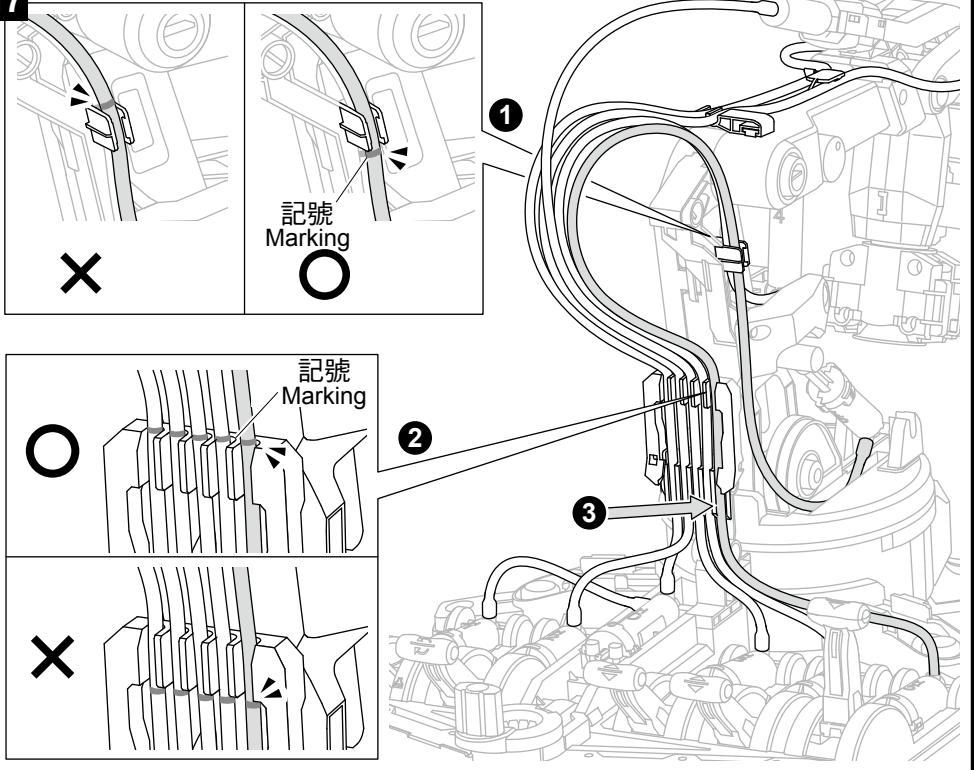


18

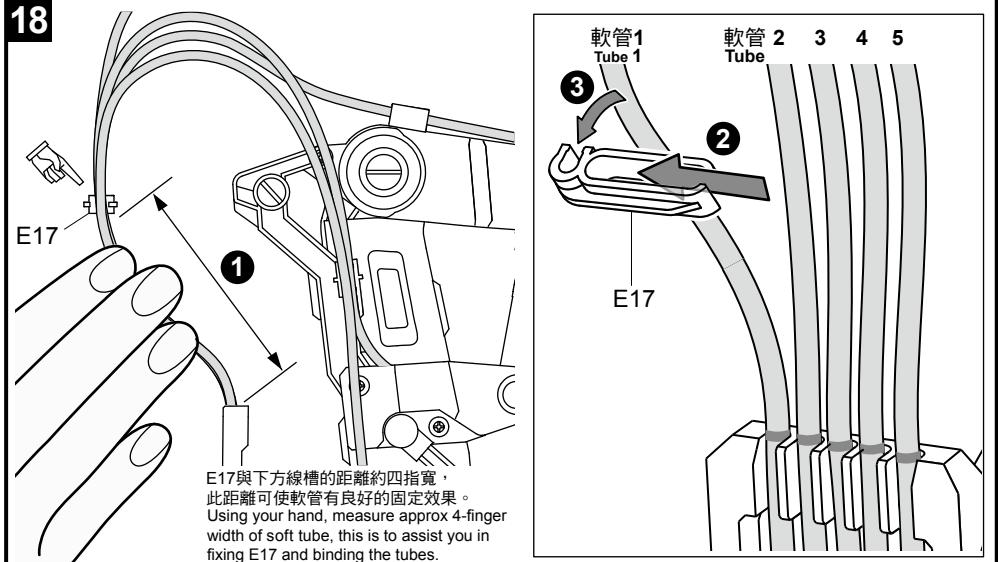

19

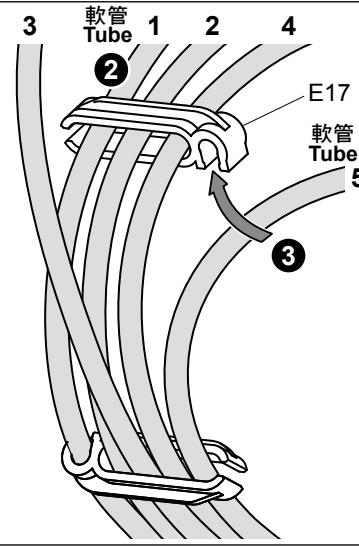
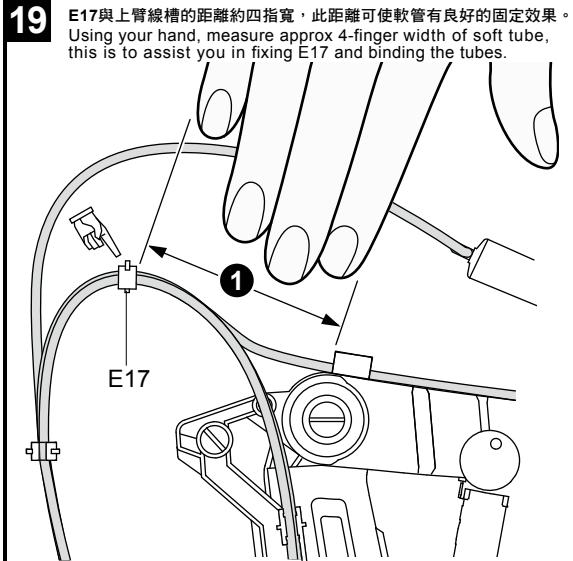


20

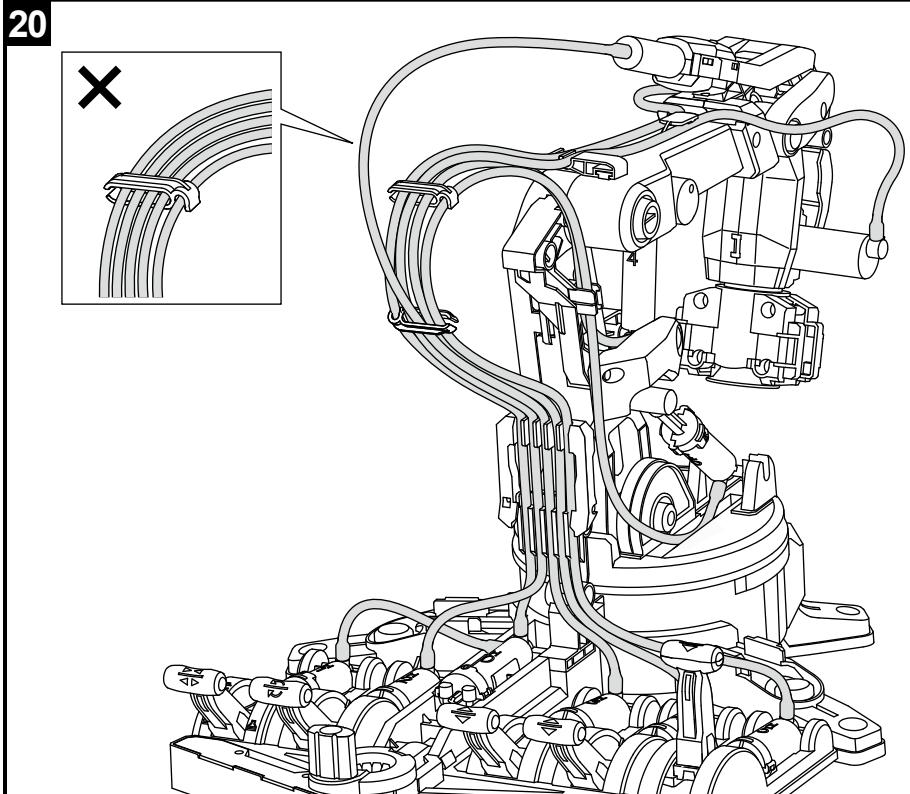


## 操作方式 How To Play

### 注意事項 Warning


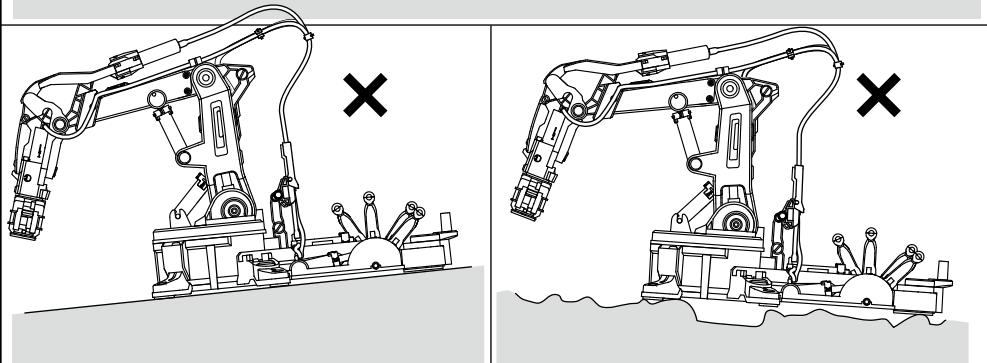
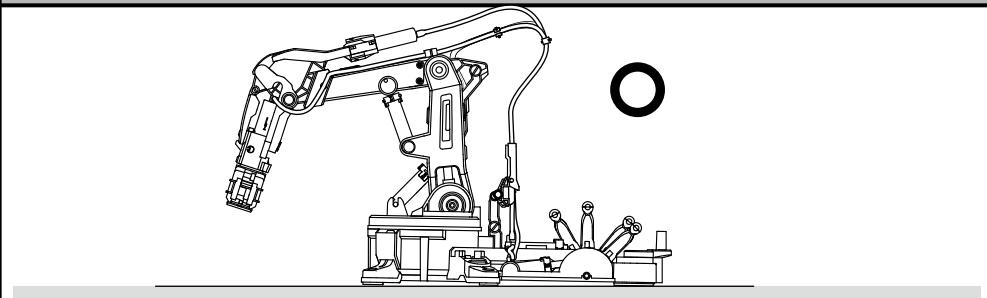


注意! 請放在平整面上操作  
Operate on a smooth and level surface.

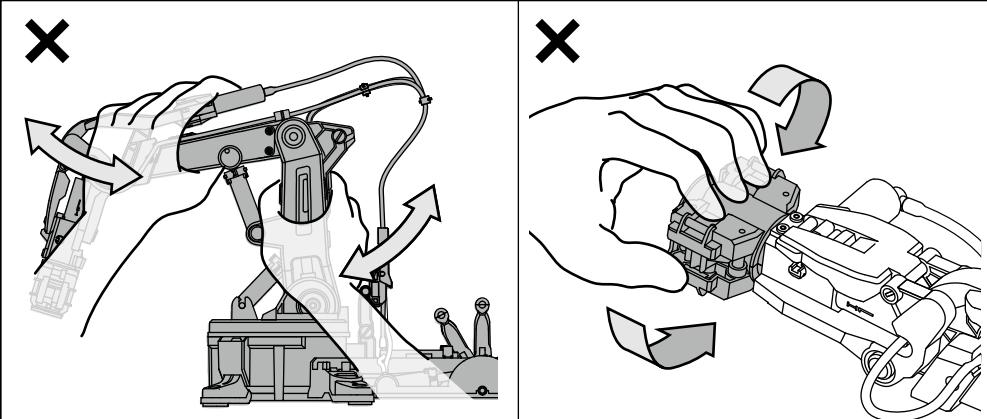







請使用操縱桿控制手臂! 請勿像上圖錯誤操作!  
Handle the arm with care and do not mistreat as shown above

## 操作方式 : 2~6軸 How To Play: 2~6 AXES

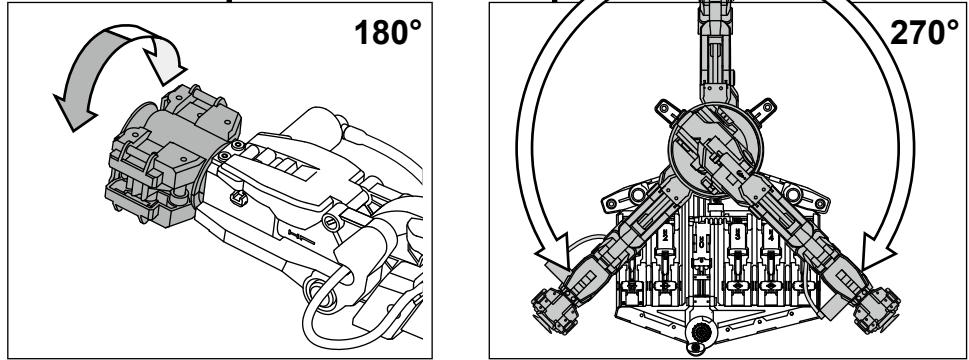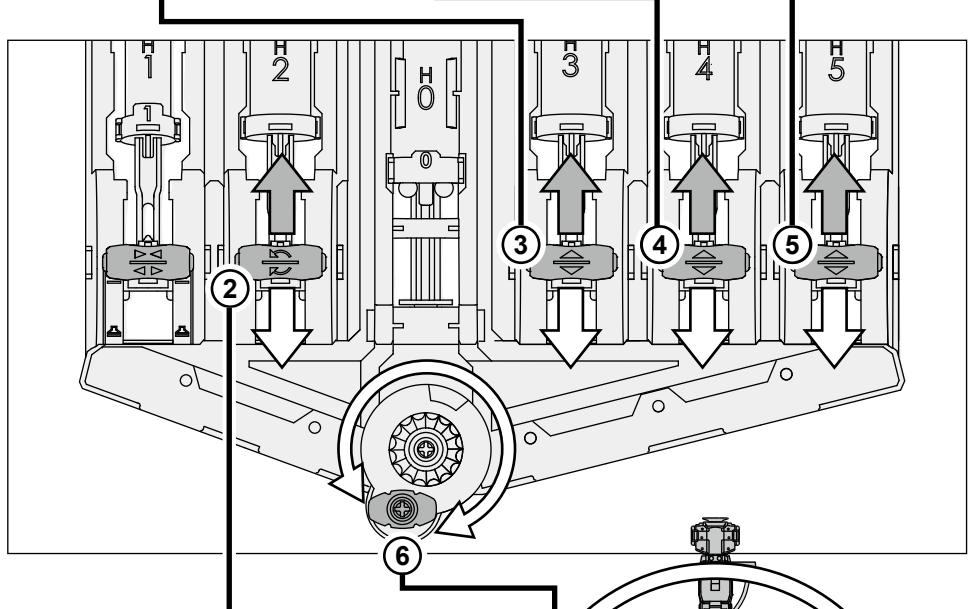
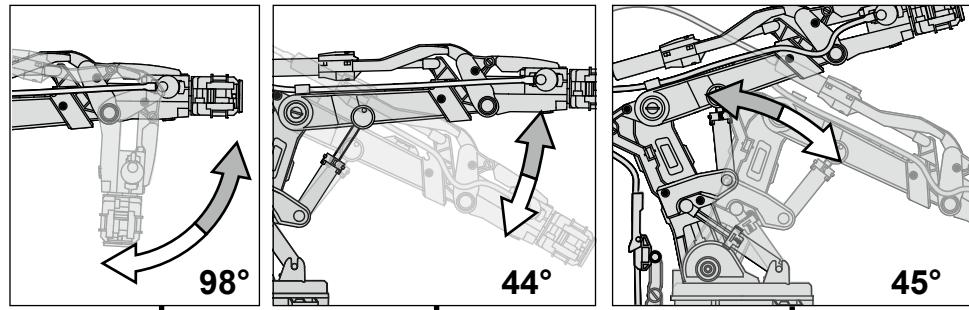


## 如何操作夾頭 How To Play-Gripper Mode

### 1 安裝夾頭 Installation

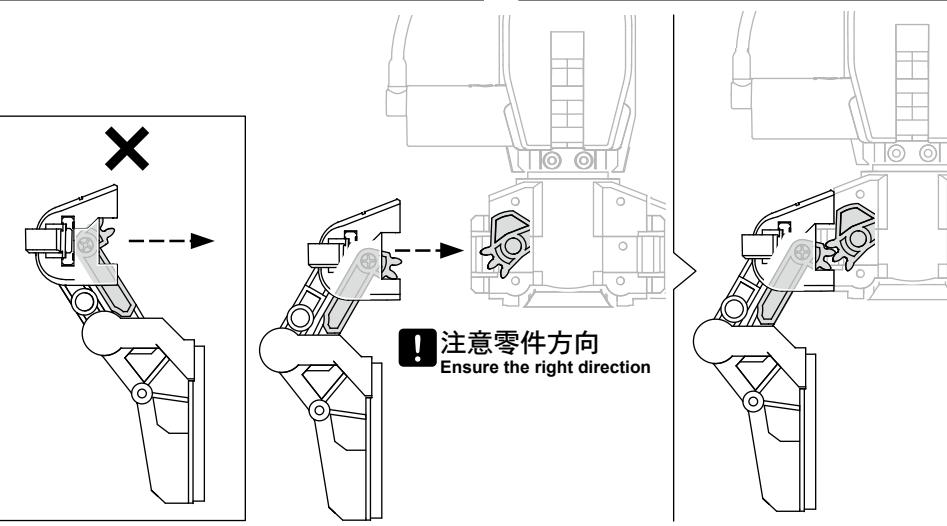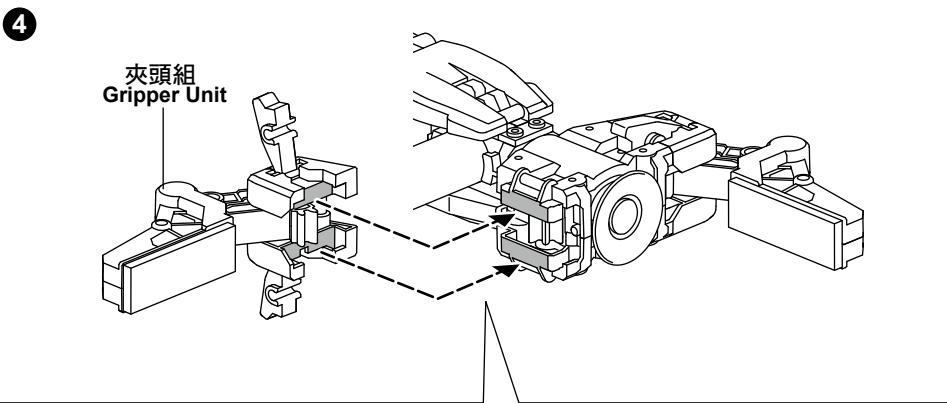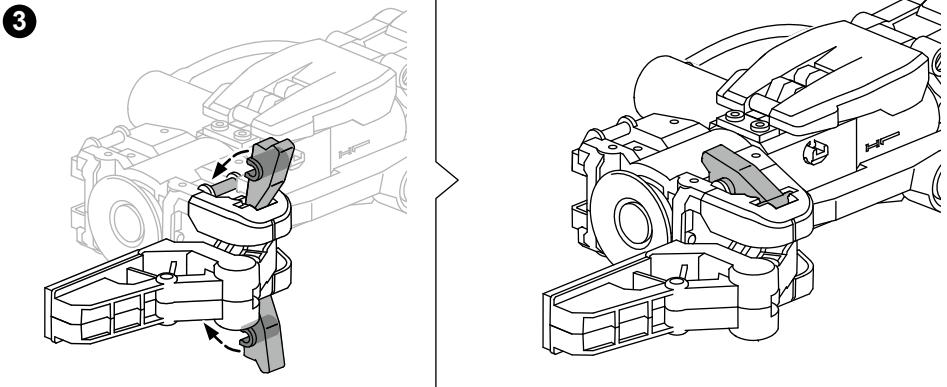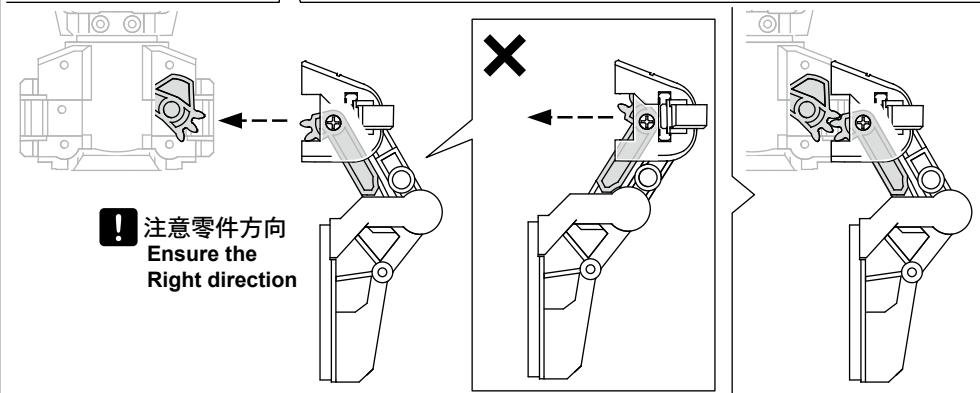
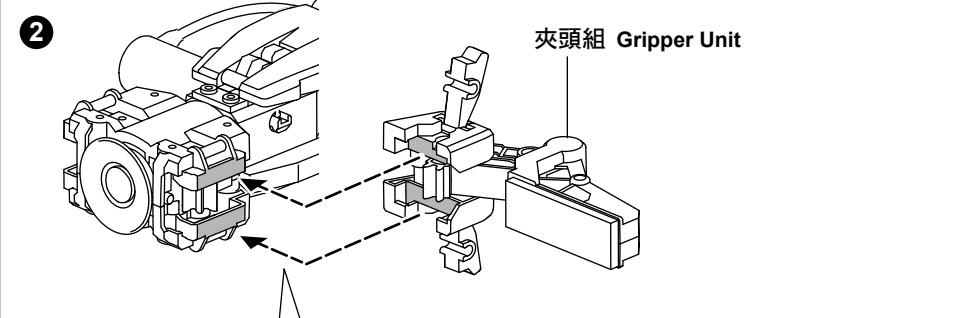
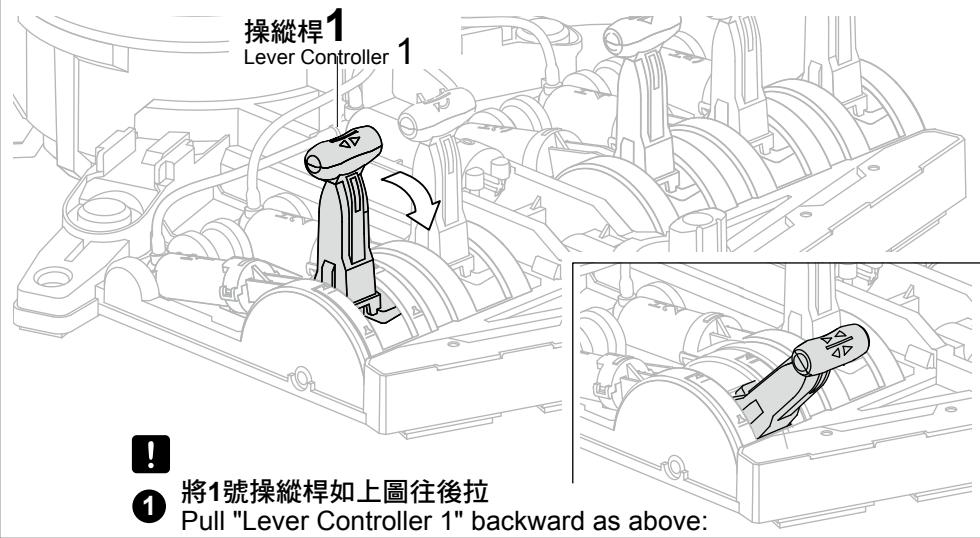


5

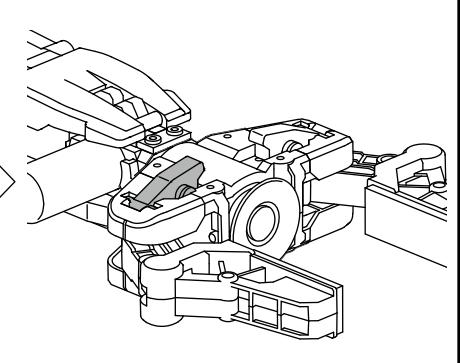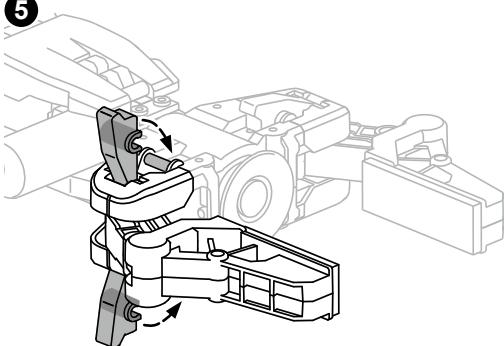

2

**物件夾取：將1號操縱桿往前推**  
Grip the object: Push "Lever Controller 1" forward


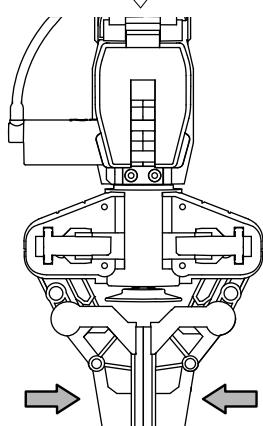
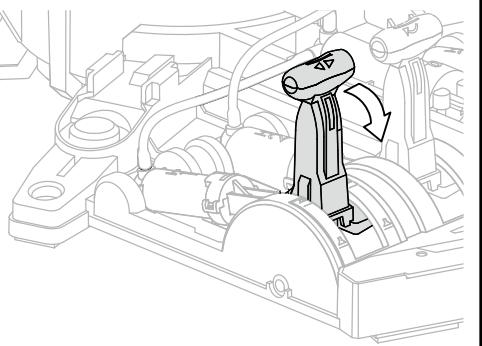
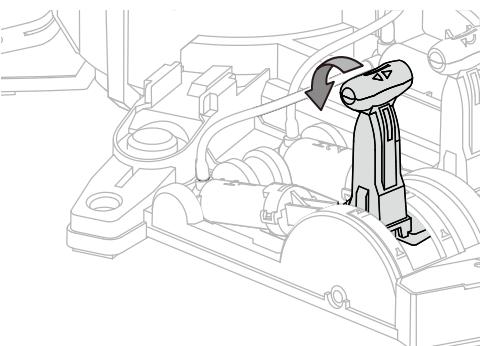


**最大夾舉重量 : 50 g Maximum Lift : 50 g**

## 如何操作吸盤 How To Play- Suction Mode

1





**取下夾頭組並收納於下圖位置**  
Release Gripper unit and put it aside as below.

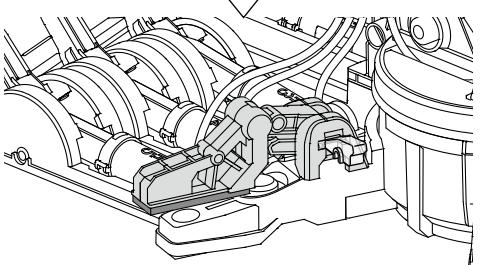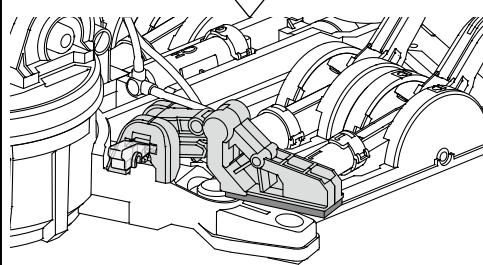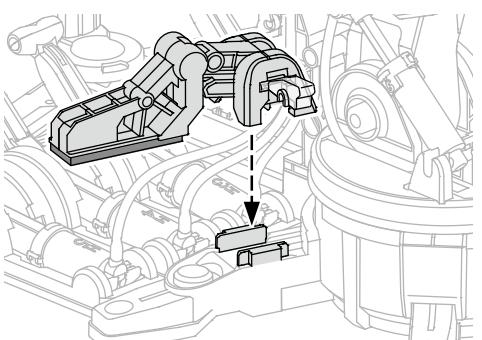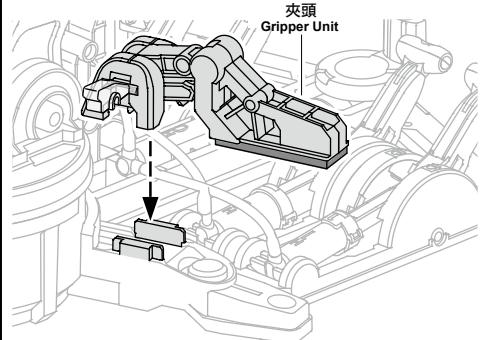

2

**非常重要! 改為吸盤模式請照以下步驟調整**


Very Important !! Step 2 must be completely fulfilled under Suction Mode.

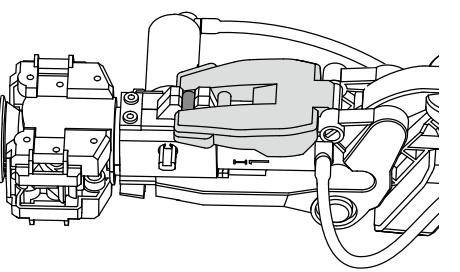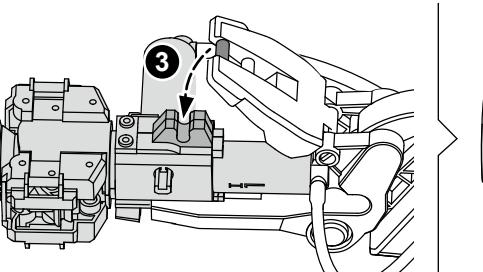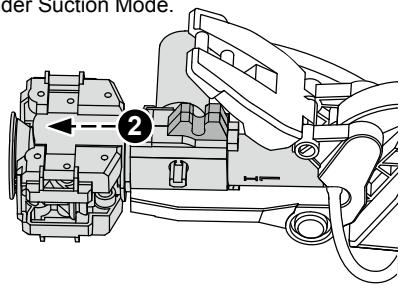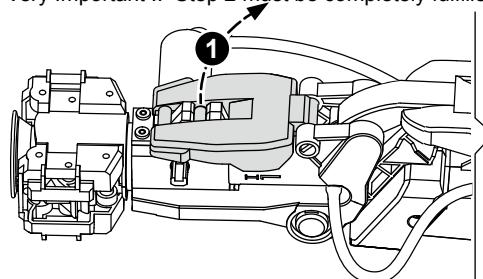

3

### 將1號操縱桿推到中間位置


Set the "Lever Controller 1" in the middle as below

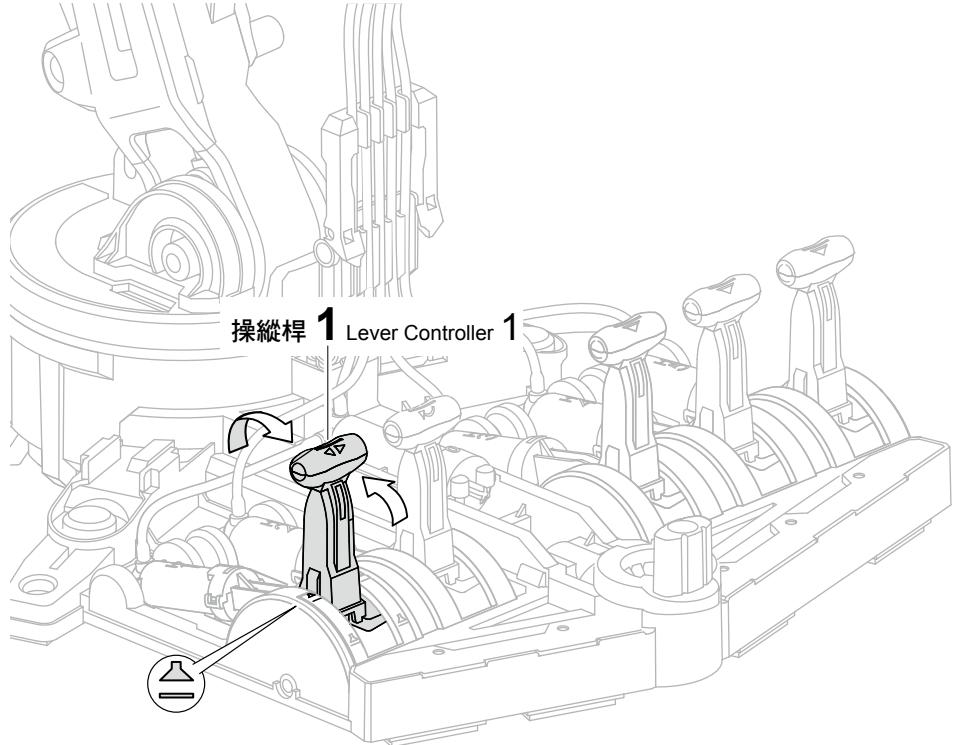

4

### 操作2~6號操縱桿(參考77頁)使吸盤移動到物件



Operate the lever Controllers 2-6 (refer to page. 77), and have suction cup target the object.

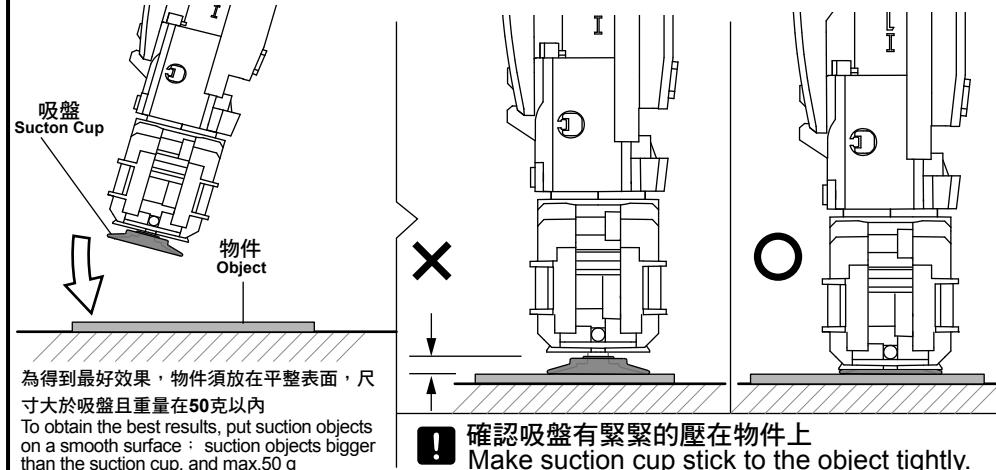

!

### 夾頭組須垂直於物件





Direct the Wrist to the object straightly

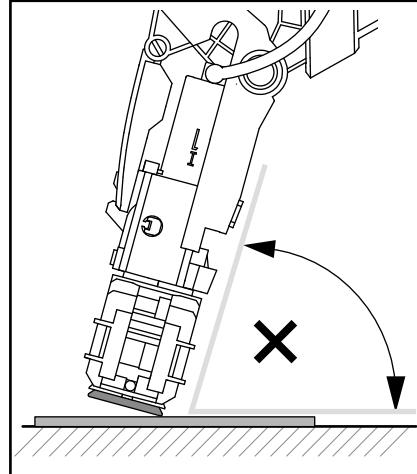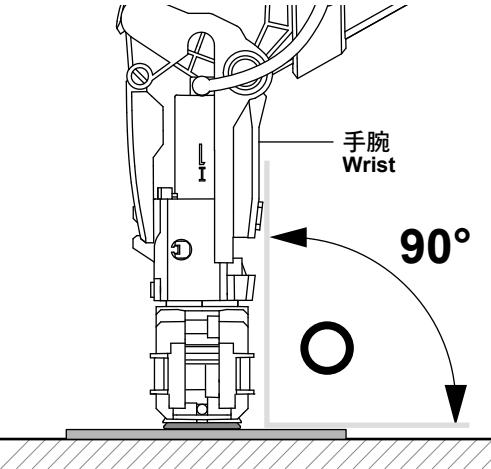


5

### 將操縱桿1往後拉，使吸盤吸附在物件上


Pull "Lever Controller 1" backward as below, and have the cup suck the object.

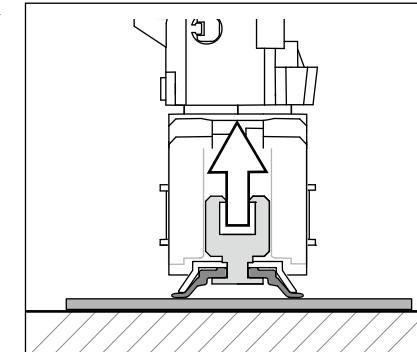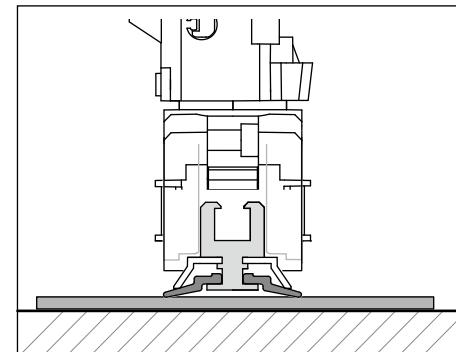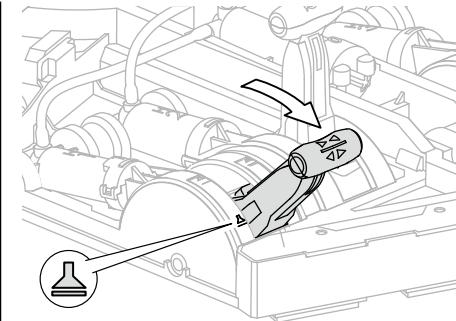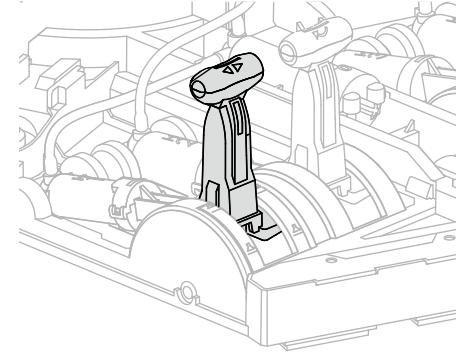


**6** 將操縱桿5往前推以舉起物件  
Push "Lever Controller 5" forward to lift the object.

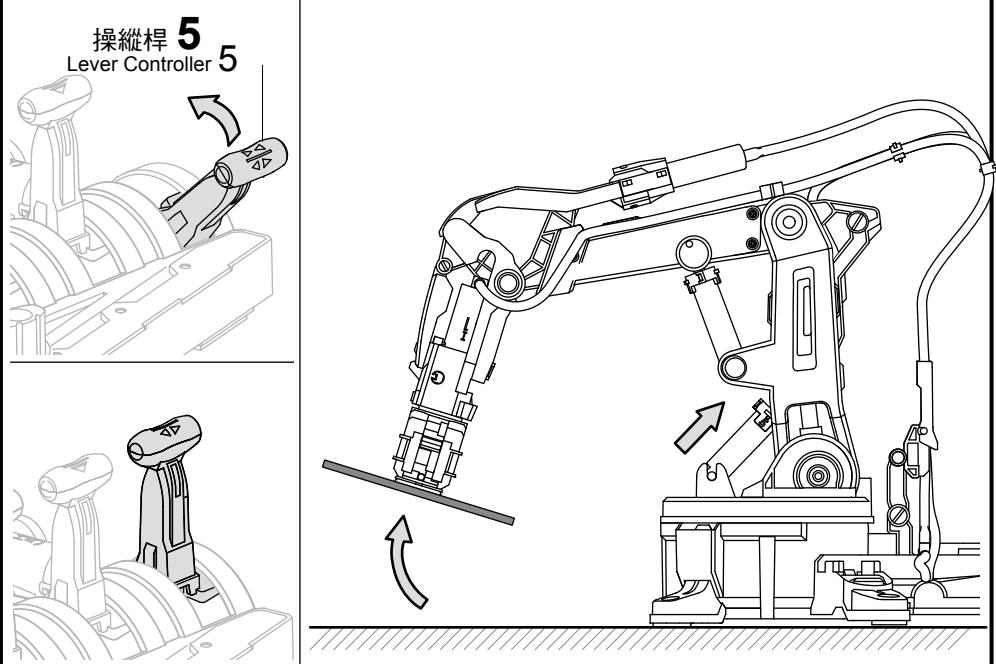

**7** 將操縱桿1推到中間位置以鬆開吸盤  
Set "Lever Controller 1" in the middle to release object.

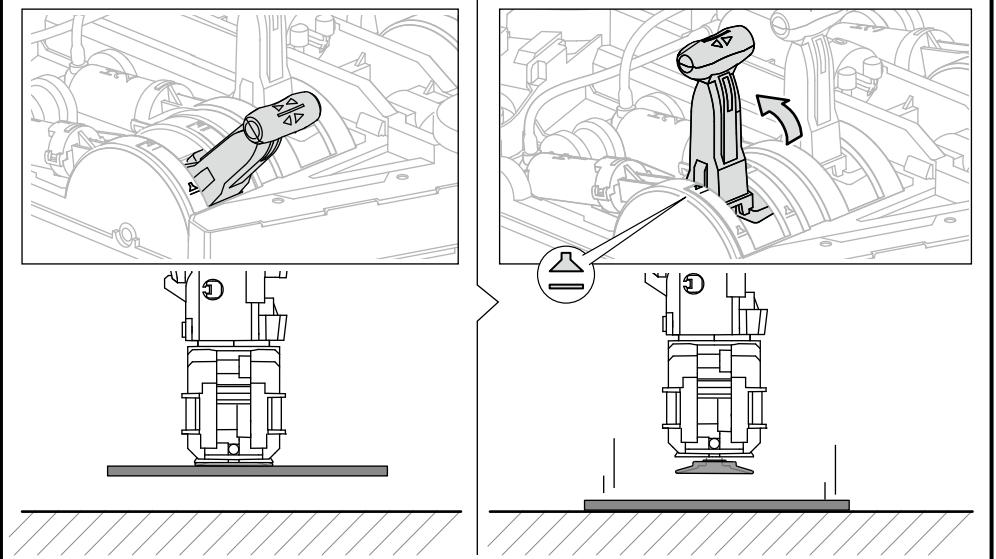

**8** 將物件放在一個稍微高一點且平整的平台上，可協助您在練習"吸盤模式"時得到比較好的成效。  
Tip: Put the object under a slightly higher/and smoother platform, it may help you practice the "Suction mode" with greater success.

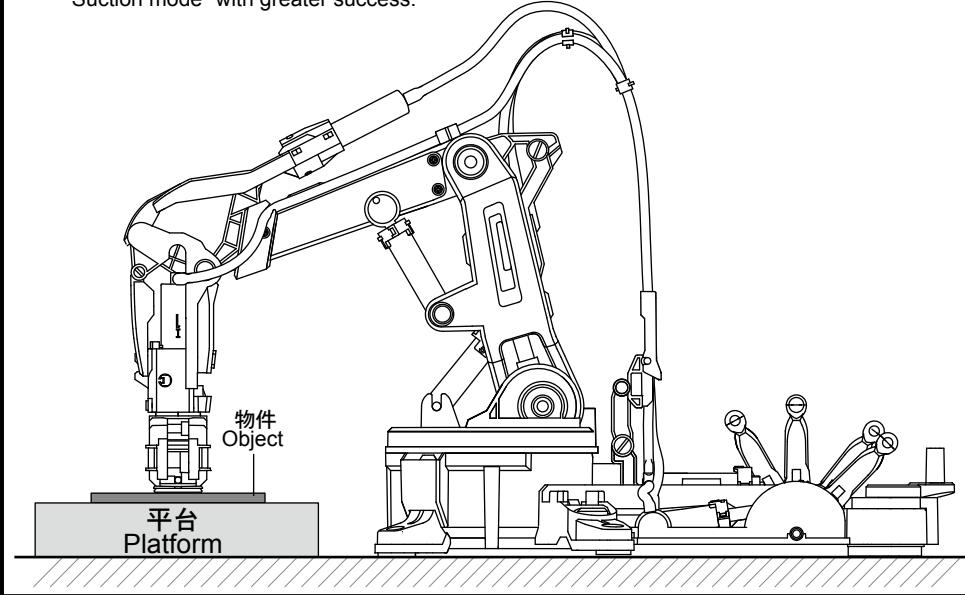


## 簡易故障排除 Trouble Shooting

### ●如果夾頭無法開合，請跟著以下步驟進行確認

If gripper unit does not work (open or close) functionally, please check following steps.


#### 1. 請確認夾頭是否安裝在正確的位置及方向(參考第78、79頁以下步驟)

Check if gripper unit is installed in the correct position and direction (as below pics in pages 78,79)

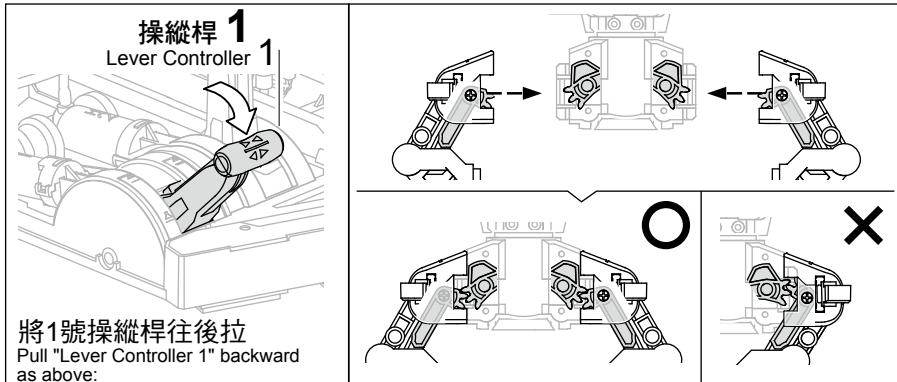

#### 回到第32頁，確認是否有依照步驟16正確安裝


2. Back to page 32, and check step 16 is correct.

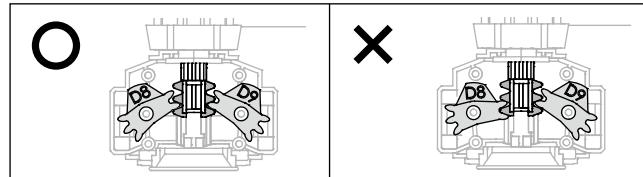

#### 3. 請確認H1、I1和1號軟管內是否有過多的空氣，若是請回到第42~45頁重新組裝。

Check if there is excess air inside the Cylinder H1, I1 and Tube 1.

In that case, refer back to pages 42-45 to re-assemble."Same change on number "2" below.

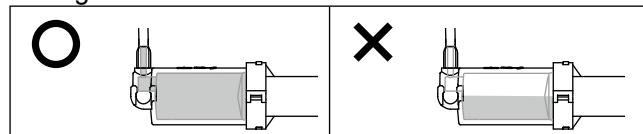

### ●如果在吸盤模式下無法吸附物件

If suction cup cannot suck the objects under suction mode.

#### 1.回到第81~84頁，確認是否有依照步驟2~步驟6正確安裝。


Back to pages 81~84, and check if all steps 2~6 are installed correctly.

#### 2.請確認H1、I1和1號軟管內是否有過多的空氣，若是請回到第42~45頁重新組裝。

Check if there are excess air inside the Cylinder H1, I1 and Tube 1. In the case, back to pages 42-45 to re-assemble.

### ●如果在操作第3/4/5軸時無法完全伸展到最大角度

If operation angle on the Axes 3/4/5 is unable to extend to the max.

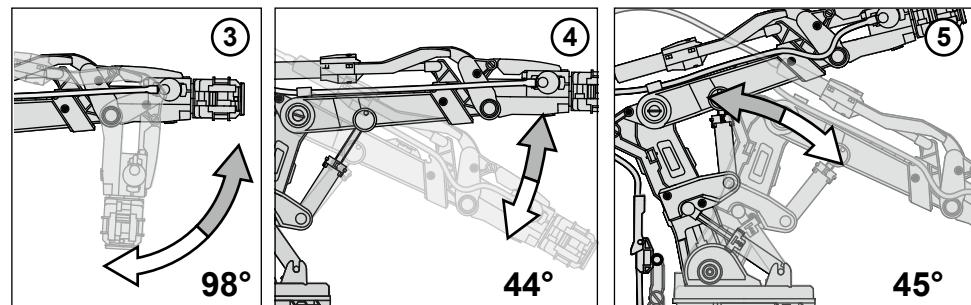

1.請確認在H3/4/5、I3/4/5液壓筒和3/4/5號軟管是否有過多的空氣，若是請回到第37~40頁重新組裝。  
Check if there is excess air inside the Cylinder H3/4/5, I3/4/5, and Tube 3/4/5, in that case, refer back to pages 37~40 to re-assemble.

2.請確認所有軟管是否安裝到正確位置且沒有交錯。在軟管有交錯的狀況下:  
Check if all tubes are routing and not twisting during assembly. In the case of twisted tubes:

2.1 請回到第66~75頁"液壓筒與手臂組裝"，確認所有軟管記號及安裝位置是否正確。  
Back to pages 66~75 "Robot Arm Module Assembly" to check if all markings on the tubes are installed in the right position.


2.2 請回到第46~48頁"量測與作記號"，確認所有剪裁長度及記號位置是否正確。  
Back to Pages 46~48 "Measuring & Marking" to check if all lengths of tubes are cut and marked correctly.

### ●如果第六軸轉動不順暢

Poor movement of the 6th Axe.

1.如果旋轉E2而第六軸沒有轉動時，  
請回到第19頁步驟13，確認E10  
是否安裝在正確位置。

If 6th Axe does not move when rotating E2,  
back to Page 19, Step 13 and check if E10  
is intalled in the right position.

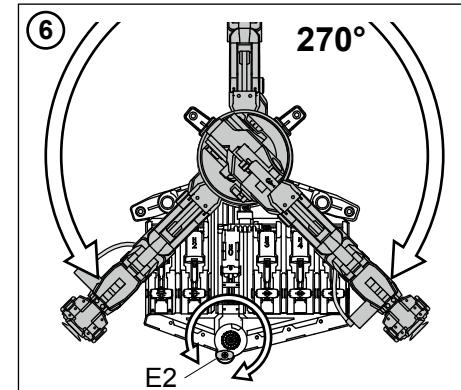

2.請確認所有軟管是否安裝到正確位置且沒有交錯。在軟管有交錯的狀況下:  
Check if all tubes are routing and not twisting during assembly. In the case of twisted tubes:

2.1 請回到第66~75頁"液壓筒與手臂組裝"，確認所有軟管記號及安裝位置是否正確。  
Back to pages 66~75 "Robot Arm Module Assembly" to check if all markings on the tubes are installed in the right position.

2.2 請回到第46~48頁"量測與作記號"，確認所有剪裁長度及記號位置是否正確。  
Back to Pages 46~48 "Measuring & Marking" to check if all lengths of tubes are cut and marked correctly.

若需要購買零件，請參照以下零件表

When ordering parts, please include the following

1. 請留下訂購人姓名、寄送地址、連絡電話、E-mail  
Name, address (no P.O. Box), telephone number, and email address.
2. 請註明產品名稱、產品型號、零件名稱、零件型號以及數量  
Model name and model number. Part number, part name, and quantity.
3. 如有任何需求，請洽您的經銷商  
Please contact local distributor if any query.



### GE-632 液壓機器手臂 零件表 Parts List

零件型號 Part Number	零件名稱 Part Name	數量 Qty
5GE-63200P1	華司螺絲(短) Tapping Screw (Short)	
5GE-63200P2	自攻螺絲(長) Tapping Screw (Long)	
5GE-63200P3	鐵塊(短) Iron Bar (Short)	
5GE-63200P4	鐵塊(長) Iron Bar (Long)	
5GE-63200P5	墊片 Brake Pad	
5GE-63200P6	活塞帽(小) Cap (Small)	
5GE-63200P7	活塞帽(大) Cap (Big)	
5GE-63200P8	吸盤 Suction Cup	
5GE-63200P9	泡棉 Sponge	
5GE-63200P10	彈簧(小) Spring (Smallest)	
5GE-63200P11	彈簧(短) Spring (Short)	
5GE-63200P12	彈簧(中) Spring (Medium)	
5GE-63200P13	彈簧(長) Spring (Long)	
5GE-63200P14	軟管 Soft Tube	
5GE-63200P15	油包 Oil Bag	
5GE-63200PPA	塑膠模型零件A Plastic Part A	
5GE-63200PPB	塑膠模型零件B Plastic Part B	
5GE-63200PPC	塑膠模型零件C Plastic Part C	
5GE-63200PPD	塑膠模型零件D Plastic Part D	
5GE-63200PPE	塑膠模型零件E Plastic Part E	
5GE-63200PPF	塑膠模型零件F Plastic Part F	
5GE-63200PPG	塑膠模型零件G Plastic Part G	
5GE-63200PPHI	塑膠模型零件H/I Plastic Part H/I	



**Pro'sKit®**

寶工實業股份有限公司  
PROKIT'S INDUSTRIES CO., LTD

新北市新店區民權路130巷7號5樓  
5F, No.7, Lane 130, Ming-Chung Rd., Hsin-Tien Dist,  
New Taipei City, Taiwan, R.O.C Post code:23141

電話 Tel: 02-22183233

傳真 Fax: 02-22182722

E-mail: science@mail.prokits.com.tw

<https://science.prokits.com.tw>

<https://shop.prokits.com.tw>

