


GE-894

Pro'sKit®

Probbie II

micro:bit

二代寶比機器人-Micro bit

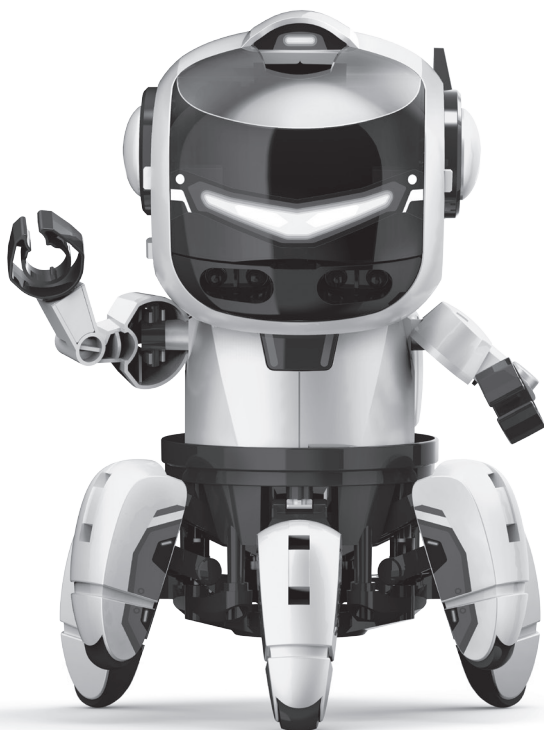

Assembly & Instruction

Manual

組裝說明手冊

目錄

CONTENTS

產品介紹 Product Introduction	1
自備工具 Tools You May Need	1
零件清單 Mechanical Parts List	1
塑膠模型零件 Plastic Parts	3
塑膠模型零件 Tip: Cut Off The Burrs Before Assembly	3
身體組裝 Body Module Assembly	4
足部、頭部、手臂組裝 Feet, Head, & Arms Assembly	18
電池更換 How To Replace Batteries	26
所需設備 Devices You May Need	27
Micro: bit 安裝方式 How To Install Micro: bit	27
線上下載程式 Funways to downlod on line	28
注意事項 Warning	29
簡易故障排除 Trouble Shooting	30
打扮你的寶比 Decoration	31

二代寶比機器人-Micor:bit

Probbie II Micro:bit kit

產品介紹 Product Introduction

寶比二代聯手BBC Micro:bit 創造出無限可能! 寶比二代延續寶比一代靈活的身體、360度旋轉的身體、紅外線感應等，更採用 Micro:bit 控制板作為核心控制，只要透過Javascript Blocks或是Python程式編程，不須再另外下載其它編程軟/硬體，就能擁有一隻聰明、可愛的專屬機器人! 玩中學、學中做就是這麼簡單!

利用BBC Micro:bit 編程，發揮你的創意，激盪你的腦力，與寶比二代一起迸發無窮潛力!

Probbie II met BBC Micro:bit. The excellent features of Micro:bit have been comprehensively exploded into this Robot, and made all the possibilities to Probbie II - your coolest and cleverest robot friend ever.

Probbie II is a construction robot, designed of 6 legs and a rotation-free body, possessing all necessary electronics, including motor, IR sensor, buzzer to make it active and interactive for fun. It is ideal to combine with Micro:bit, using your creation and imagination to make it code and program easily by Javascript Blocks Editor or Python Editor on your computer, laptop or smartphone. No need to download more coding software and driver at all. Thanks to this pocket programmable board, coding and programming becomes simple, accessible and interesting for children to learn and practice.

With the main features of BBC Micro:bit below, Probbie II sparkles huge potential and brings you all the fantasy and excitement.



警告

Warning

1.本玩具內含小物件，請勿讓三歲以下孩童取得，以免放入口中造成窒息。

Choking hazard - Small parts. Not for children under 3 years.

2.兒童使用剪切工具時，請家長指導使用方式，並請在家長監督下使用，以免發生意外。

Adult supervision is recommended when children use scissors.


3.為避免嬰兒或兒童產生窒息的危險，請於拆卸後立即將塑膠袋銷毀或遠離嬰兒及兒童。

To avoid danger of suffocation, keep the plastic bag away from babies and children.

自備工具如右 Tools You May Need



斜口鉗
Diagonal Cutter

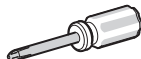

#1 十字起子
#1 Screwdriver(Phillips)
9SD-202B 或 89102B



AAA電池4顆
Battery(AAA) x 4

建議使用鹼性電池(出貨不含)
Alkaline batteries are recommended
(not included)



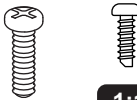



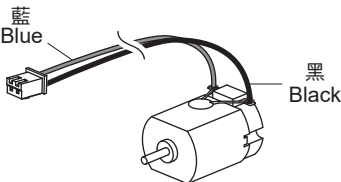
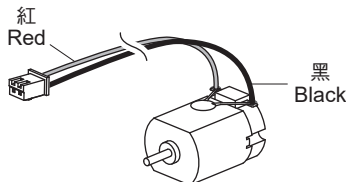
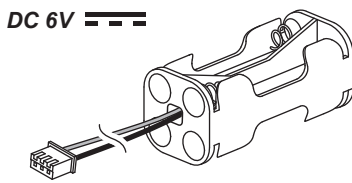
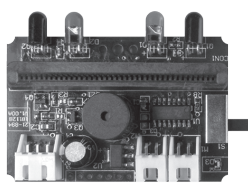
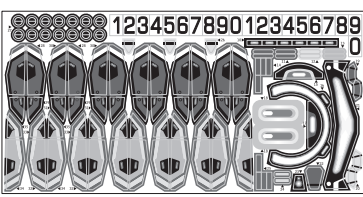

零件清單 Mechanical Parts List



部分產品含有銳利邊角，組裝時請特別注意





Product contains functional edges and sharp points.

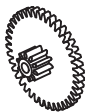P1 小齒輪(白色) Pinion Gear (White)		P2 齒輪(灰色) Gear 32/10T (Gray)		P3 齒輪 (藍色) Gear 32T (Blue)	
	數量 QTY		數量 QTY		數量 QTY
	2		1		1
P4 齒輪(綠色) Gear 36/14T (Green)		P5 齒輪(白色) Gear 36/14T (White)		P6 齒輪 (橘色) Gear 36T (Orange)	
	數量 QTY		數量 QTY		數量 QTY
	1		2		1


P7 齒輪(粉紅色) Gear 40/10T (Pink)		數量 QTY	1
P8 出力齒輪(橘色) Gear 10T (Orange)		數量 QTY	2
P9 自攻螺絲 Tapping Screw		數量 QTY	20
P10 華司螺絲 Tapping Screw		數量 QTY	4
P11 圓軸(短) Shaft (Short)		數量 QTY	3
P12 圓軸(長) Shaft (Long)		數量 QTY	2
P13 馬達端子組 Motor With Connector		數量 QTY	1
P14 馬達端子組 Motor With Connector		數量 QTY	1
P15 電池座 Battery Holder With Connector		數量 QTY	1
P16 電路板 PC Board		數量 QTY	1
P17 裝飾貼紙 Sticker		數量 QTY	1
P18 墊片 Washer		數量 QTY	1

塑膠模型零件 Plastic Parts

! 請依照組裝步驟將所需的零件剪下，事先全數剪下會在組裝時造成混淆
Cut the plastic parts when they are required. Do not cut them in advance.

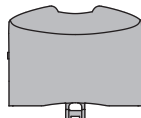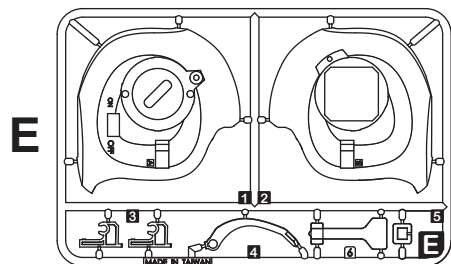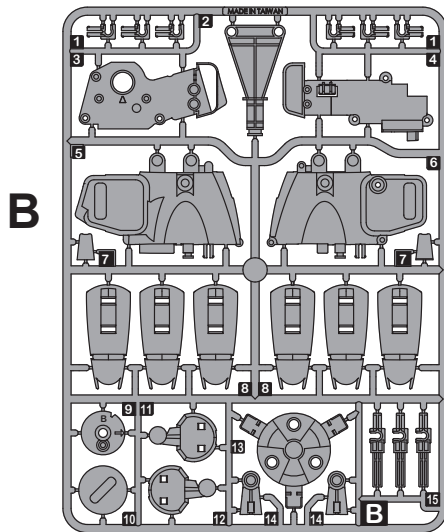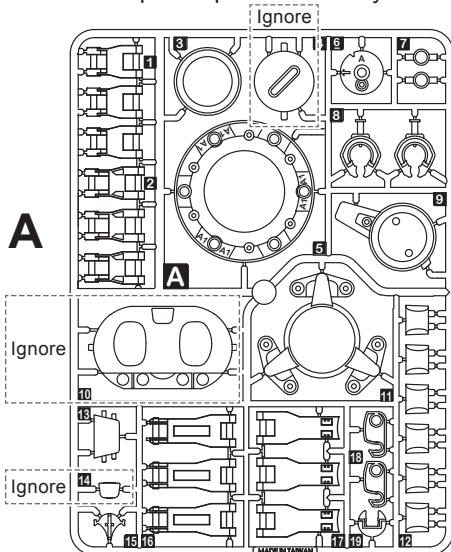




F

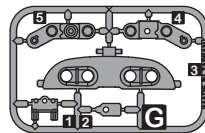

G









小技巧提醒:零件剪下時請將毛邊剪切乾淨，以免組裝後造成運作不良
Tip: cut off the burrs before assembly

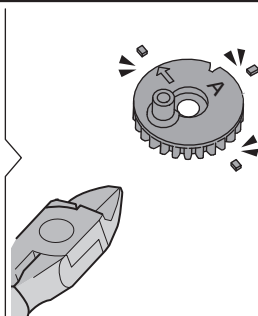
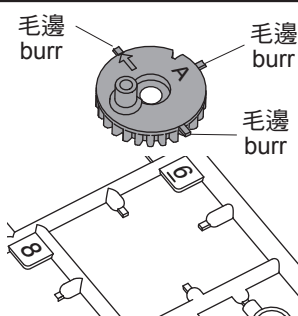
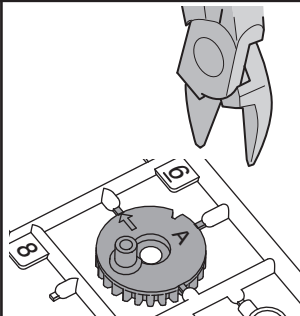


身體組裝 Body Module Assembly


1

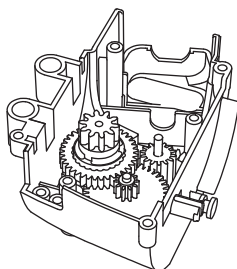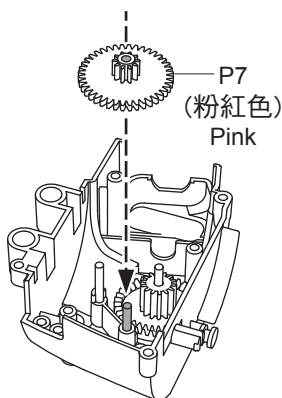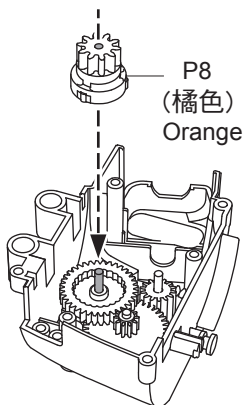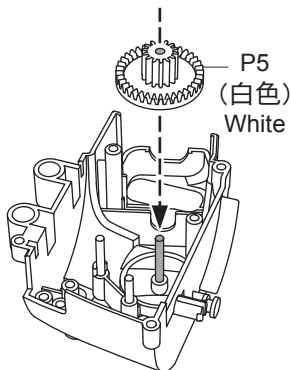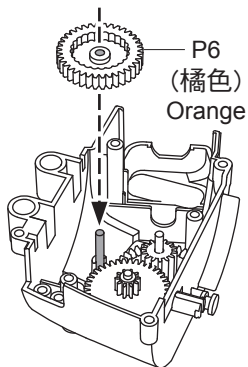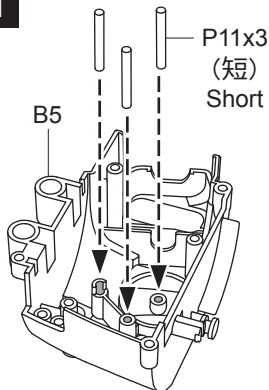




2

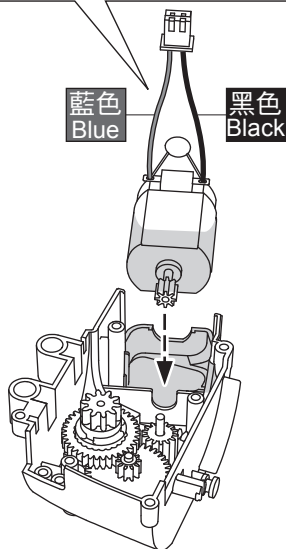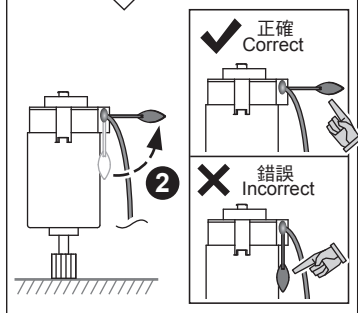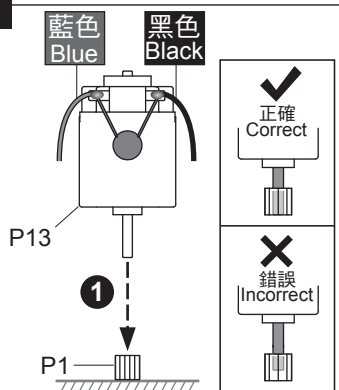



3

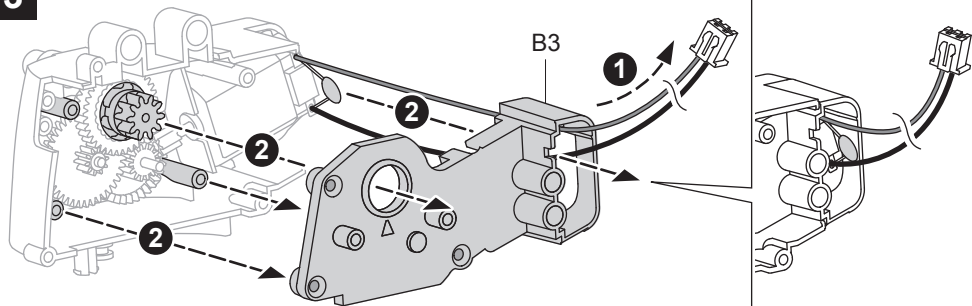


4

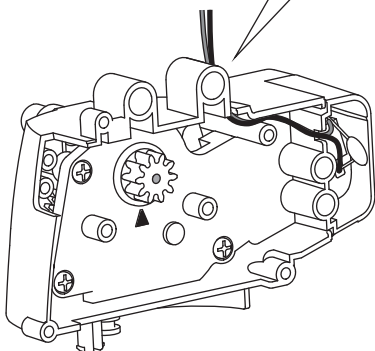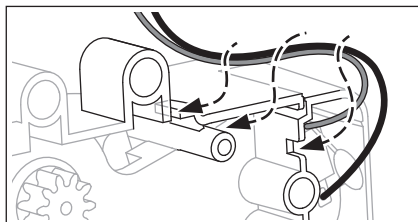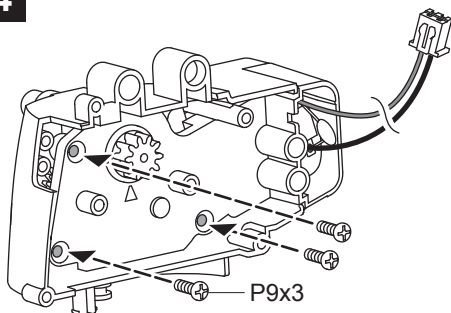


5

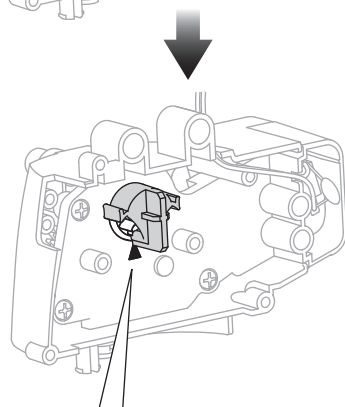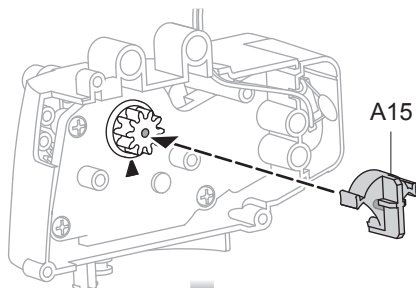


✓ 正確
Correct

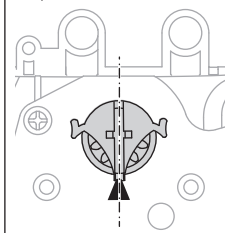


✗ 錯誤
Incorrect

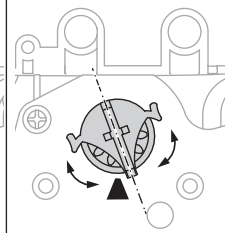



6

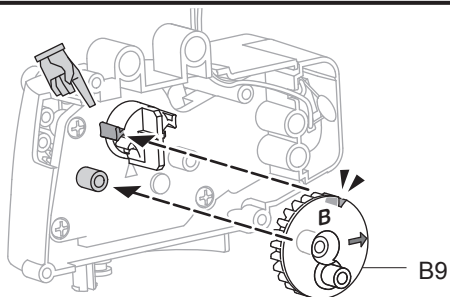



正確
Correct

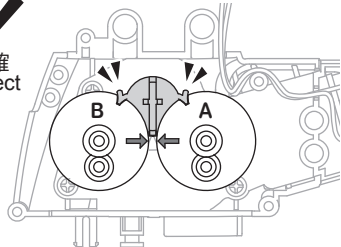


錯誤
Incorrect

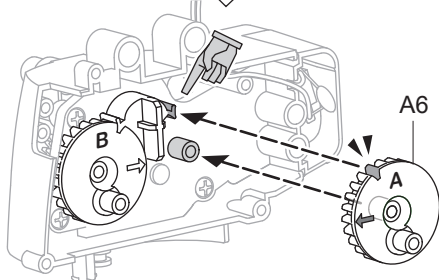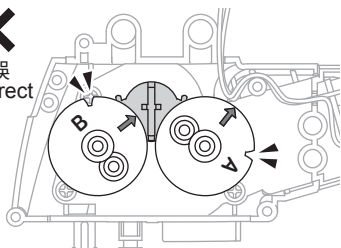


7

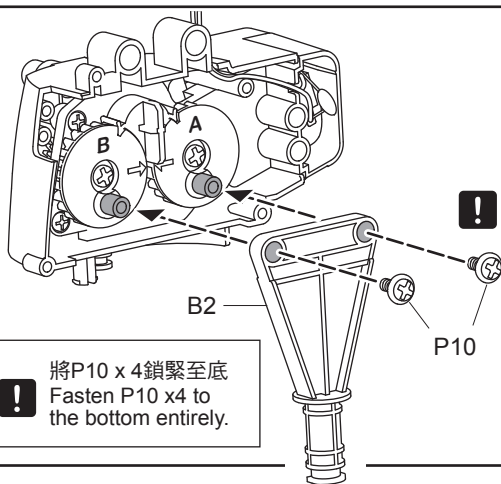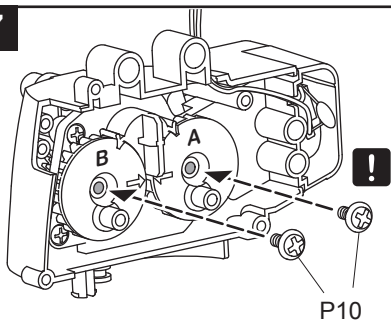

正確
Correct

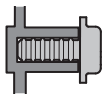


錯誤
Incorrect

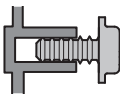

將P10 x 4鎖緊至底
Fasten P10 x4 to
the bottom entirely.

8

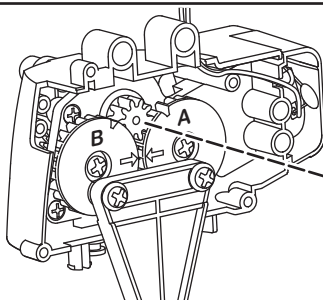


移除
REMOVE




注意: A15為輔助工具，請在上述步驟
完成後取下

Important: Remove assistance tool-
A15 after steps above are finished.

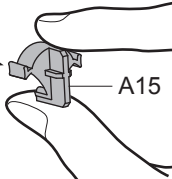

9


紅色 Red
黑色 Black

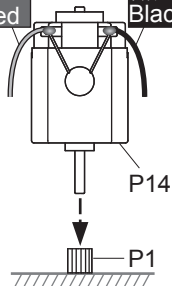

✓
正確
Correct

✗
錯誤
Incorrect

B6


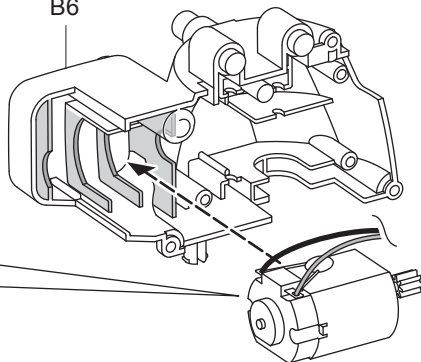


10

P12
(長)
Long

P5
(白色)
White

P4
(綠色)
Green

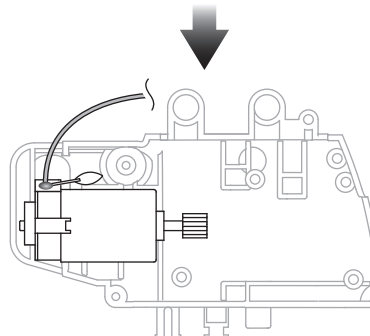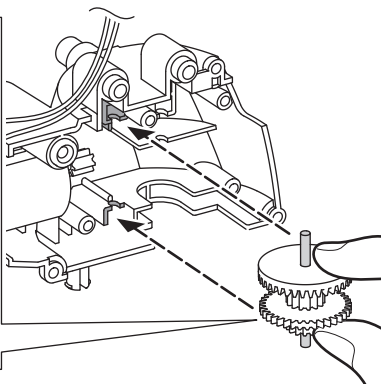

側視圖 Side View

11


P12
(長)
Long

P2
(灰色) Gray

✗
錯誤
Incorrect


P3
(藍色)
Blue

P8
(橘色) Orange

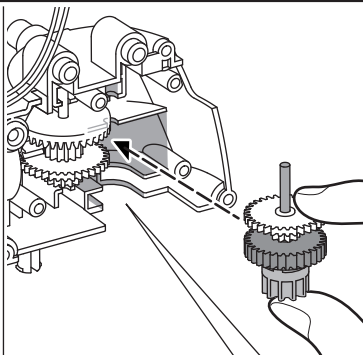

✓
正確
Correct

✗
錯誤
Incorrect

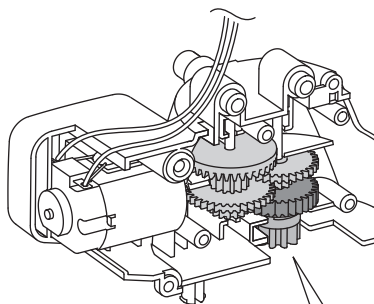


P5(白)
White

P4(綠)
Green


P2(灰) Gray

P3(藍) Blue







P8(橘)
Orange

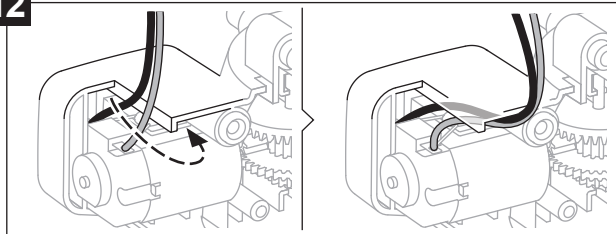


✓
正確
Correct

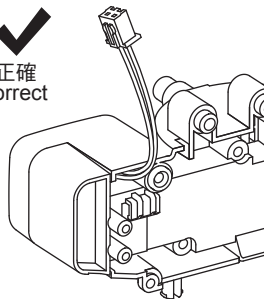



✗
錯誤
Incorrect

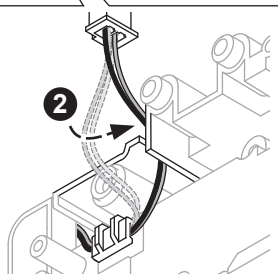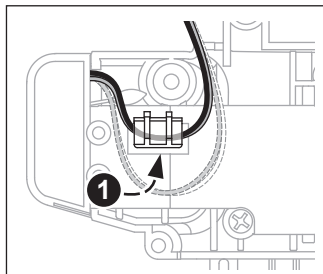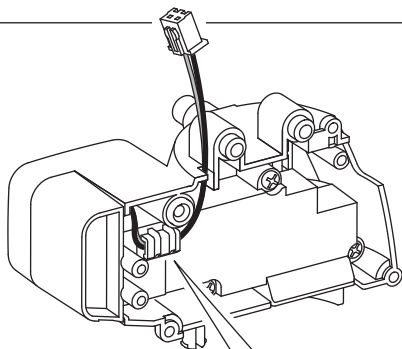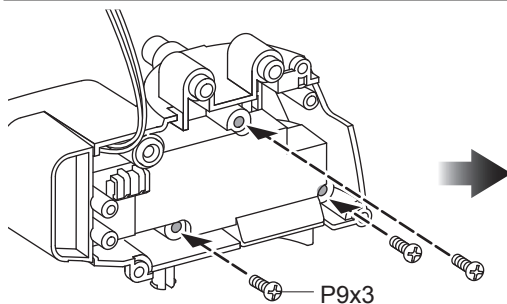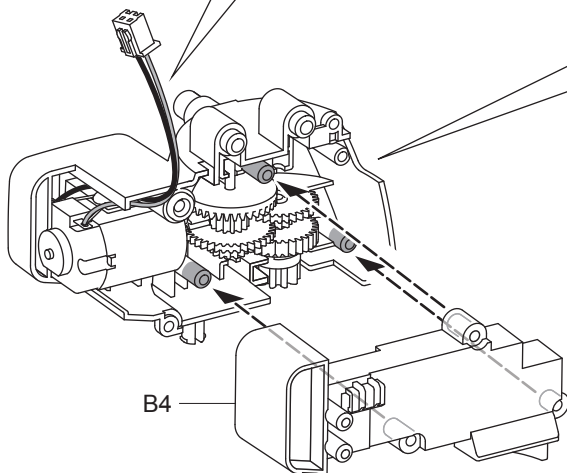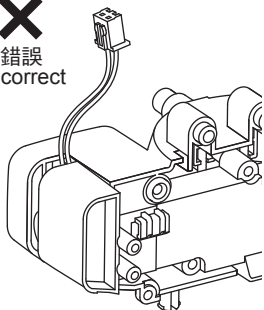


13

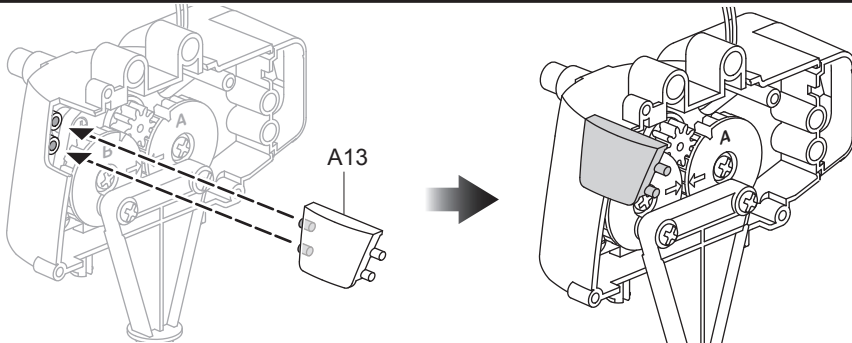


14

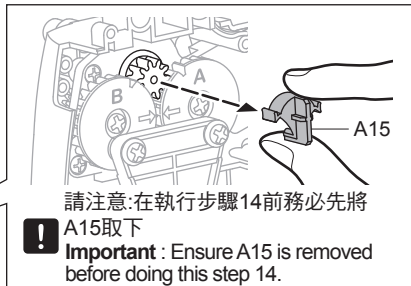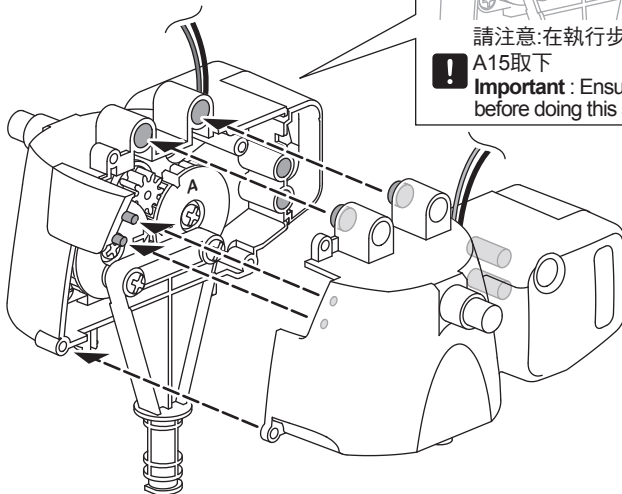


✓
 正確
 Correct

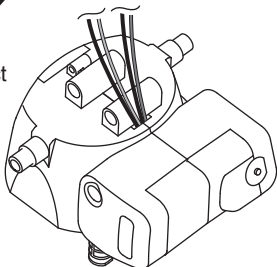


✗
 錯誤
 Incorrect

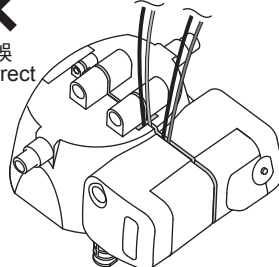


15

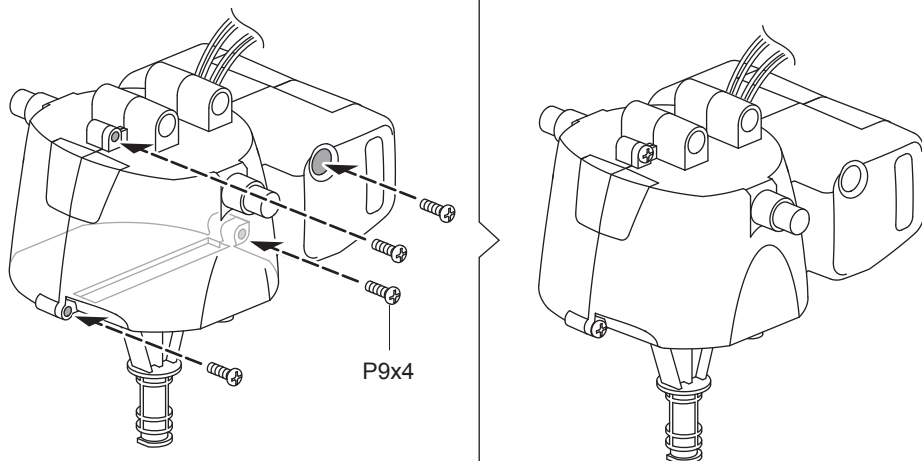

16

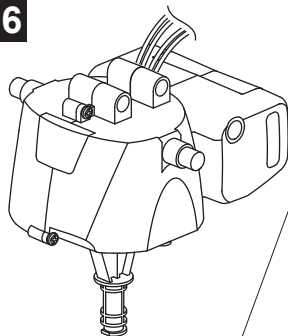


右視圖
Right View

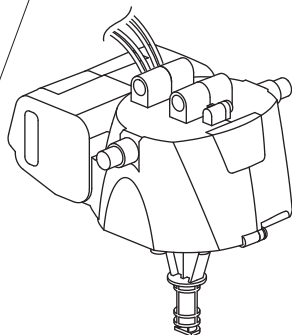


左視圖
Left View


! 前請將毛邊剪切乾淨
Cut off the burrs before assembly.

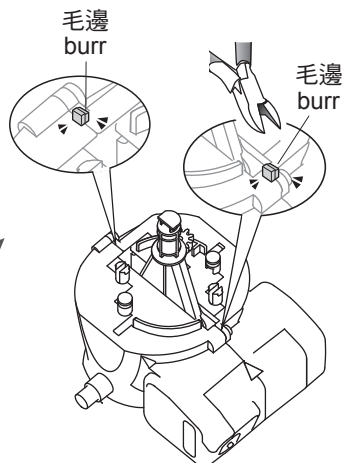


17

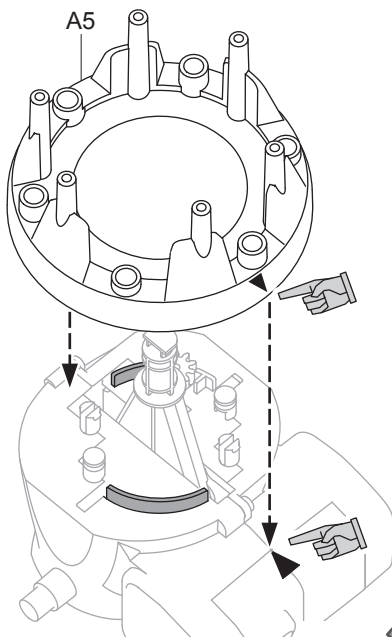


✓
正確
Correct

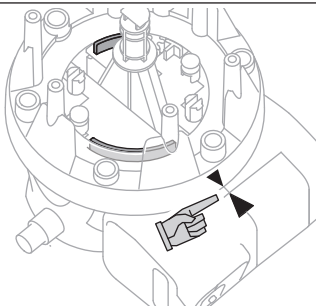


✗
錯誤
Incorrect

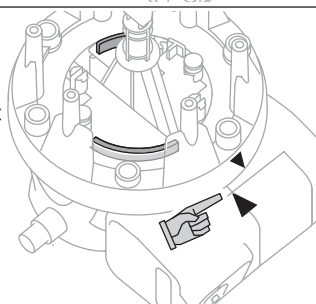


18

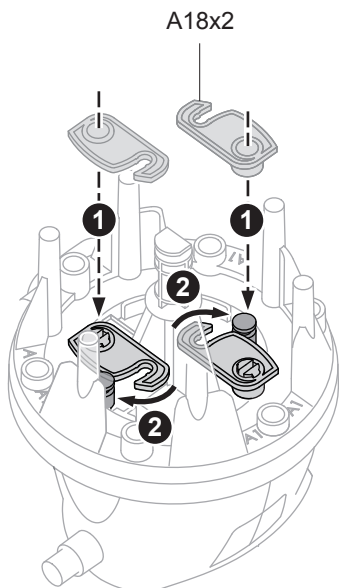


180°

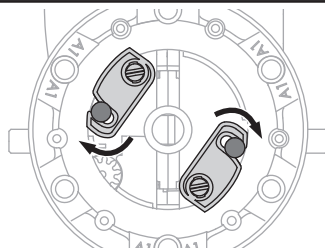

❗ 請確認A18扣住時有發出“咔嚓”聲
Make sure A18 is snapped on
with a “Click” sound.




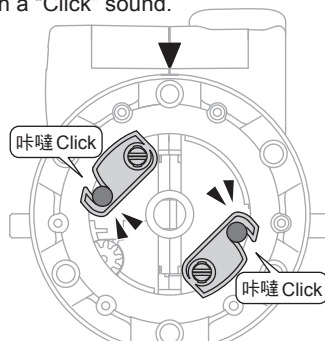


俯視圖 Top View




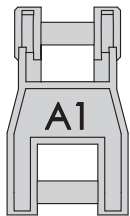


比例


Scale 1:1

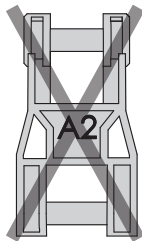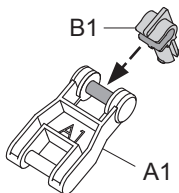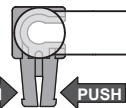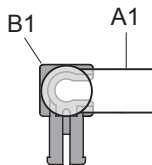請勿將A1與A2混淆
Don't mix up A1 & A2.

x3

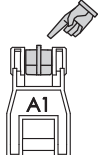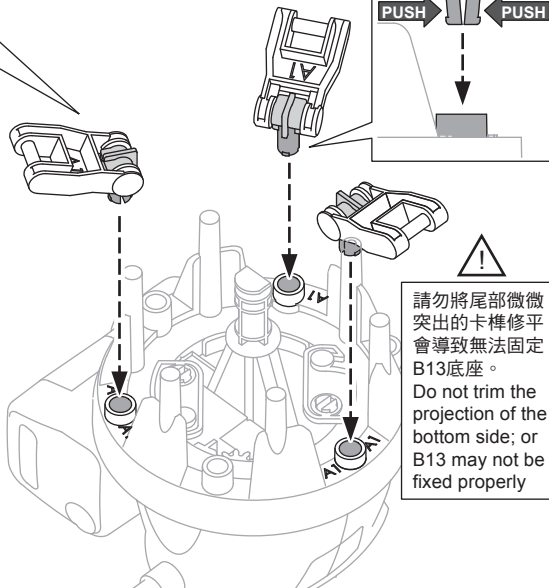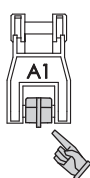
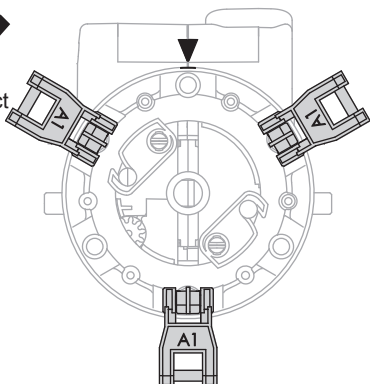
正確
Correct錯誤
Incorrect正確
Correct

俯視圖 Top View

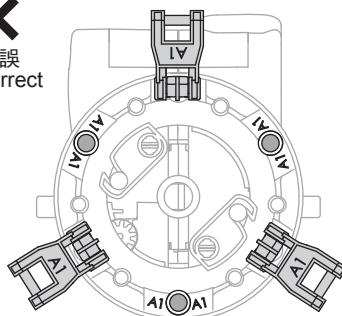
錯誤
Incorrect

俯視圖 Top View




20

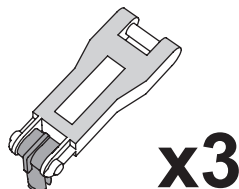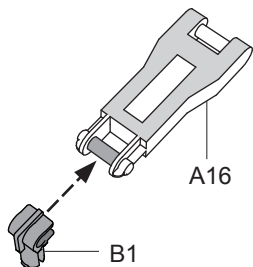



正確
Correct

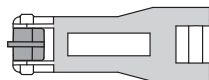


錯誤
Incorrect

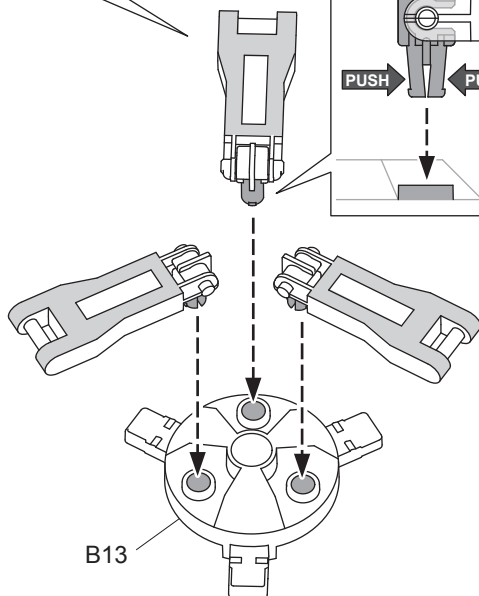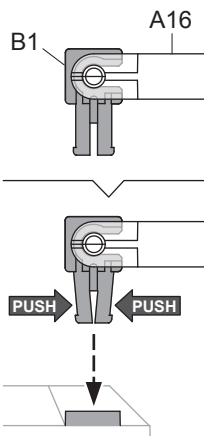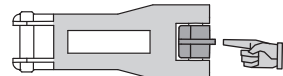


21

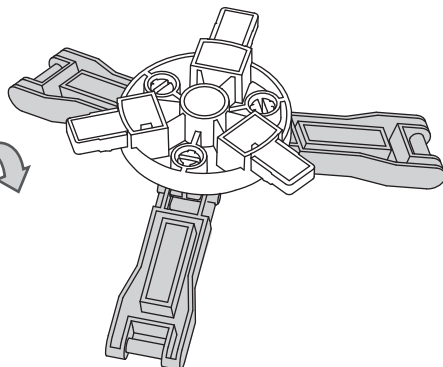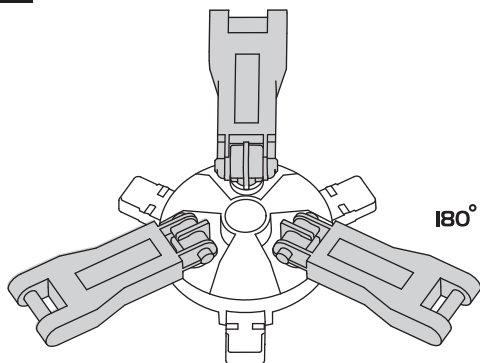


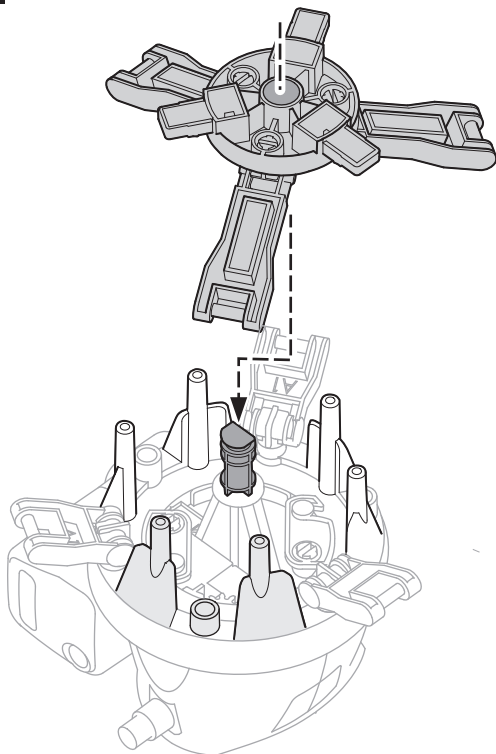


錯誤
Incorrect

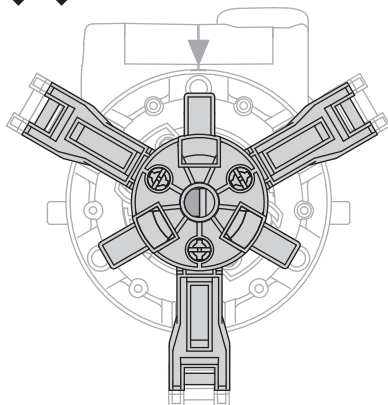

俯視圖 Top View


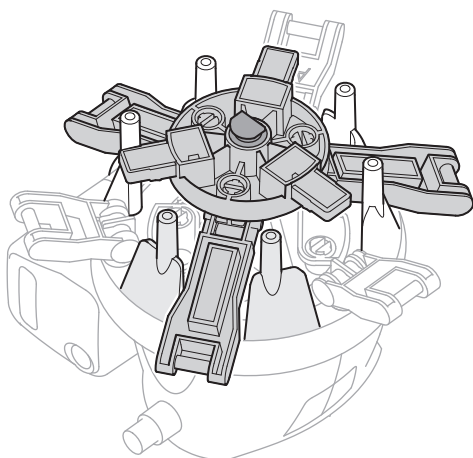


正確
Correct


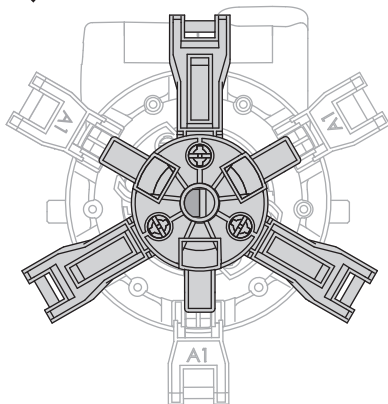



俯視圖 Top View

23

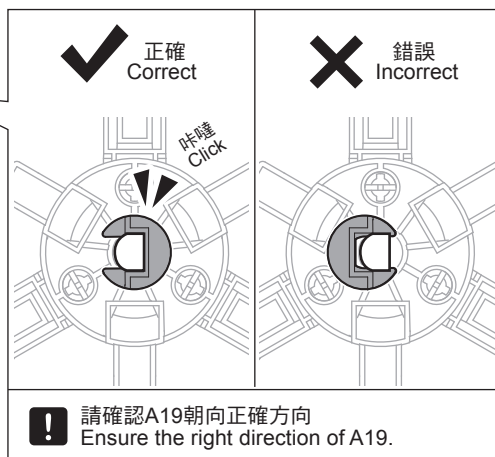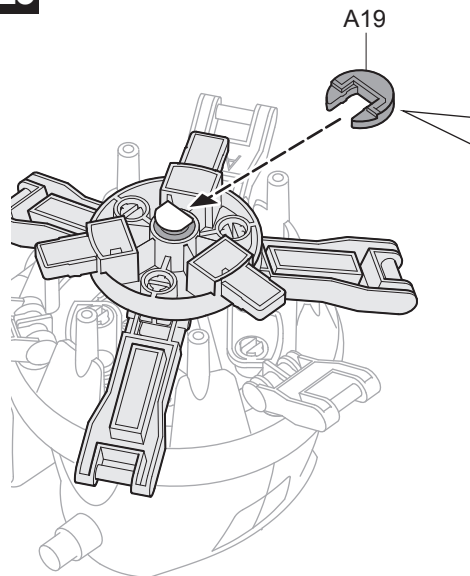


24

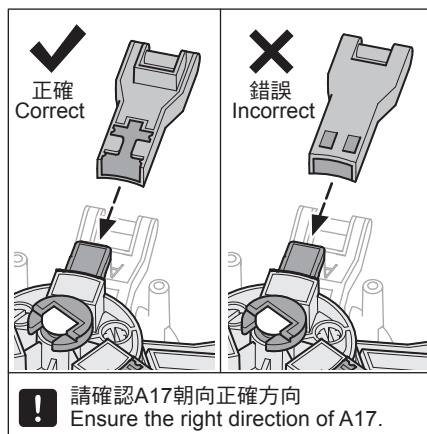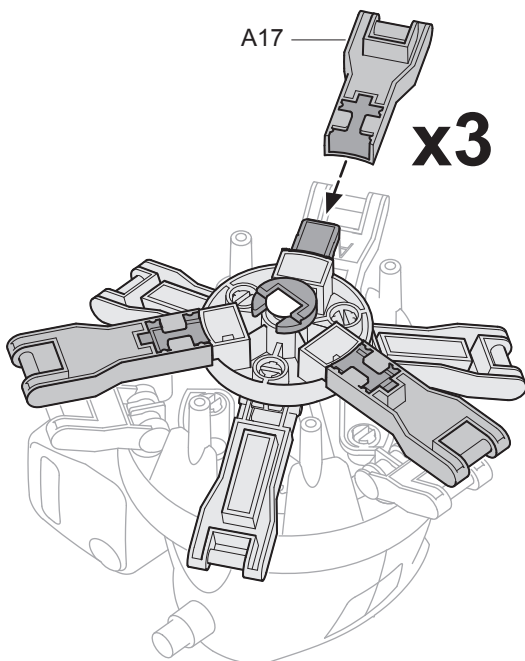

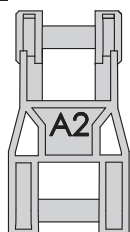



比例

Scale 1:1

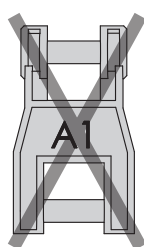

請勿將A1與A2混淆
Don't mix up A2 & A1.

B15

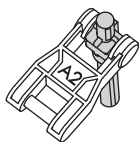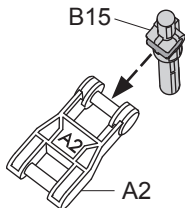


x3



正確
Correct








錯誤
Incorrect

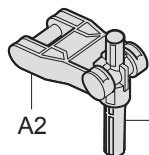


A2

B15




A16

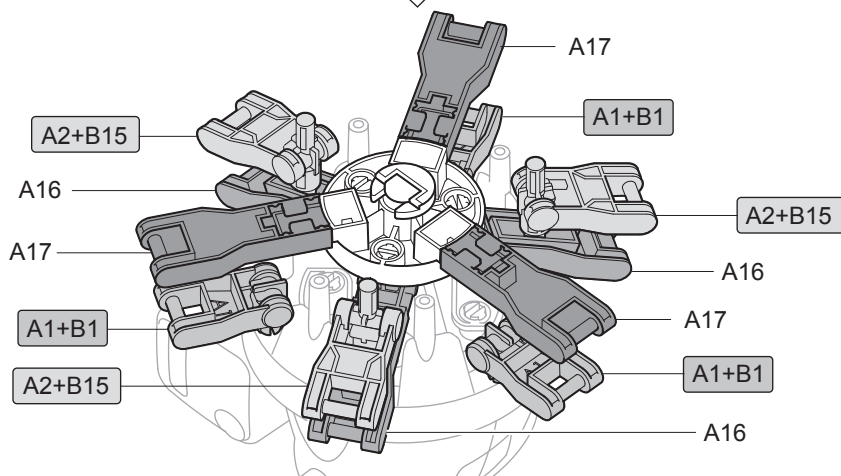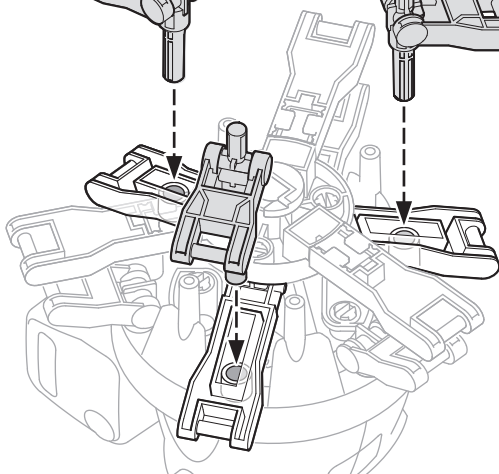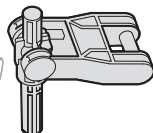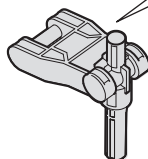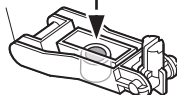

26


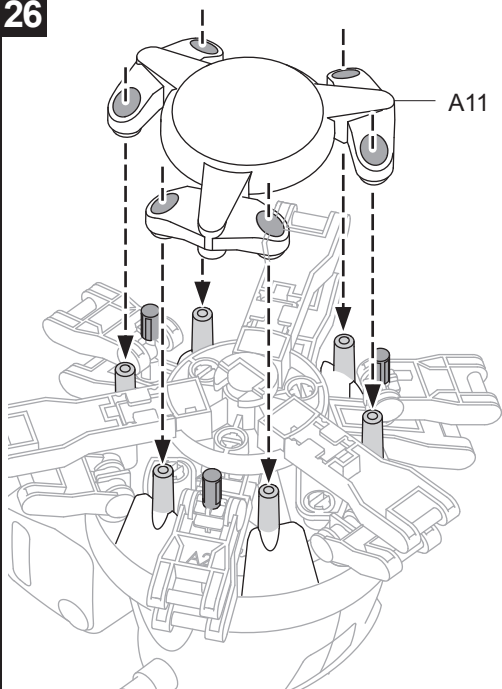


27

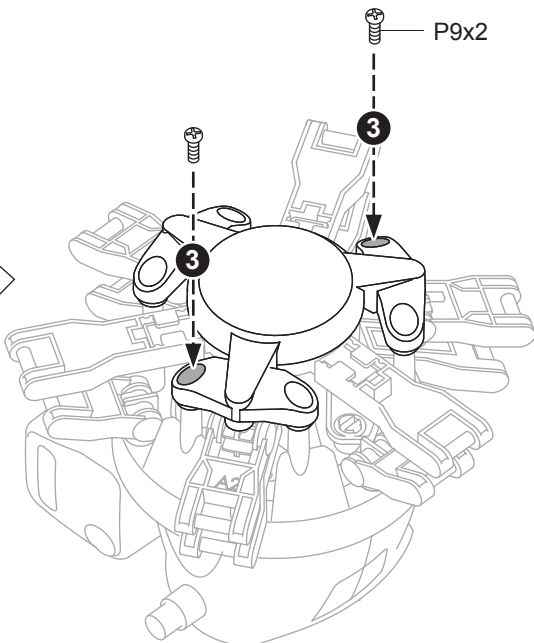
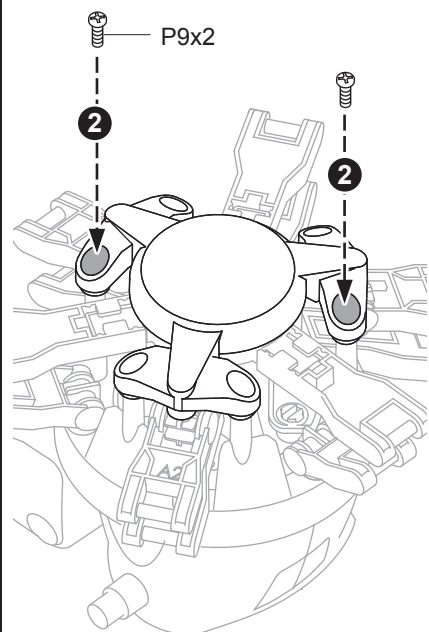
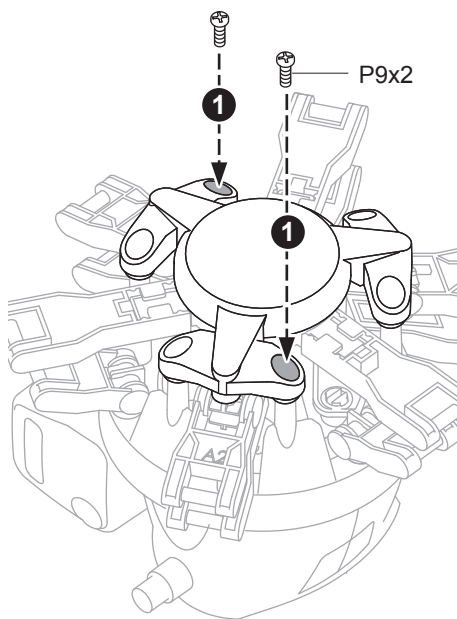


足部、頭部、手臂組裝 Feet, Head, & Arms Assembly



1

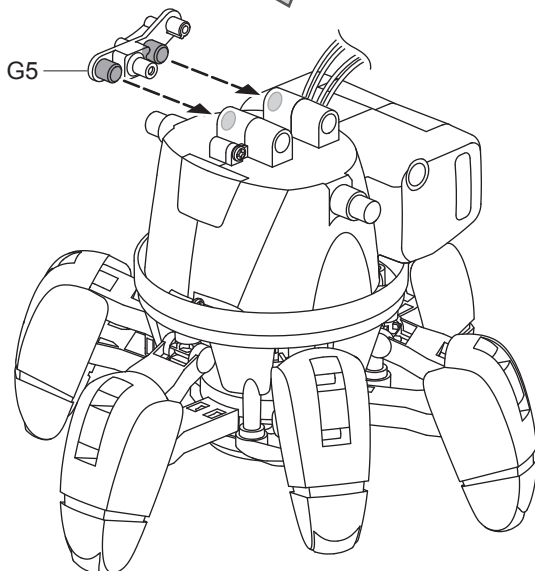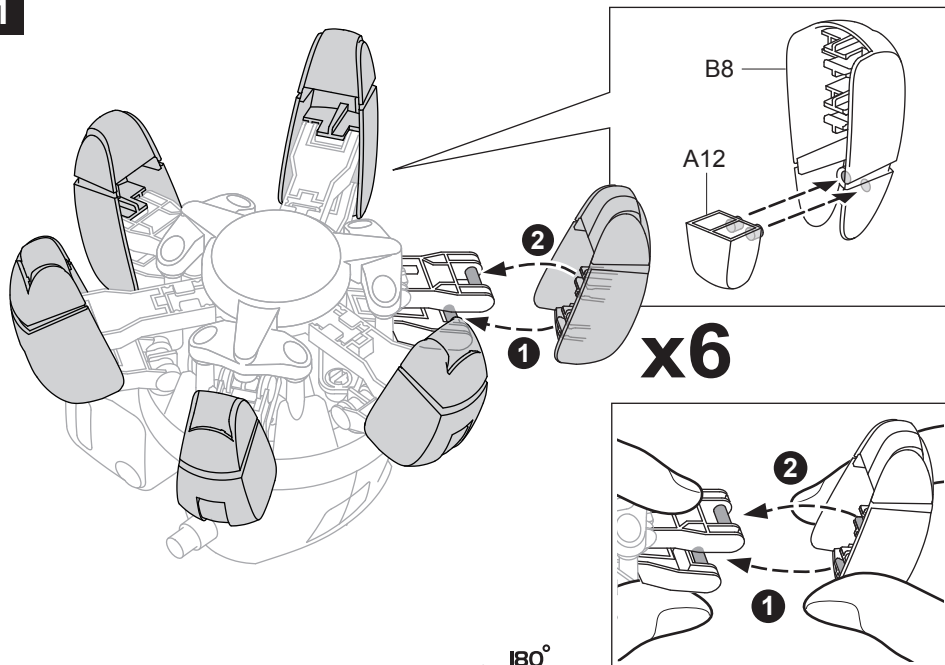




2

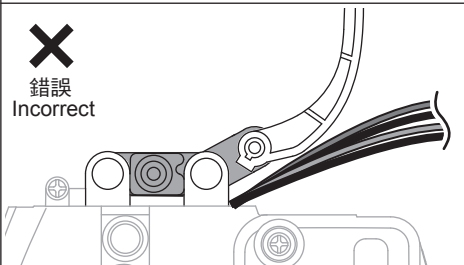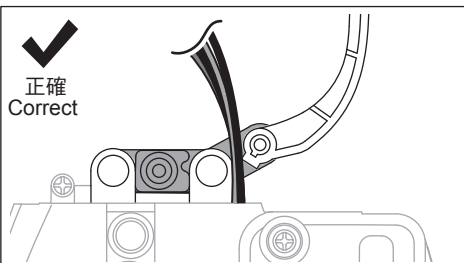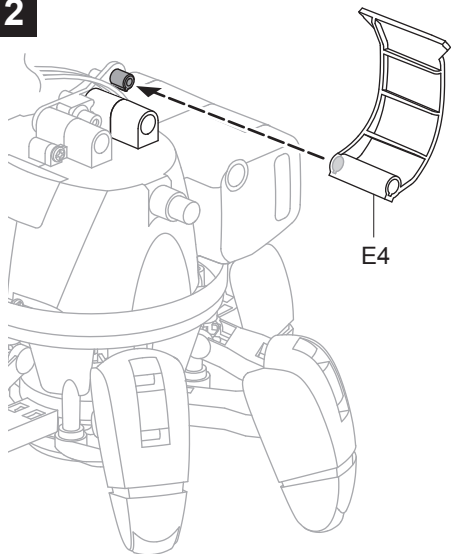





3

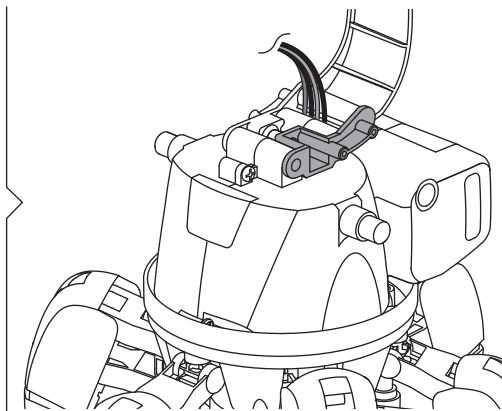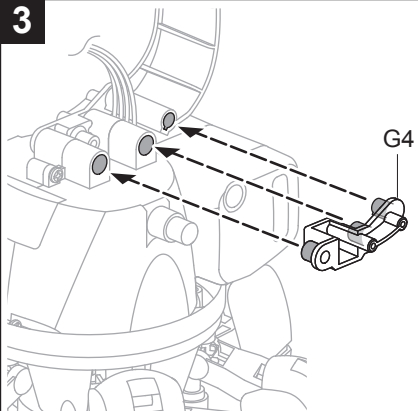

4

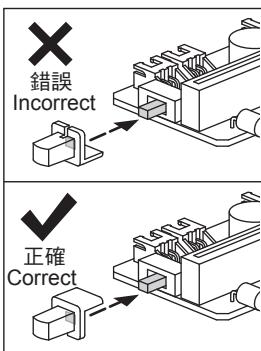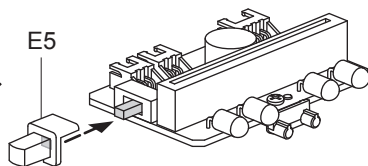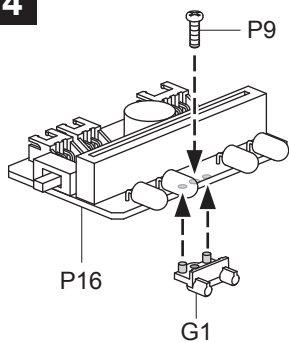


5

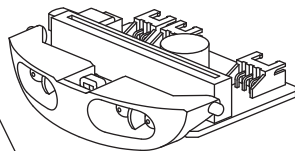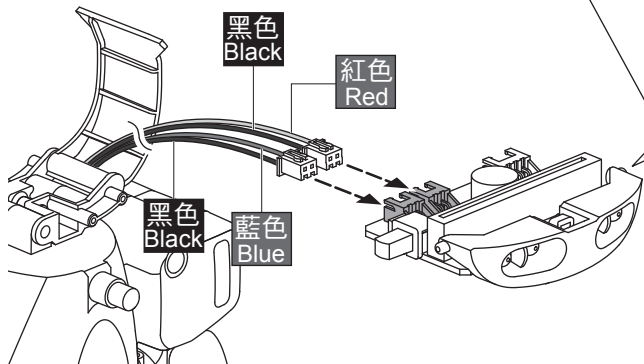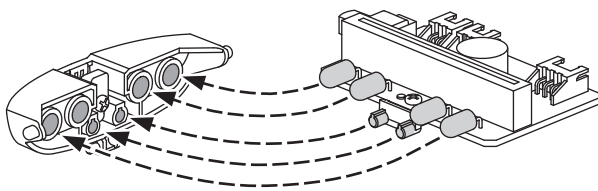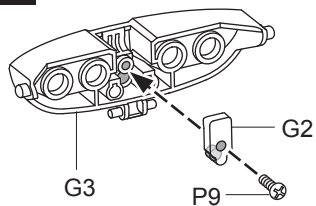


6


! 請如圖示將線繞轉三圈
The wire must make three turns as illustration.

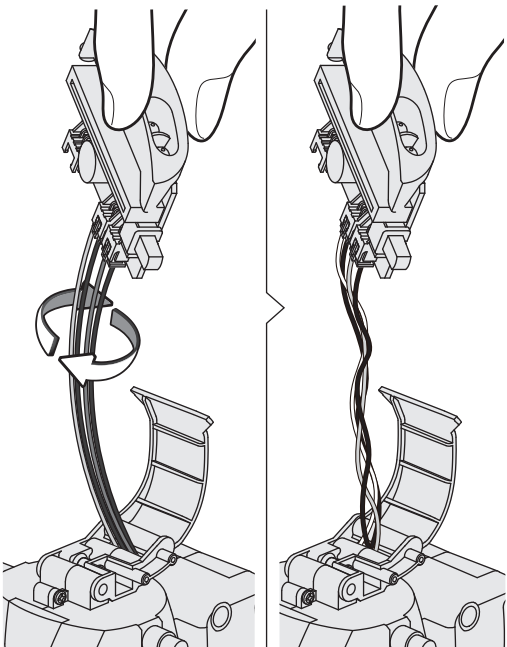


7

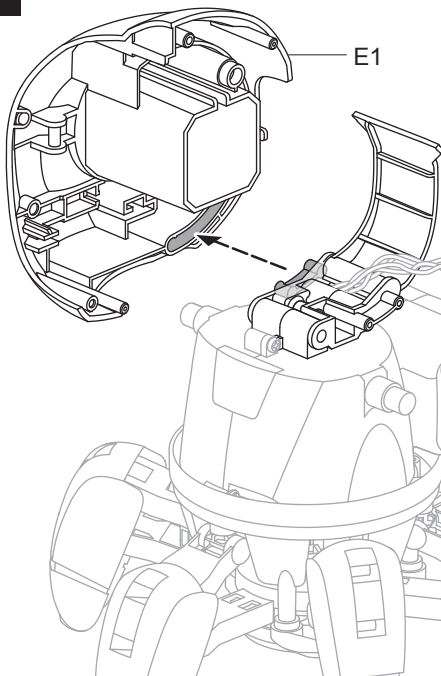


8

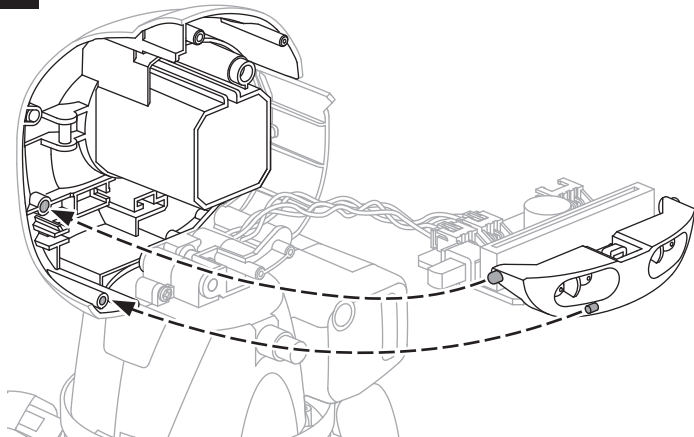


9

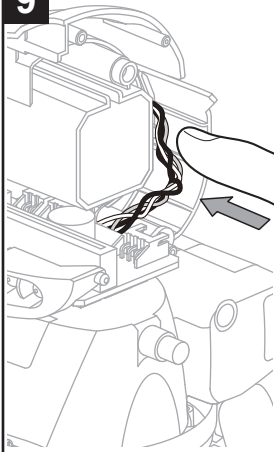


10

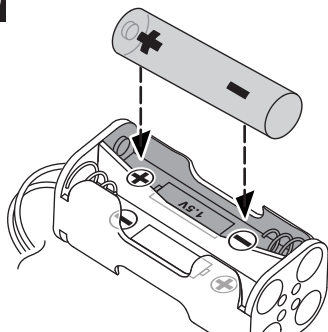





- 電池移除或更換應由成人或在成人監督下進行
Removals and replacement of batteries should be carried out by adults or under adult supervision.
- 請避免電池或電池連接器端子短路
Avoid short circuiting the contacts in the battery compartment or the battery terminals.
- 請勿混用新舊電池及不同廠牌、種類的電池，以免造成危險或電器損耗
Do not mix used batteries and new batteries or batteries of different types.
- 請勿混合鹼性、碳鋅電池或充電電池使用
Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- 請勿試圖對非充電電池充電
Do not attempt to recharge non-rechargeable batteries.
- 電池長期不用或電力耗盡時請取出以避免電池漏液
Remove exhausted batteries from the product to avoid leakage.

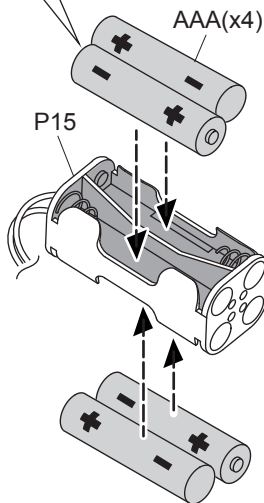


11

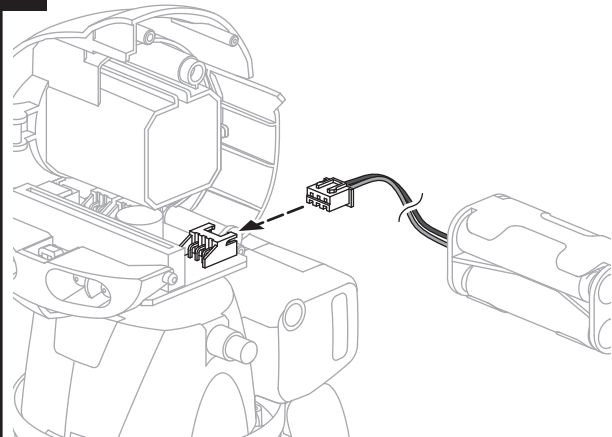



12

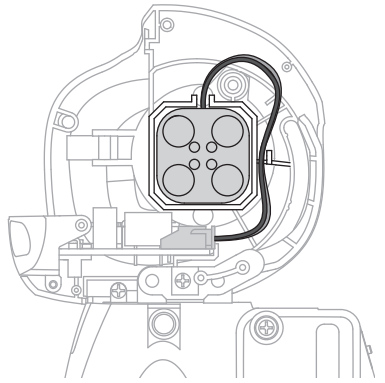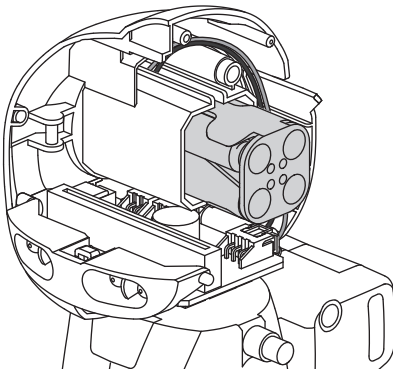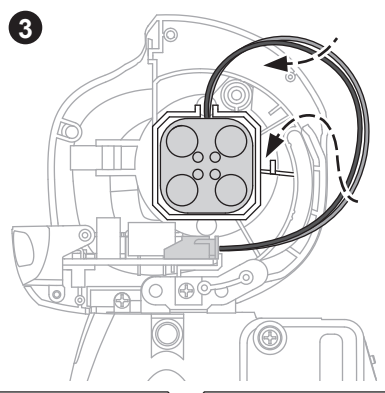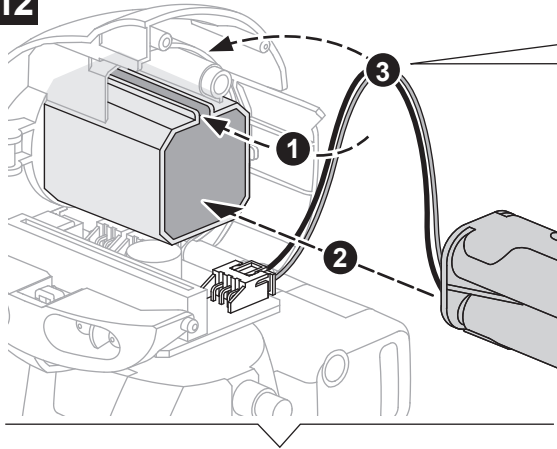


13

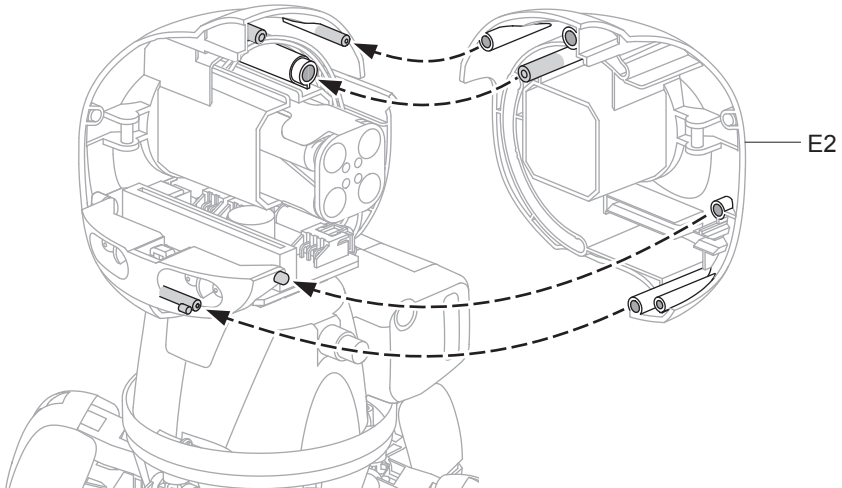



14

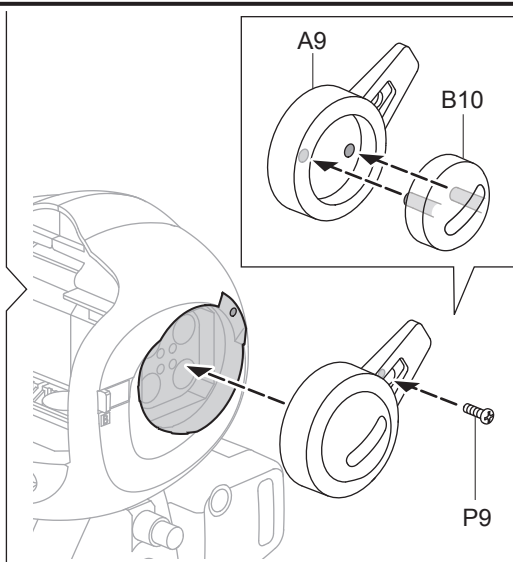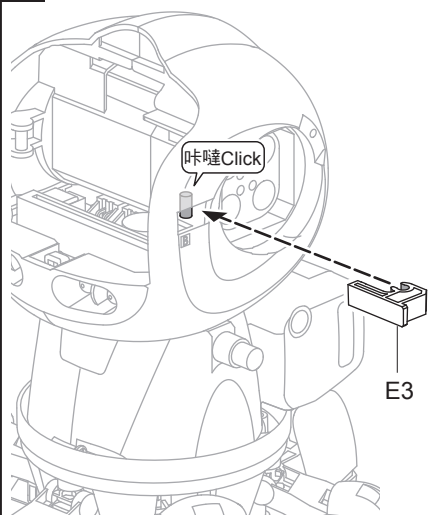


15

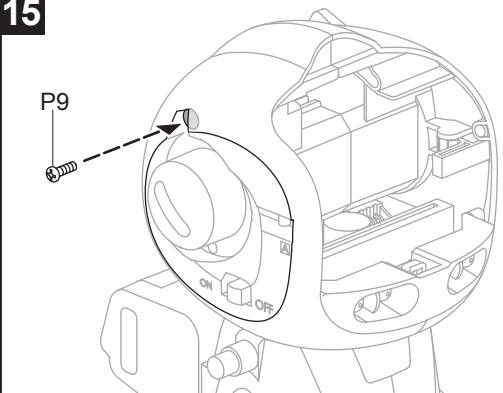


16

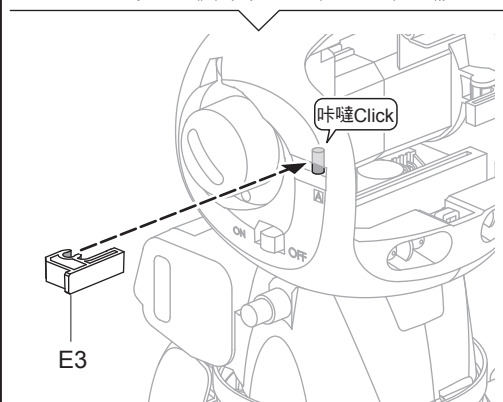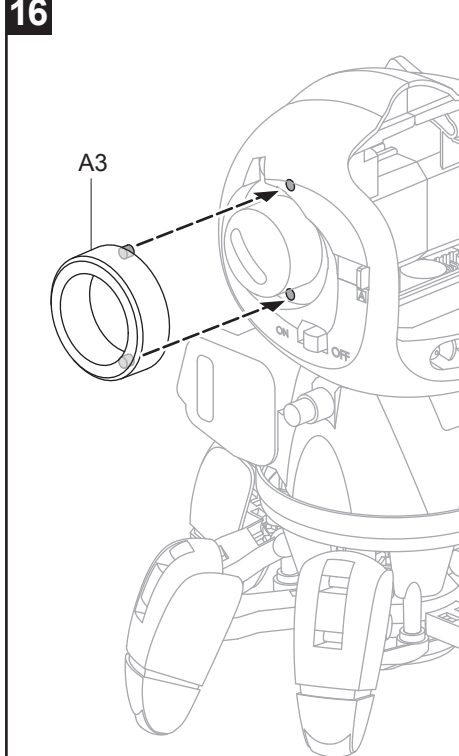


17

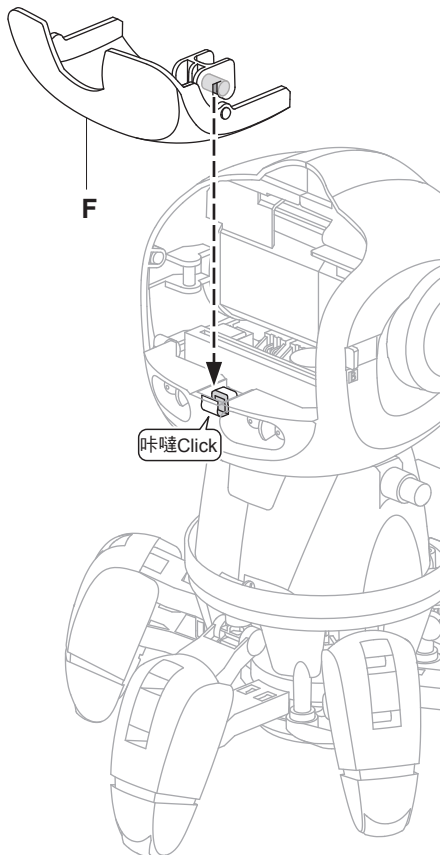



✓ 正確
Correct

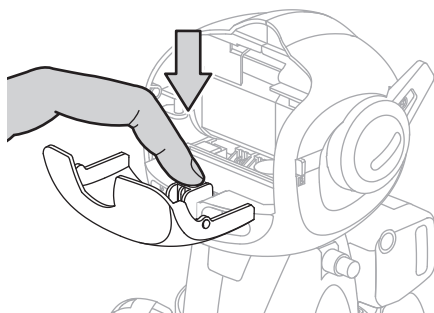



✗ 錯誤
Incorrect

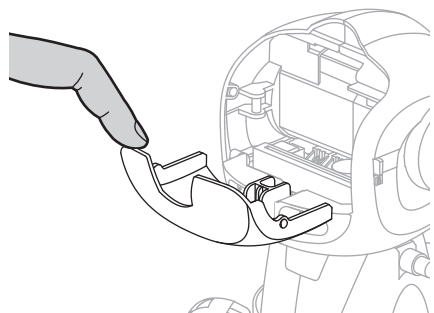


18

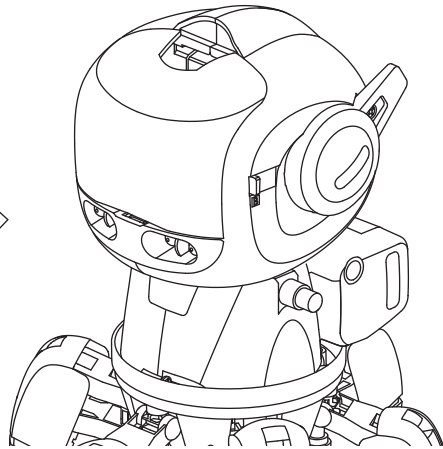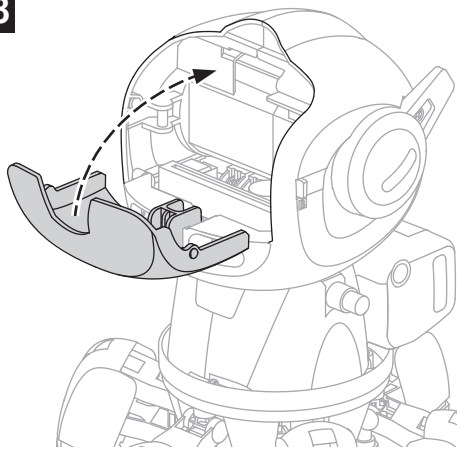



手臂 右 Arm R

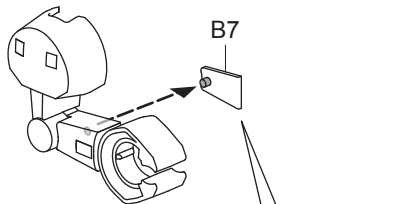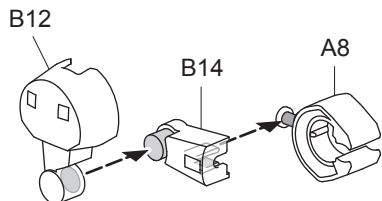


! 組裝前請將毛邊
剪切乾淨
Cut off the burrs
before assembly.

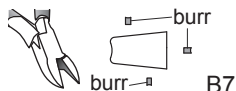



手臂 右 Arm R

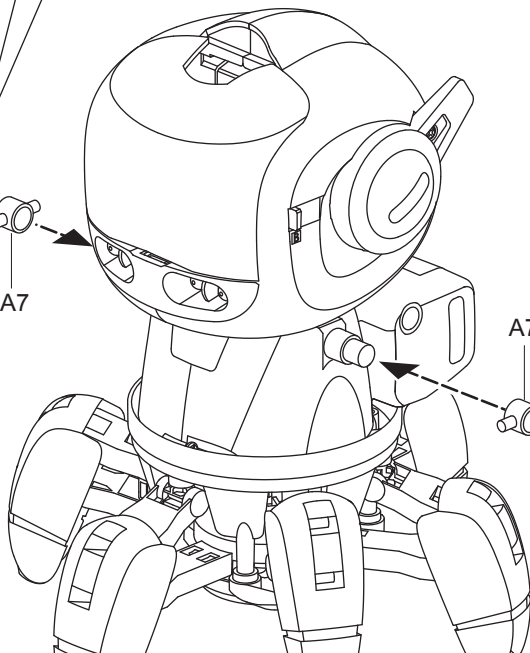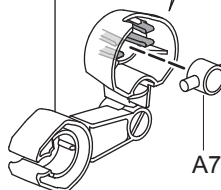

手臂 左 Arm L

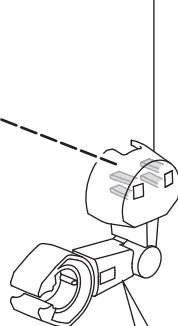


手臂 左 Arm L


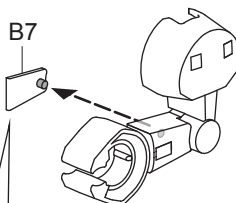
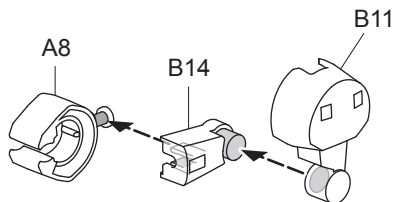


! 組裝前請將毛邊
剪切乾淨
Cut off the burrs
before assembly.



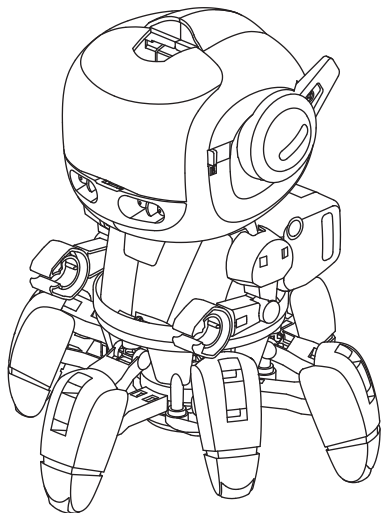

電池更換 How To Replace Batteries

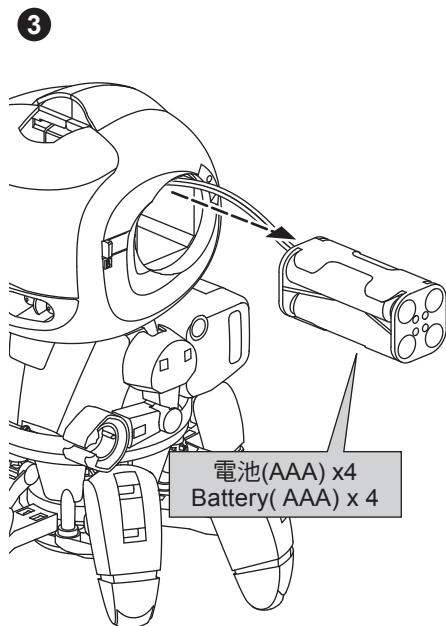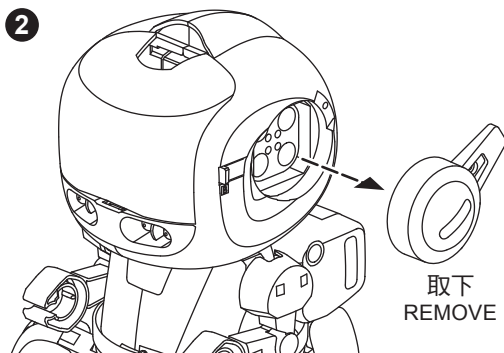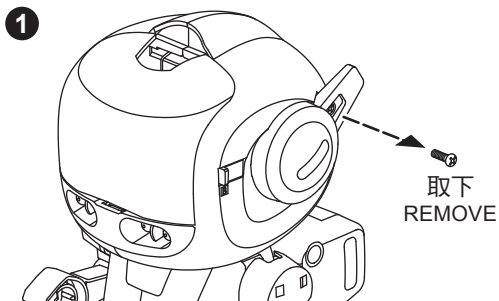


所需設備 Devices You May Need



電腦
Computer



智慧型手機
Smartphone

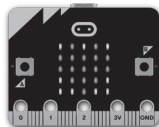

Micro:bit



Micro USB傳輸線
Micro USB Cable



請掃描左側QR Code依據您的設備
下載Micro: bit 程式安裝指南

We offer manuals online to guide you the way of
downloading pre-code funway programs to your
micro:bit. Please access the link by:

- (1) QR code
- (2) Searching "GE-894" on YouTube and click the
link listed below the video.

Windows OS


mac OS

Android™


iOS

Micro: bit 安裝方式 How To Install Micro: bit


1

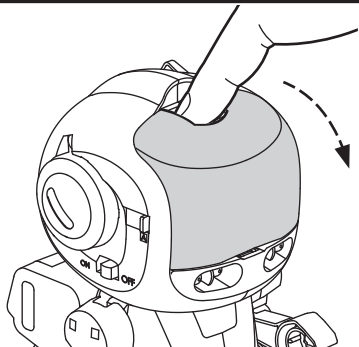


3

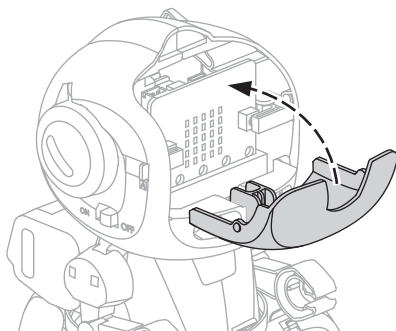

2

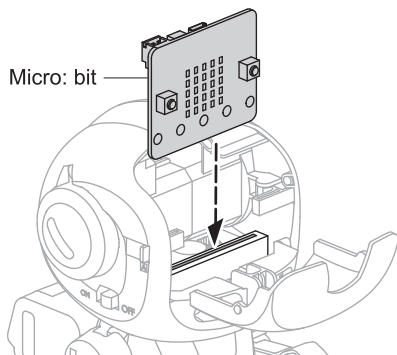

4

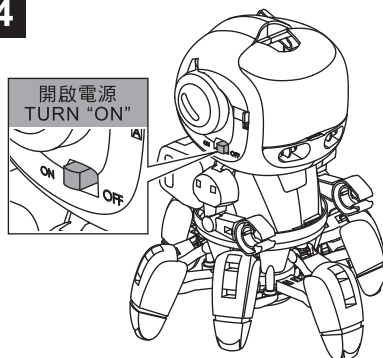

遊戲模式線上下載 Funways To Download On Line

我們提供12種遊玩模式，
掃描右側QR Code 即可下載應用
**We provide more than
12 Funways on line.**



youtube









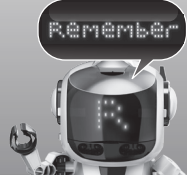



https://www.youtube.com/playlist?list=PLr3x9BVmg5CGRL_eCG9q81P8gBPuQ_T-3

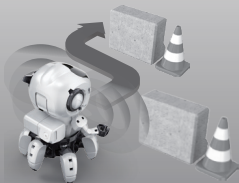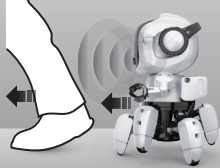

遊戲程序
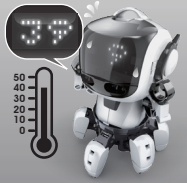
<https://drive.google.com/drive/folders/1A4gzbFdjWIEbmfpG-Fp5mluIA5tdzqLr2>

! 每次只能記憶一種遊戲模式，每當下載新的模式到Micro:bit，前一個紀錄在Micro:bit的遊戲模式將被覆蓋掉
Whenever you download a new funway program onto micro:bit, it will overwrite the existing funway program. Only the most recently downloaded program can be kept on micro:bit.

1. 探險家寶比 Explorer 	2. 小跟班寶比 Follow Me 	3. 唱跳寶比 Singing & Dancing 
4. 覓光寶比 Light Tracker 	5. 寶比溫度計 Thermometer 	6. 計算神腦寶比 Calculator 
7. 猜拳看誰贏 Rock-paper-scissors 	8. 擲骰子比大小 Dice 	9. 公告板寶比 Notice Board 
10. 羅盤寶比 Compass 	11. 寶比打保齡 Bowling 	12. APP遙控模式 APP Remote Control (此模式適用於Android™ 5.0/iOS11 以上系統) (Compatible with Android™ 5.0/iOS11 or above) 

Example funway programs are editable on micor:bit website. Simply drag any of the downloaded programs from your computer to micro:bit website MakeCode Editor. You could extend and further edit them with your creativity !
更多遊玩模式可再利用Micro:bit編碼。發揮你的創意小宇宙，創造寶比的無限可能，只要將電腦中編輯完成後的程式下載到Micro:bit網站“MakeCode Editor”，就能讓寶比執行更多任務！



Download on the
App Store



GET IT ON
Google Play

藍芽遙控模式APP免費下載：請至APP STORE 或 GOOGLE PLAY 搜尋「Probbie II」即可免費下載寶比2 藍芽遙控模式
REMOTE CONTROL APP FREE TO DOWNLOAD
Searching “Pobbie II” on Google Play and Apple Store, users could download the remote control applications right there.



注意事項 Warning




正確
Correct




拿取時，請小心握住寶比的頭部位置。抓取錯誤的位置(如右圖)將可能導致故障
Be gentle when holding Tobbie by its head. Any improper motions
(as shown as below) might cause malfunction.



錯誤
Incorrect

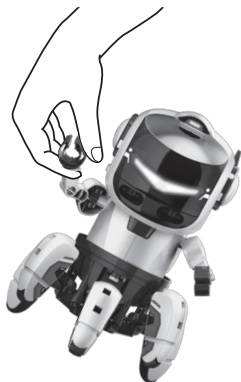

錯誤
Incorrect

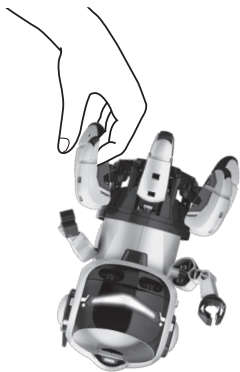


錯誤
Incorrect



簡易故障排除 Trouble Shooting



1. 請確保電池安裝位置是否正確
Ensure batteries are placed in correct polarity (refer to page 21, step **10**).
2. 請確認線路安裝位置正確(見第20頁，步驟5，線路圖如下)
Ensure all wirings are correct (refer to page 20, step **5** wire configuration as below)

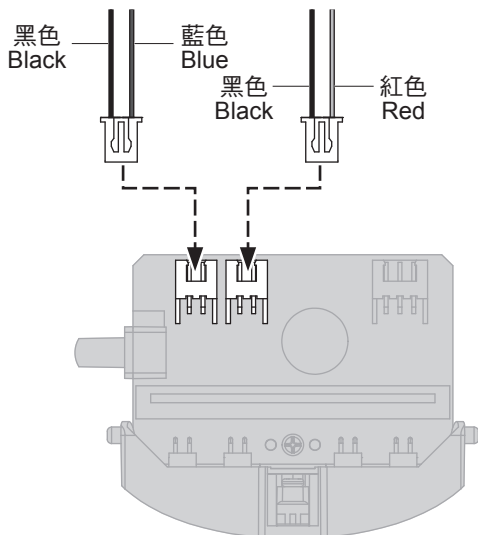



3. 當寶比處在紅外線感應的模式時(如探險家寶比、小跟班寶比)，請避免在陽光下或鹵素燈下與寶比遊戲，以免寶比在移動時方向錯誤。
When infrared sensors are used (ex: explorer or follow me funways), do not play the Probbie II under direct sunlight or halogen lamps. It may cause the robot to go wrong direction.
4. 當寶比前進時，齒輪機箱發出 ” 答答 ” 聲響，請依如下方式檢查
When Probbie II is moving forward but with abnormal sound “ Da Da Da”, please follow steps below.
 - (1) 請確認A19皆安裝正確(見第15頁，步驟23)
Refer to page 15, step **23** , check and ensure **A19** is installed correctly.
 - (2) 請確認A15是否已取下(見第6頁，步驟8)
Refer to page 6, step **8** , check and ensure **A15** is removed.
 - (3) 請確認所有螺絲皆如指示位置鎖緊(見第6頁，步驟 7)
Refer to page 6, step **7** , check and ensure all screws are fastened tightly.
5. 若寶比走路不穩或跌倒，請確認 A1(見第18頁，步驟16)、A2(見第22頁，步驟22)是否混淆且是否組裝正確。
If Probbie II is walking unstably or tumbling, check if **A1**(refer to page 12, step **19**) & **A2**(refer to page 16, step **25**) are not mixed. Ensure both parts are installed correctly.

打扮你的寶比 Decoration


範例1 Example 1

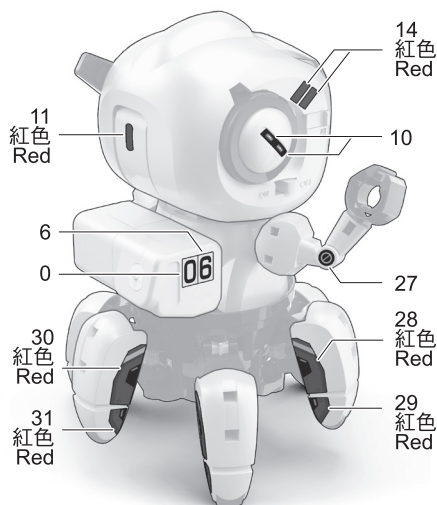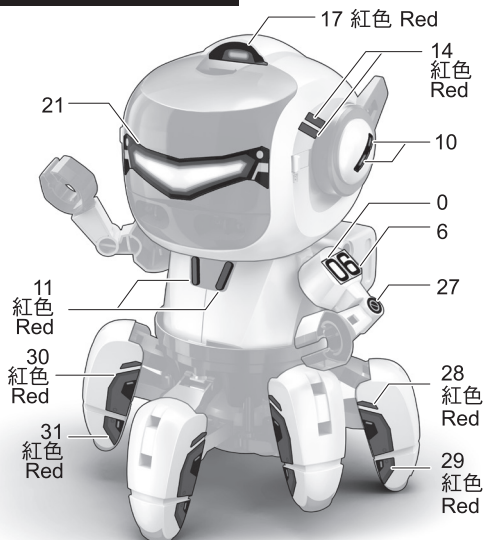


範例1 Example 1

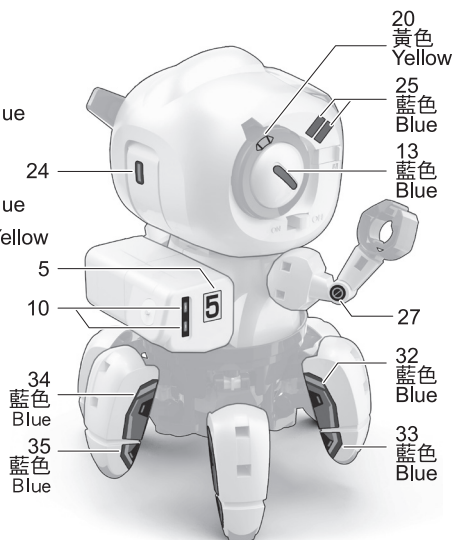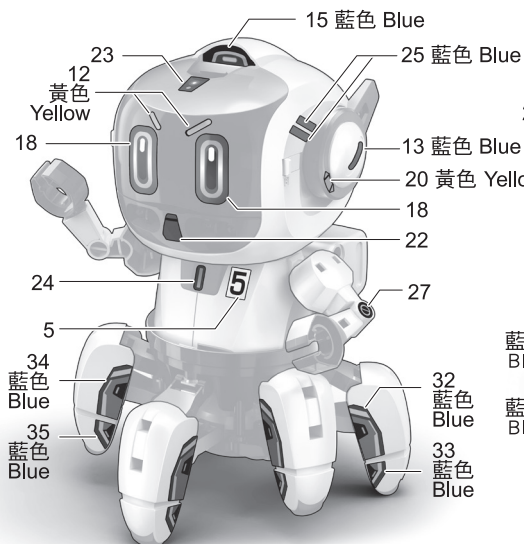

範例3 Example 3

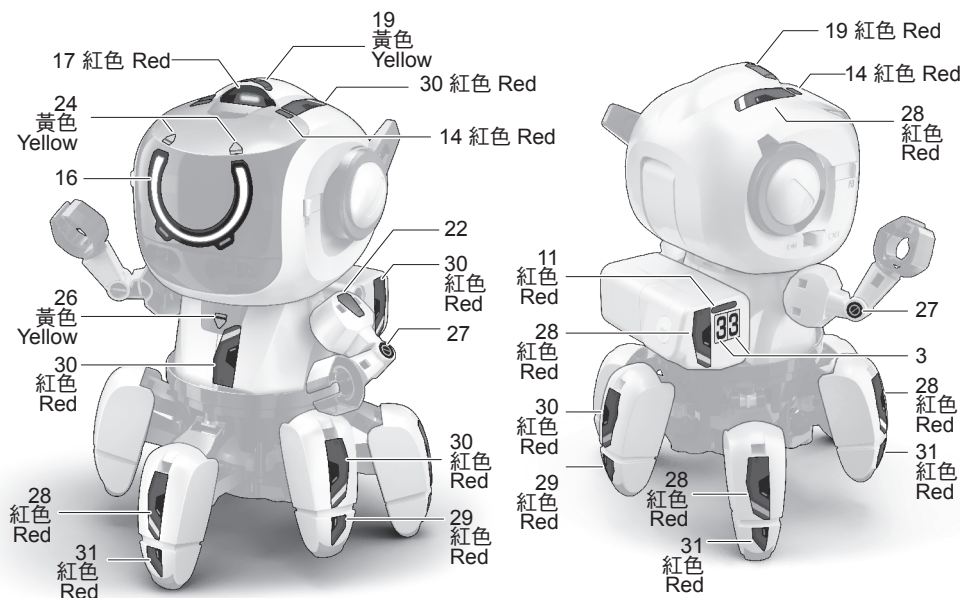

範例4 Example 4

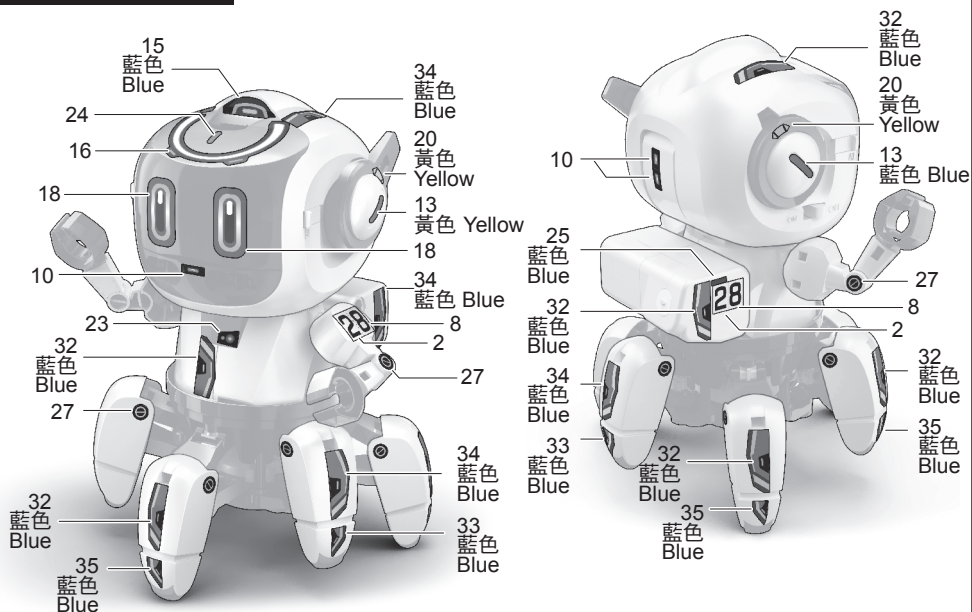

若需要購買零件，請參照以下零件表

When ordering parts, please include the following

1. 請留下訂購人姓名、寄送地址、連絡電話、E-mail
Name, address (no P.O. Box), telephone number, and email address.
2. 請註明產品名稱、產品型號、零件名稱、零件型號以及數量
Model name and model number. Part number, part name, and quantity.
3. 如有任何需求，請洽您的經銷商
Please contact local distributor if any query.

GE-894 二代寶比機器人-Micor bit 零件表 Parts List

零件型號Part Number	零件名稱Part Name	數量 Qty
5GE-89400P1	小齒輪(白色) Pinion Gear(White)	
5GE-89400P2	齒輪(灰色) Gear 32/10T(Gray)	
5GE-89400P3	齒輪(藍色) Gear 32T(Blue)	
5GE-89400P4	齒輪(綠色) Gear 36/14T(Green)	
5GE-89400P5	齒輪(白色) Gear 36T/14T(White)	
5GE-89400P6	齒輪(橘色) Gear 36T(Orange)	
5GE-89400P7	齒輪(粉紅色) Gear 40/10T(Pink)	
5GE-89400P8	出力齒輪(橘色) Gear 10T(Orange)	
5GE-89400P9	自攻螺絲 Tapping Screw	
5GE-89400P10	華司螺絲 Tapping Screw	
5GE-89400P11	圓軸(短) Shaft (Short)	
5GE-89400P12	圓軸(長) Shaft (Long)	
5GE-89400P13	馬達端子組(藍黑) Motor With Connector (Blue/Black)	
5GE-89400P14	馬達端子組(紅黑) Motor With Connector (Red/Black)	
5GE-89400P15	電池座 Battery Holder Connector	
5GE-89400P16	電路板 PC Board	
5GE-89400P17	貼紙 Sticker	
5GE-89400P18	墊片 Washer	



警告及注意事項

內含小零件，請勿讓三歲以下孩童使用，避免誤食危險。不可對着人臉和眼部衝撞，避免造成意外傷害。

Probbie II

micro:bit



- 電池移除或更換應由成人或在成人監督下進行。
Removal and replacement of batteries should be carried out by adult or under adult supervision.
- 請避免電池或電池連接器端子短路。
Avoid short circuiting the contacts in the battery compartment or the battery terminals.
- 電池長期不用或電力耗盡時請取出以避免電池漏液。
Remove exhausted batteries from the product to avoid leakage.
- 請勿混用新舊電池及不同廠牌、種類的電池，以免造成危險或電器損耗。
Do not mix used batteries and new batteries or batteries of different types.
- 請勿混合鹼性、碳鋅電池或充電電池使用。
Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- 電池放入前請先確認正確正負極性方向。
Batteries are to be inserted with the correct polarity.
- 請勿試圖對非充電電池進行充電。
Do not attempt to recharge non-rechargeable batteries.
- 充電電池應在成人監督下進行充電。
Rechargeable batteries are only to be charged under adult supervision.
- 充電前請將充電電池自玩具中取出。
Rechargeable batteries are to be removed from the toy before being charged.

Pro'sKit®

寶工實業股份有限公司
PROKIT'S INDUSTRIES CO., LTD

新北市新店區民權路130巷7號5樓
5F, No. 7, Lane 130, Ming-Chung Rd., Hsin-Tien Dist,
New Taipei City, Taiwan, R.O.C Post code: 231023

服務專線Tel: +886 2 2218 3233 #327

傳真Fax: +886 2 2218 2722

E-mail: science@mail.prokits.com.tw

<https://science.prokits.com.tw>

<https://shop.prokits.com.tw>

