

Adjustable Torque Wrench

Quality accords to DIN ISO 6789 & ASME B107.300-2010


Tolerance of torque $\pm 4\%$ (CW)

CW/CCW Direction

1 Nm = 0.738 ft.lb. = 0.102 kgf.m

1 ft.lb. = 1.356 Nm = 0.138 kgf.m

1 in.lb. = 0.113 Nm = 1.152 kgf.cm

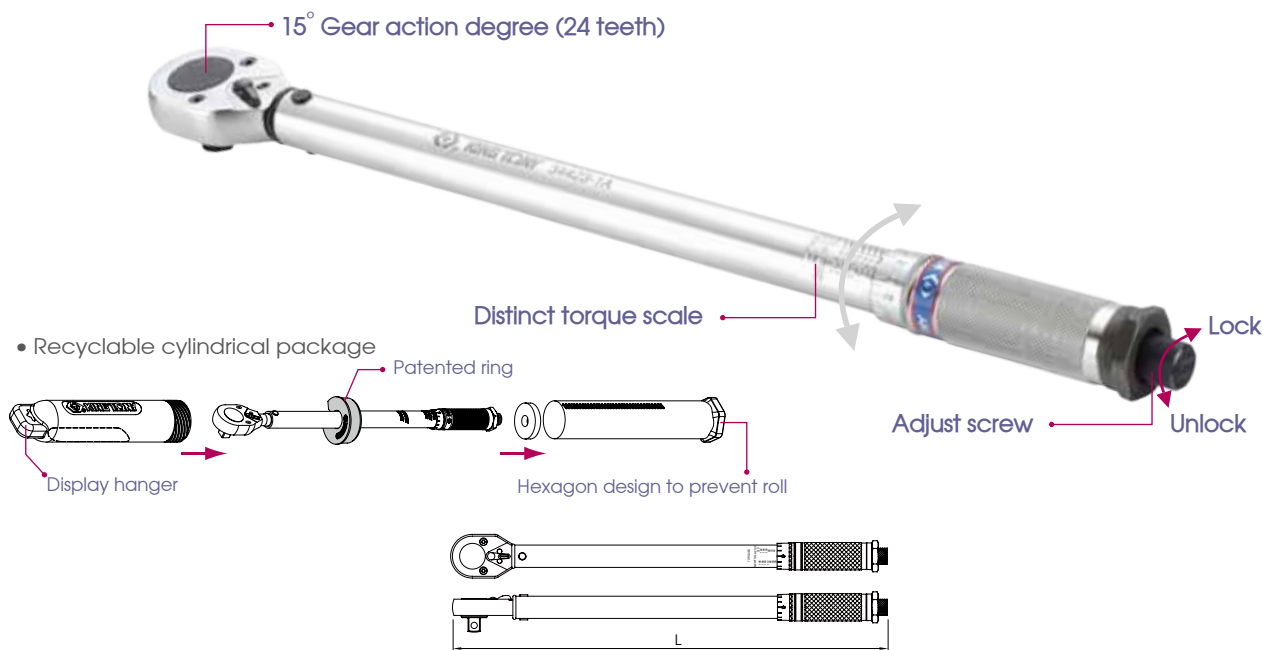

Dual Scale - Newton Meter & Kilogram-force Centimeter / Kilogram-force meter (Nm & kgf.cm / kgf.m)

KT NO.	Square drive	Torque range Nm	Incr.	Torque range kgf.cm / kgf.m	Incr.	Overall length mm		
34223-1A	1/4"	5~25 Nm	0.1 Nm	51~255 kgf.cm	1 kgf.cm	280	595	1 / 12
34323-1A	3/8"	5~25 Nm	0.1 Nm	51~255 kgf.cm	1 kgf.cm	280	595	1 / 12
34323-2A	3/8"	20~110 Nm	1 Nm	2.04~11.22 kgf.m	0.1 kgf.m	370	820	1 / 12
34423-1A	1/2"	42~210 Nm	1 Nm	4.3~21.4 kgf.m	0.41 kgf.m	450	1340	1 / 12
34423-2A	1/2"	50~350 Nm	3 Nm	5.1~35.7 kgf.m	0.27 kgf.m	570	2400	1 / 12

Dual Scale - English & Kilogram-force Centimeter / Kilogram-force meter (in.lb. / ft.lb. & kgf.cm / kgf.m)

KT NO.	Square drive	Torque range in. lb. / ft. lb.	Incr.	Torque range kgf.cm / kgf.m	Incr.	Overall length mm		
34223-1B	1/4"	25~250 in. lb.	1.5 in. lb.	29~288 kgf.cm	1.13 kgf.cm	280	595	1 / 12
34323-1B	3/8"	25~250 in. lb.	1.5 in. lb.	29~288 kgf.cm	1.13 kgf.cm	280	595	1 / 12
34323-2B	3/8"	5~80 ft. lb.	0.5 ft. lb.	0.7~11.10 kgf.m	0.07 kgf.m	370	820	1 / 12
34423-1B	1/2"	10~150 ft. lb.	1 ft. lb.	1.4~20.7 kgf.m	0.14 kgf.m	450	1340	1 / 12
34423-2B	1/2"	30~250 ft. lb.	2 ft. lb.	4.2~34.6 kgf.m	0.27 kgf.m	570	2400	1 / 12

Dual Scale - English & Kilogram-force Centimeter / Kilogram-force meter (in.lb. / ft.lb. & kgf.cm / kgf.m)

KT NO.	Square drive	Torque range in. lb. / ft. lb.	Incr.	Torque range kgf.cm / kgf.m	Incr.	Overall length mm		
34223-1C	1/4"	25~250 in. lb.	1 in. lb.	2.8~28.2 Nm	0.17 Nm	280	595	1 / 12
34323-1C	3/8"	25~250 in. lb.	1 in. lb.	2.8~28.2 Nm	0.17 Nm	280	595	1 / 12
34323-2C	3/8"	5~80 ft. lb.	0.5 ft. lb.	6.8~108.5 Nm	0.68 Nm	370	820	1 / 12
34423-1C	1/2"	10~150 ft. lb.	1 ft. lb.	13.6~203.4 Nm	1.35 Nm	450	1658	1 / 12
34423-2C	1/2"	30~250 ft. lb.	2 ft. lb.	40.7~339 Nm	2.71 Nm	570	2400	1 / 12



1. Do not use this torque wrench over its scale range.
2. Do not use this torque wrench as a normal hand tool.
3. Torque wrench need to be calibrated periodically for accuracy.